



BMW Motorrad



The Ultimate  
Riding Machine

Rider's Manual (US Model)  
**R 1200 GS Adventure**

## Motorcycle/Retailer Data

### Motorcycle Data

---

Model

---

Vehicle identification number

---

Color number

---

Initial registration

---

License plate

### Retailer Data

---

Contact in Service

---

Ms./Mr.

---

Phone number

---

Retailer's address/phone number (company stamp)

## **Welcome to BMW**

Congratulations on choosing a motorcycle from BMW Motorrad and welcome to the community of BMW motorcycle owners and riders. Familiarize yourself with your new motorcycle so that you can ride it safely and confidently in all highway traffic situations.

### **About this Rider's Manual**

Please read this Rider's Manual carefully before starting to use your new BMW. It contains important information on how to operate the controls and how to get the most benefit from your BMW's advanced technical features.

In addition, it contains information on maintenance and care to help you maintain your vehicle's reliability and safety, as well as its value.

## **Suggestions and complaints**

If you have any questions concerning your motorcycle, your authorized BMW Motorrad retailer is always happy to provide advice and assistance.

We wish you many miles of safe and enjoyable riding on your BMW

BMW Motorrad.

01 41 8 563 337



# Table of Contents

<b>1 General instructions ....</b>	<b>5</b>	Warning lights .....	24	Cruise control .....	68
Overview .....	6	Outside temperature .....	38	Spring preload .....	70
Abbreviations and symbols .....	6	Fuel reserve .....	39	Damping .....	71
Equipment .....	7	Oil level indicator .....	39	Dynamic ESA, Electronic Suspension Adjustment .....	72
Technical data .....	7	Service display .....	40	Clutch .....	74
Notice concerning current sta- tus .....	7	Tire inflation pressure .....	40	Brakes .....	75
<b>2 Overviews .....</b>	<b>9</b>	Upshift recommendation ....	41	Shifting .....	76
General view, left side .....	11	<b>4 Operation.....</b>	<b>43</b>	Tyres.....	76
General view, right side .....	13	Ignition .....	44	Handlebars .....	77
Underneath seat .....	14	Ignition with Key- less Ride .....	46	Heated handlebar grips .....	77
Multifunction switch, left ....	15	Multifunction display .....	50	Mirrors .....	78
Multifunction switch, right .....	16	Alarm system (DWA) .....	57	Windshield .....	79
Instrument cluster .....	17	Emergency on/off switch (kill switch) .....	59	Rider and passenger seats .....	79
<b>3 Displays .....</b>	<b>19</b>	Headlight .....	59	Storage compartment .....	82
Warning and indicator lights .....	20	Lights .....	60	<b>5 Riding.....</b>	<b>83</b>
Multifunction display .....	22	Turn indicators .....	61	Safety information.....	84
Warning symbols in the display panel .....	23	Hazard warning flashers .....	62	Observe checklist .....	86
		BMW Motorrad Inte- gral ABS .....	62	Starting.....	87
		ASC Automatic Stability Control .....	63	Running in .....	89
		Riding mode .....	64	Shifting gears .....	90
				Brakes .....	91
				Parking your motorcycle ....	93

Off-road riding .....	93	Light sources .....	128	<b>10 Technical Data .....</b>	<b>159</b>
Refueling .....	94	Air filter .....	133	Troubleshooting chart .....	160
Fastening motorcycle for transport .....	98	Jump-starting .....	134	Threaded fasteners .....	161
<b>6 Technology in de- tail .....</b>	<b>101</b>	Battery .....	135	Engine .....	163
Riding mode .....	102	Fuses .....	139	Fuel .....	164
Gearshift assistant .....	103	<b>8 Accessories .....</b>	<b>141</b>	Engine oil .....	165
Brake system with BMW Motorrad Integral ABS .....	104	General instructions .....	142	Clutch .....	165
Engine management with BMW Motorrad ASC .....	108	Onboard power sockets .....	142	Transmission .....	166
Tyre Pressure Control TPC .....	109	Navigation system .....	143	Rear-wheel drive .....	167
<b>7 Maintenance .....</b>	<b>111</b>	Case .....	148	Suspension .....	167
General instructions .....	112	Topcase .....	150	Brakes .....	168
Tool kit .....	112	<b>9 Care .....</b>	<b>153</b>	Wheels and tyres .....	169
Engine oil .....	113	Care products .....	154	Electrical system .....	171
Brake system .....	114	Washing your motorcy- cle .....	154	Frame .....	172
Coolant .....	118	Cleaning sensitive motorcy- cle parts .....	155	Alarm system .....	173
Clutch .....	119	Paint care .....	156	Dimensions .....	173
Wheel rims and tyres .....	120	Store motorcycle .....	156	Weights .....	175
Wheels .....	120	Protective wax coating .....	156	Performance data .....	175
Front wheel stand .....	127	Return motorcycle to use .....	157	<b>11 Service .....</b>	<b>177</b>
				Reporting safety defects .....	178
				BMW Motorrad Service ...	179
				BMW Motorrad Mobility Services .....	179

Maintenance procedures .....	179
Maintenance schedule ....	183
Standard BMW Service ...	184
Confirmation of maintenance work.....	185
Confirmation of service....	190
<b>12 Appendix.....</b>	<b>193</b>
Certificate for Electronic Immobilizer .....	194
Certificate for Keyless Ride .....	196
Certificate for Tyre Pressure Control.....	198
<b>13 Index .....</b>	<b>199</b>

## **General instructions**

Overview .....	6
Abbreviations and symbols .....	6
Equipment .....	7
Technical data .....	7
Notice concerning current status ....	7

## Overview

This Rider's Manual has been designed to provide quick and efficient orientation. The quickest way for you to find information on specific topics is to consult the comprehensive index at the back of the manual. If you would like to start with a quick overview of your motorcycle, this information has been provided in chapter 2. All maintenance and repair work carried out on your motorcycle will be documented in chapter 11. Documentation confirming performance of scheduled maintenance is a precondition for generous handling of out-of-warranty claims and goodwill warranty treatment.

When the time comes to sell your BMW, remember to hand over this Rider's Manual; it is an important part of the motorcycle.

## Abbreviations and symbols



**CAUTION** Hazard with low risk. Failure to avoid this hazard can result in minor or moderate injury.



**WARNING** Hazard with moderate risk. Failure to avoid this hazard can result in death or serious injury.



**DANGER** Hazard with high risk. Failure to avoid this hazard results in death or serious injury.



**ATTENTION** Special instructions and precautionary measures. Failure to comply can lead to damage to the motorcycle and/or accessories and thus to the rejection of warranty claims.



**NOTICE** Special information on operating and inspecting your motorcycle as well

as maintenance and adjustment procedures.



Indicates the end of an item of information.



Instruction.



Result of an activity.



Reference to a page with more detailed information.



Indicates the end of accessory or equipment-dependent information.



Tightening torque.



Technical data.

- OE Optional extra. BMW Motorrad optional extras are already completely installed during motorcycle production.
- OA Optional accessory. BMW Motorrad optional accessories can be purchased and installed at your authorized BMW Motorrad retailer.
- EWS Electronic immobilizer.
- DWA Anti-theft alarm.
- ABS Anti-Lock Brake System.
- ASC Automatic Stability Control.
- ESA Electronic Suspension Adjustment.

TPC Tire Pressure Control (TPC).

## Equipment

When you ordered your BMW motorcycle, you chose various items of custom equipment. This Rider's Manual describes optional equipment (OE) offered by BMW and selected optional accessories (OA). This explains why the manual may also contain descriptions of equipment which you have not ordered. Please note, too, that your motorcycle might not be exactly as illustrated in this manual on account of country-specific differences.

If your motorcycle comes with equipment not described here, you can find the descriptions in a separate manual.

## Technical data

All dimensions, weights and outputs in the Rider's Manual relate to the German DIN standards and comply with their tolerance specifications. Versions for individual countries may differ.

## Notice concerning current status

The outstanding levels of safety and quality furnished by every BMW motorcycle are the result of ongoing advanced development focusing on continuous improvement in design and engineering as well as equipment and accessories. For this reason, some aspects of your motorcycle may vary from the descriptions in this Rider's Manual. In addition, BMW Motorrad cannot guarantee the total absence of errors. For this reason BMW is unable to recognize any claims stemming

from the information, illustrations and descriptions in this manual.

## Overviews

General view, left side.....	11
General view, right side .....	13
Underneath seat .....	14
Multifunction switch, left .....	15
Multifunction switch, right.....	16
Instrument cluster .....	17



## General view, left side

- 1 Fuel filler opening (▣▣▣▶ 95)
- 2 Seat lock (▣▣▣▶ 79)
- 3 Adjuster for rear damping (at the bottom on the spring strut) (▣▣▣▶ 71)





## General view, right side

- 1 Adjuster for spring preload, rear (➡ 70)
- 2 Air cleaner (under center fairing panel) (➡ 133)
- 3 Brake-fluid reservoir, front (➡ 116)
- 4 Height adjuster for windshield (➡ 79)
- 5 Onboard power socket (➡ 142)
- 6 Vehicle Identification Number (at fork bearing)  
Data plate (at fork bearing)
- 7 Coolant level indicator (➡ 118)  
Coolant tank (➡ 119)
- 8 Oil fill location (➡ 114)
- 9 Engine oil level indicator (➡ 113)
- 10 Battery (behind side panel) (➡ 135)  
Battery positive terminal point (behind side fairing panel) (➡ 134)
- 11 Brake-fluid reservoir, rear (➡ 117)

## Underneath seat

- 1 Standard tool kit (►► 112)
- 2 Rider's Manual (US Model)
- 3 Tire inflation pressure table
- 4 Load capacity table
- 5 Adjuster for the rider's seat height (►► 80)
- 6 Fuses (►► 139)

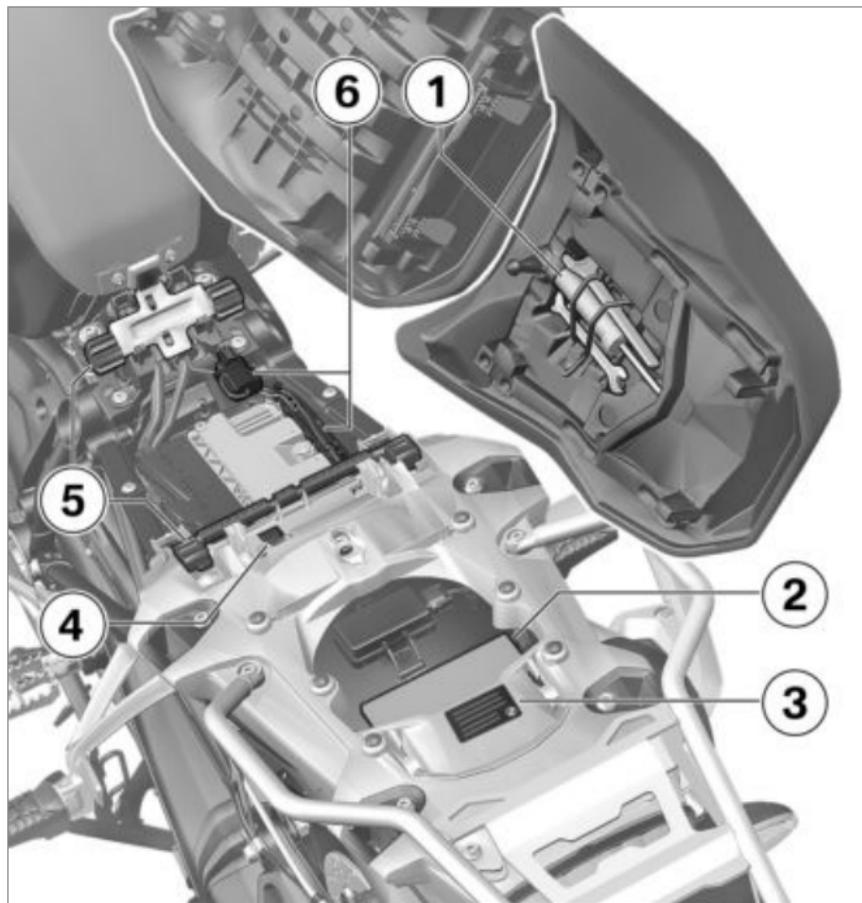

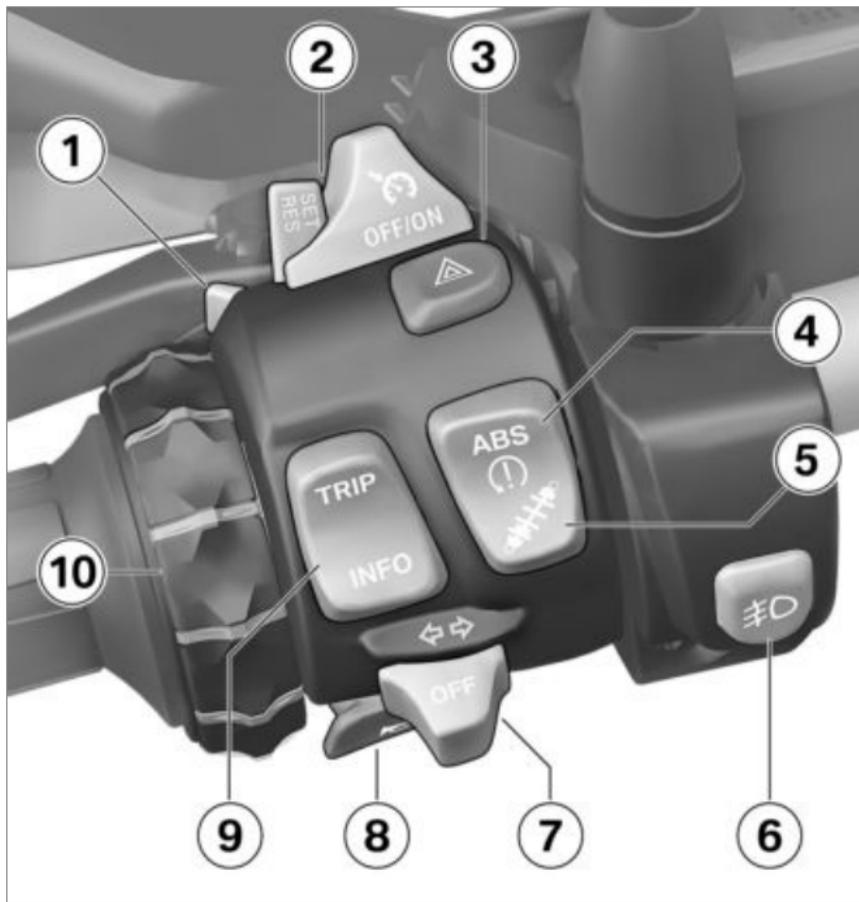


## Multifunction switch, left

- 1 High-beam headlight and headlight flasher (➡ 60)
- 2 – with cruise control<sup>OE</sup>  
Cruise control (➡ 68)
- 3 Hazard warning flashers (➡ 62)
- 4 ABS (➡ 62)  
ASC (➡ 63)
- 5 – with Dynamic ESA<sup>OE</sup>  
ESA (➡ 72)
- 6 – with additional LED headlight<sup>OA</sup>  
Additional LED headlight (➡ 61)
- 7 Turn indicator (➡ 61)
- 8 Horn
- 9 Multifunction display (➡ 50)
- 10 – with preparation for navigation system<sup>OE</sup>  
Navigation system (➡ 145)

## Multifunction switch, right

- 1 – with heated handlebar grips<sup>OE</sup>  
Heated handlebar grips  
([►► 77](#))
- 2 Riding mode ([►► 64](#))
- 3 Emergency on/off switch  
(kill switch) ([►► 59](#))
- 4 Starting the engine  
([►► 87](#))



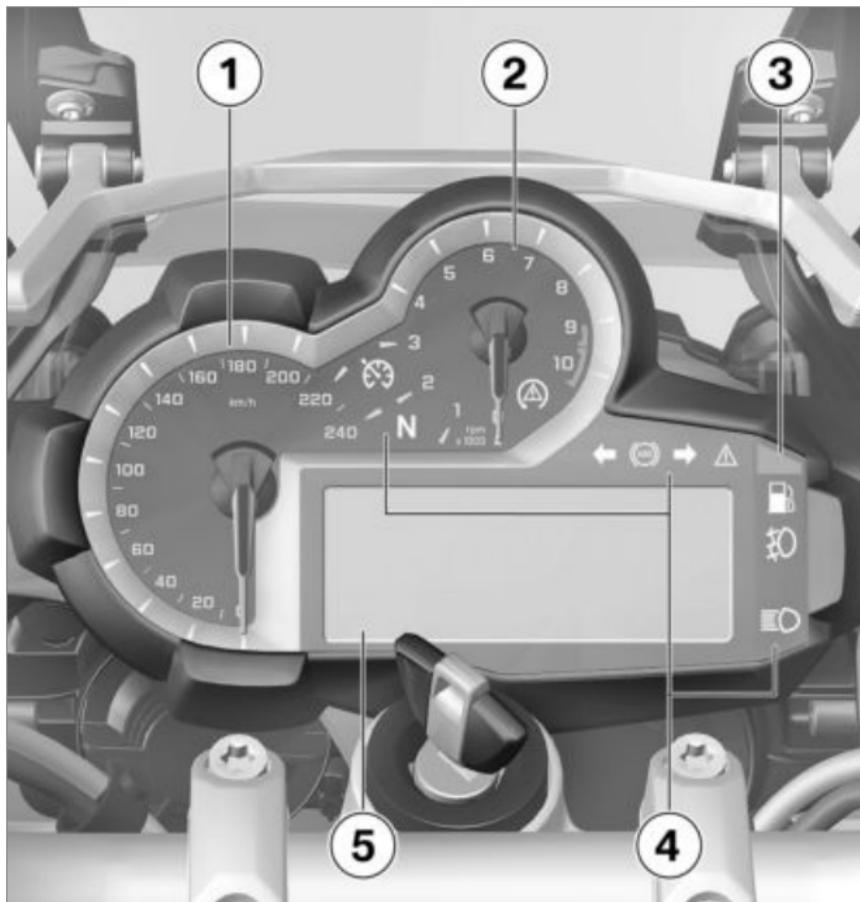

## Instrument cluster

- 1 Speedometer
- 2 Tachometer
- 3 Ambient light sensor (for brightness adjustment of instrument lighting)
  - with anti-theft alarm system (DWA)<sup>OE</sup>
  - Anti-theft alarm indicator light
  - with Keyless Ride<sup>OE</sup>
  - Indicator light for radio-operated key
- 4 Warning and indicator lights (➡ 20)
- 5 Multifunction display (➡ 22)




## Displays

Warning and indicator lights.....	20
Multifunction display .....	22
Warning symbols in the display panel .....	23
Warning lights .....	24
Outside temperature.....	38
Fuel reserve .....	39
Oil level indicator.....	39
Service display.....	40
Tire inflation pressure .....	40
Upshift recommendation.....	41

## Warning and indicator lights

- 1 – with cruise control<sup>OE</sup>  
Cruise control (►► 68)
- 2 Neutral position (idling)
- 3 ASC (►► 63)
- 4 Turn indicator, left
- 5 ABS (►► 62)
- 6 Turn indicator, right
- 7 General warning light (in conjunction with warning symbols on display) (►► 24)
- 8 DWA
- 9 High-beam headlight (►► 60)
- 10 – with additional LED headlight<sup>OA</sup>  
Auxiliary headlight (►► 61)
- 11 Fuel reserve (►► 39)

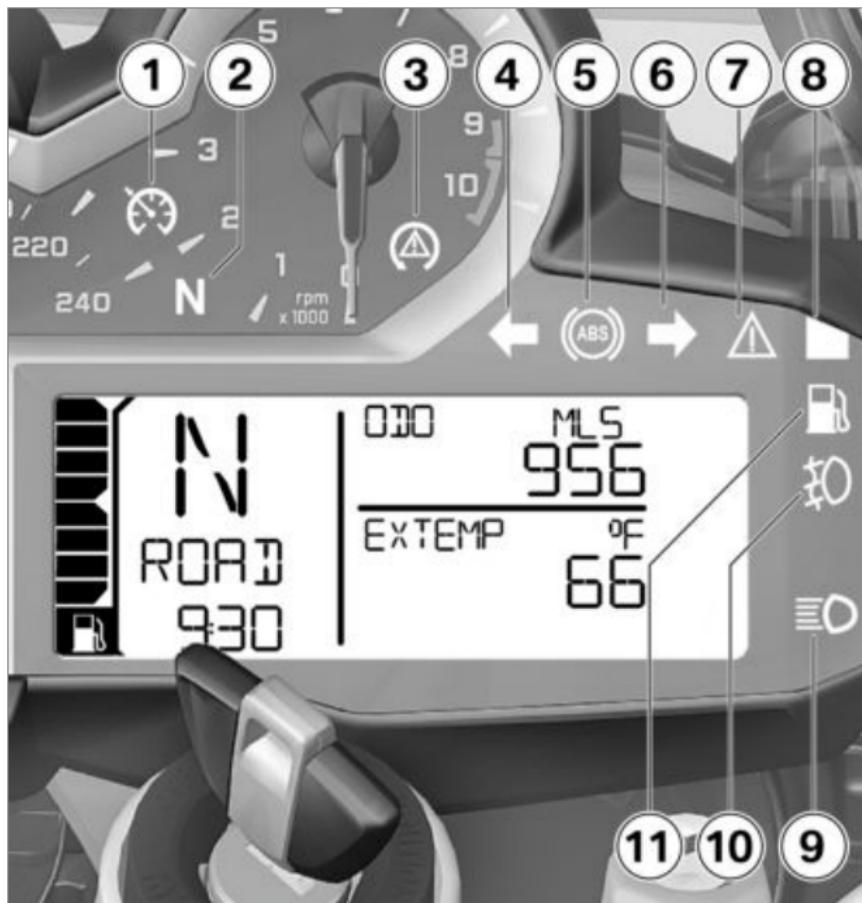





## NOTICE

The ABS symbol can be shown differently depending on the country. ◀

## Multifunction display

- 1 Fuel level
- 2 Upshift recommendation (➡ 41)
- 3 Gear indicator, shows "N" in neutral (idling)
- 4 – with heated handlebar grips<sup>OE</sup>  
Heated grip settings (➡ 77)
- 5 Odometer (➡ 50)
- 6 Service display (maintenance interval) (➡ 179)
- 7 Warning symbols (➡ 24)
- 8 Onboard computer
- 9 – with Dynamic ESA<sup>OE</sup>  
ESA setting (➡ 72)
- 10 Riding mode (➡ 64)
- 11 Clock (➡ 53)
- 12 Outside temperature warning (➡ 38)

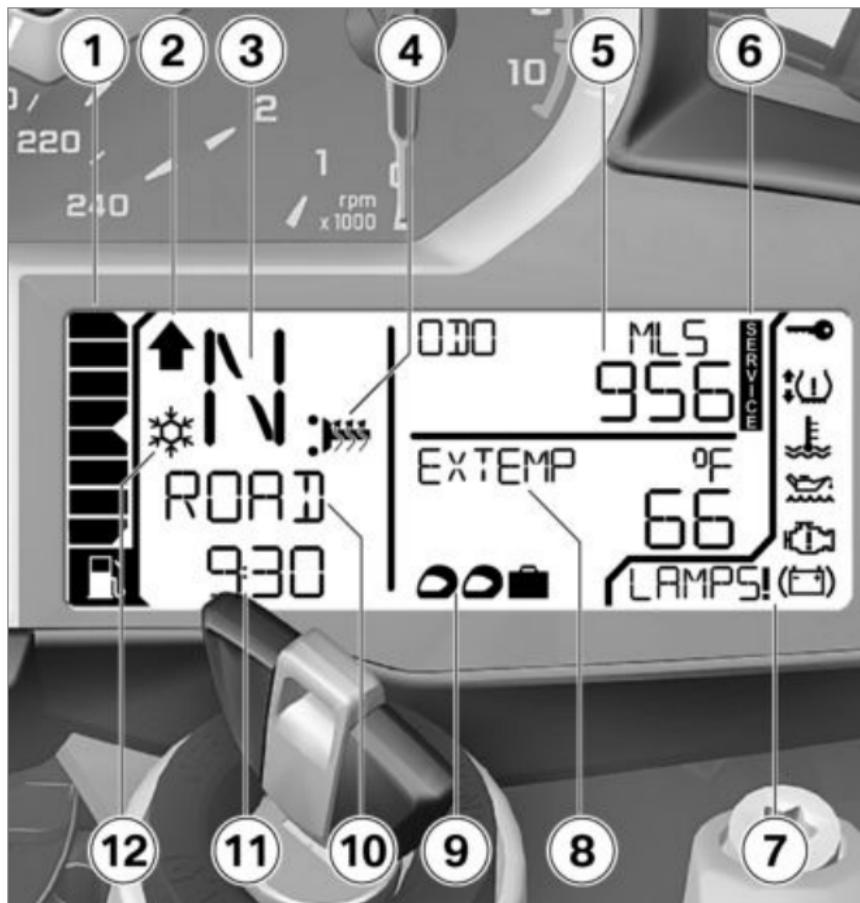

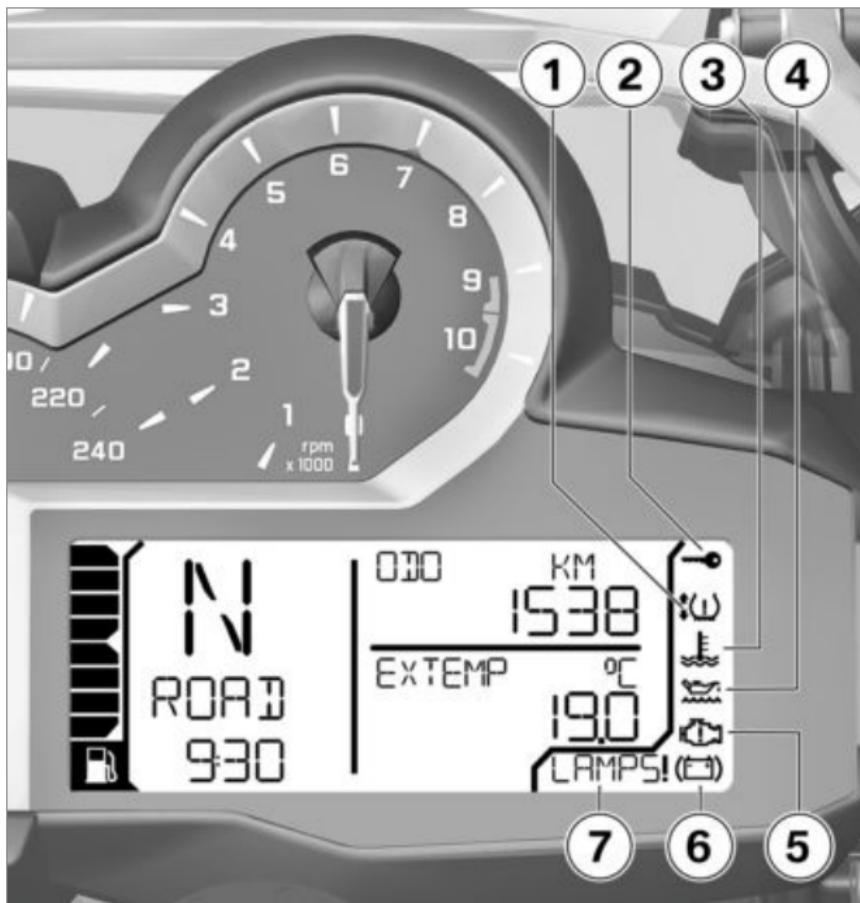

## Warning symbols in the display panel

- 1 – with Tire Pressure Control (TPC)<sup>OE</sup>  
Tire inflation pressure (➡ 32)
- 2 EWS (➡ 29)
- 3 Coolant temperature (➡ 30)
- 4 Engine oil level (➡ 37)
- 5 Electronic engine management (➡ 30)
- 6 Battery charging (➡ 136)
- 7 Warnings (➡ 24)

## Warning lights

### Display

Warnings are displayed with appropriate warning lights.



Warnings for which no separate warning light is provided are signaled by the general warning light **1** and are accompanied by a warning symbol in area **2** or by a warning notice in area **3**. The universal warning light lights up in either yellow or red depending on the urgency of the warning. The universal warning light lights up for the most urgent warning.

You will find an overview of the potential warnings on the following pages.

## Overview of warning indicators

Warning and indicator lamps	Warning symbols in the display panel	Meaning
	 appears on the display	Outside temperature warning (→ 29)
 lights up yellow	 appears on the display	Electronic immobilizer is active (→ 29)
 lights up yellow	 appears on the display	Radio-operated key outside reception range (→ 29)
 lights up yellow		Replace battery of radio-operated key (→ 30)
 lights up red	 appears on the display	Coolant temperature too high (→ 30)
 lights up yellow	 appears on the display	Engine in emergency-operation mode (→ 30)
 lights up yellow	! LAMP_ is indicated	Bulb defect (→ 31)
	DWALO ! is indicated	Anti-theft alarm battery low charge (→ 31)

## Warning and indicator lamps

## Warning symbols in the display panel

## Meaning

	lights up yellow	DWA ! is indicated	Anti-theft alarm system battery discharged (➡ 32)
	lights up yellow	 appears with one or two arrows and the critical tyre pressure also flashes	Tire inflation pressure is at limit of approved range (➡ 32)
	flashes red	 appears with one or two arrows and the critical tyre pressure also flashes	Tire inflation pressure is outside approved range (➡ 33)
	lights up yellow	 appears with one or two arrows	Sensor defective or system error (➡ 33)
		"--" or "-- --" is indicated	Transmission error (➡ 34)
	lights up yellow	RDC ! is indicated	Battery of tire-inflation pressure sensor weak (➡ 34)
	flashes		ABS self-diagnosis not completed (➡ 35)

Warning and indicator lamps	Warning symbols in the display panel	Meaning
 lights up		ABS error (▬▬▬▶ 35)
 lights up		ABS deactivated (▬▬▬▶ 35)
 flashes rapidly		ASC intervention (▬▬▬▶ 35)
 flashes slowly		ASC self-diagnosis not completed (▬▬▬▶ 35)
 lights up		ASC deactivated (▬▬▬▶ 36)
 lights up		ASC error (▬▬▬▶ 36)
 lights up yellow	ESA ! is indicated	ESA error (▬▬▬▶ 36)
 lights up		Fuel down to reserve (▬▬▬▶ 36)

## Warning and indicator lamps

## Warning symbols in the display panel

## Meaning



flashes yellow



flashes

Severe fault in the engine management system (→ 37)



appears on the display

Engine oil level too low (→ 37)

OILLVL CHECK  
is indicated



lights up red



appears on the display

Battery charging voltage insufficient (→ 38)

## Outside temperature warning



The ice crystal symbol is displayed.

Possible cause:



The outside temperature measured on the motorcycle is less than:

Approx. 37 °F (Approx. 3 °C)



### WARNING

**Danger of black ice even above 37 °F (3 °C), despite the lack of outside temperature warning.**

Risk of accident due to black ice.

- At a low outside temperature, icy conditions must be expected on bridges and in shady road areas. ◀
- Think well ahead when driving.

## Electronic immobilizer is active



The general warning lamp lights up yellow.



The EWS warning symbol appears on the display.

Possible cause:

The key being used is not authorized for starting, or communication between the key and engine electronics is disrupted.

- Remove other motorcycle keys from the ignition key ring.
- Using emergency key.
- Have the defective key replaced, preferably by an authorized BMW Motorrad retailer.

## Radio-operated key outside reception range

– with Keyless Ride<sup>OE</sup>



The general warning lamp lights up yellow.



appears on the display.

Possible cause:

Communication between the radio-operated key and the engine electronics is disrupted.

- Check battery in radio-operated key.
  - with Keyless Ride<sup>OE</sup>
- Replace battery of radio-operated key (▶▶▶ 50).
- Use reserve key for further driving.
  - with Keyless Ride<sup>OE</sup>
- Battery of radio-operated key is completely drained or radio-operated key has been lost (▶▶▶ 49).
- Should the warning symbol appear while driving, keep calm. Driving can be continued; the engine will not switch off.

- Have the defective radio-operated key replaced by an authorized BMW Motorrad retailer.

### Replace battery of radio-operated key

 The general warning lamp lights up yellow.

 The battery symbol is displayed.

Possible cause:

- The battery for the radio-operated key is no longer charged to full capacity. Operation of the radio-operated key is only ensured for a limited time.
  - with Keyless Ride<sup>OE</sup>
- Replace battery of radio-operated key (➡ 50).

### Coolant temperature too high

 The general warning lamp lights up red.

 The temperature symbol is displayed.

#### ATTENTION

### Riding with overheated engine.

Engine damage

- Be sure to observe the measures listed below.◀

Possible cause:

Coolant level is too low.

- Checking coolant level (➡ 118).

If coolant level is too low:

- Have the coolant level refilled and the coolant system checked at a specialist service facility, preferably an authorized BMW Motorrad retailer.

Possible cause:

The coolant temperature is too high.

- If possible, continue driving in the part-load range to cool down the engine.
- Should the coolant temperature frequently be too high, have the fault rectified as quickly as possible by an authorized workshop, preferably an authorized BMW Motorrad retailer.

### Engine in emergency-operation mode

 The general warning lamp lights up yellow.

 The engine symbol is displayed.

#### WARNING

**Unusual handling when engine is no emergency operating mode.**

Accident hazard

- Adapt your style of riding accordingly.
- Avoid rapid acceleration and passing maneuvers.◀

Possible cause:

The engine control unit has diagnosed a fault. In exceptional cases, the engine stops and can no longer be started. Otherwise, the engine runs in the emergency operating mode.

- Continued driving is possible, however the accustomed engine performance may not be available.
- Have the malfunction corrected as soon as possible at an authorized workshop, preferably an authorized BMW Motorrad retailer.

## Bulb defect



The general warning lamp lights up yellow.

- ! LAMP\_ is indicated.
- ! LAMP\_R: Brake light, taillight, turn indicator or license plate illumination defective.
- ! LAMP\_F: Low-beam headlight, high-beam headlight, parking lights or front turn indicator defective.
- ! LAMP\_S: Several bulbs defective.



## WARNING

**Overlooking the motorcycle in traffic due to the light source on the motorcycle failing.**

Safety risk

- Replace defective bulbs as soon as possible; it is best always to carry a complete

set of spare bulbs on the motorcycle.◀

Possible cause:

One or more bulbs are defective.

- Determine defective bulbs via visual inspection.
- Replacing low and high-beam light sources in headlight (►► 128).
- Replacing parking light light source (►► 130).
- Replacing the LED headlight (►► 132).
- Replacing bulb for front and rear turn indicator (►► 131).
- Replacing LED tail light (►► 132).

## Anti-theft alarm battery low charge

– with anti-theft alarm system (DWA)<sup>OE</sup>

DWALO ! is indicated.

 **NOTICE**

This fault message is only shown for a short time immediately following the Pre-Ride-Check. ◀

Possible cause:

The anti-theft alarm battery no longer has its full capacity. The operation of the anti-theft alarm system is only ensured for a limited time with the vehicle battery disconnected.

- Contact an authorized workshop, preferably an authorized BMW Motorrad retailer.

### Anti-theft alarm system battery discharged

– with anti-theft alarm system (DWA)<sup>OE</sup>



The general warning lamp lights up yellow.

DWA ! is indicated.

 **NOTICE**

This fault message is only shown for a short time immediately following the Pre-Ride-Check. ◀

Possible cause:

The anti-theft alarm system battery has no capacity. The operation of the anti-theft alarm system is no longer ensured with the vehicle battery disconnected.

- Contact an authorized workshop, preferably an authorized BMW Motorrad retailer.

### Tire inflation pressure is at limit of approved range

– with Tire Pressure Control (TPC)<sup>OE</sup>



The general warning lamp lights up yellow.



The tyre symbol with one or two arrows appears. The critical tyre pressure also flashes.

The up arrow indicates an inflation pressure problem on the front wheel. The down arrow indicates an inflation pressure problem on the rear wheel.

Possible cause:

The measured tire inflation pressure is in the limit area of the permissible tolerance.

- Correct tire inflation pressure in accordance with instructions on back of cover of Rider's Manual.

 **NOTICE**

Before adjusting the tire inflation pressure, observe the information on temperature compensation and on inflation pressure adjustment in the chapter "Technology in detail". ◀

## Tire inflation pressure is outside approved range

– with Tire Pressure Control (TPC)<sup>OE</sup>



The general warning lamp flashes red.



The tyre symbol with one or two arrows appears. The critical tyre pressure also flashes



### WARNING

## Tire inflation pressure is outside approved range.

Poorer handling characteristic of the motorcycle.

- Adapt your style of riding accordingly.◀

The up arrow indicates an inflation pressure problem on the front wheel. The down arrow indicates an inflation pressure problem on the rear wheel.

Possible cause:

The measured tire inflation pressure is outside the approved tolerance range.

- Check tire for damage and suitability for continued use. If it is still possible to drive with tire:
- Correct tire inflation pressure at the next opportunity.



### NOTICE

Before adjusting the tire inflation pressure, observe the information on temperature compensation and on inflation pressure adjustment in the chapter "Technology in detail".◀



### NOTICE

The TPC warning message can be deactivated in the off-road mode.◀

- Have the tire checked for damage at an authorized service facility, preferably an authorized BMW Motorrad retailer.

If you are unsure about the tire's suitability for continued riding:

- Do not continue riding.
- Contact roadside service.

## Sensor defective or system error

– with Tire Pressure Control (TPC)<sup>OE</sup>



The general warning lamp lights up yellow.



The tyre symbol with one or two arrows appears.

Possible cause:

- Wheels without installed TPC sensors are mounted.
- Retrofit wheel set with TPC sensors.

Possible cause:

1 or 2 TCP sensors have failed or a system error has occurred.

- Have fault eliminated at a specialist service facility, preferably an authorized BMW Motorrad retailer.

### Transmission error

– with Tire Pressure Control (TPC)<sup>OE</sup>

"--" or "-- --" is indicated

Possible cause:

The motorcycle has not reached the minimum speed (▬► 109).



TPC sensor is not active

min 19 mph (min 30 km/h)  
(The TPC sensor does not transmit a signal to the motorcycle until this minimum speed has been exceeded.)

- Watch the TCP display at a higher rate of speed. A con-

tinuous error is only present if the general warning lamp also lights up. In this case:

- Have fault eliminated at a specialist service facility, preferably an authorized BMW Motorrad retailer.

Possible cause:

There is a fault in the radio connection to the TPC sensors.

Possible causes are radio systems in the surrounding area, which interfere with the connection between the TPC control unit and the sensors.

- Watch the TPC display in another environment. A continuous error is only present if the general warning lamp also lights up. In this case:
- Have fault eliminated at a specialist service facility, preferably an authorized BMW Motorrad dealer.

### Battery of tire-inflation pressure sensor weak

– with Tire Pressure Control (TPC)<sup>OE</sup>



The general warning lamp lights up yellow.

RDC ! is indicated



### NOTICE

This fault message is only shown for a short time immediately following the Pre-Ride-Check. ◀

Possible cause:

The battery of the tire inflation pressure sensor no longer has its full capacity. The operation of the tire inflation pressure control is only ensured for a limited time.

- Contact an authorized workshop, preferably an authorized BMW Motorrad retailer.

## ABS self-diagnosis not completed



ABS warning light flashes.

Possible cause:



ABS self-diagnosis routine not completed

ABS is not available, as the self-diagnosis routine was not completed. (The motorcycle must reach a specified minimum speed before the system can check operation of the wheel speed sensors: 3 mph (5 km/h))

- Ride off slowly. It must be noted that the ABS function is not available until the self-diagnosis has been completed.

## ABS error



ABS warning light lights up.

Possible cause:

The ABS control unit has detected an error. The ABS function is not available.

- It remains possible to continue riding. Observe additional information on special conditions that can lead to an ABS error message (►► 106).
- Have the malfunction corrected as soon as possible at an authorized workshop, preferably an authorized BMW Motorrad retailer.

## ABS deactivated



ABS warning light lights up.

Possible cause:

The ABS system has been deactivated by the rider.

- Switch on ABS function.

## ASC intervention



ASC warning light flashes rapidly.

ASC has detected instability at the rear wheel and responded by reducing the torque. The warning light flashes longer than the ASC intervention lasts. This feature continues to furnish the rider with visual feedback confirming that the system has initiated active closed-loop intervention even after the critical situation has passed.

## ASC self-diagnosis not completed



ASC warning light flashes slowly.

Possible cause:



ASC self-diagnosis routine not completed

ASC is not available because the self-diagnosis routine was not completed. (The motorcycle must reach a specified minimum speed before the system can check operation of the wheel sensors: min 3 mph (min 5 km/h))

- Ride off slowly. The ASC warning lamp must go out after a few meters.

If the ASC warning lamp continues to flash:

- Contact an authorized workshop, preferably an authorized BMW Motorrad retailer.

### ASC deactivated



ASC warning light lights up.

Possible cause:

The ASC system has been deactivated by the rider.

- Activating the ASC function

### ASC error



ASC warning light lights up.

Possible cause:

The ASC control unit has detected an error. The ASC function is not available.

- It remains possible to continue riding. Please be aware that ASC functionality is no longer available. Observe additional information on situations which can lead to an ASC error (► 108).
- Have the malfunction corrected as soon as possible at an authorized workshop, preferably an authorized BMW Motorrad retailer.

### ESA error



The general warning lamp lights up yellow.

ESA ! is indicated.

Possible cause:

The ESA control unit has detected an error. Motorcycle damping is in this condition very firm and riding is rather uncomfortable - in particular on rough roads.

- Have the malfunction corrected as soon as possible at an authorized workshop, preferably an authorized BMW Motorrad retailer.

### Fuel down to reserve



Fuel-reserve warning lamp lights up.

## **WARNING**

### **Rough engine running or switching off of the engine due to a fuel shortage.**

Accident hazard. Damage to the catalytic converter.

- Do not drive to the extent that the fuel tank is completely empty. ◀

Possible cause:

At the most, the fuel tank still contains the reserve fuel quantity.



Reserve fuel quantity

Approx. 1.1 gal (Approx. 4 l)

- Refueling procedure (▶▶▶ 95).

### **Severe fault in the engine management system**



The general warning lamp flashes yellow.



The engine symbol flashes.

## **WARNING**

### **Damage to the engine when it is in the emergency operating mode.**

Accident hazard

- Adapt riding style: Ride slowly, avoid rapid acceleration and passing maneuvers.
- If possible, have the motorcycle picked up and the malfunction source eliminated by a specialized service facility, preferably an authorized BMW Motorrad Retailer. ◀

Possible cause:

The engine control unit has diagnosed a fault, which can lead to a severe secondary fault. The engine is in the emergency-operation mode.

- Continued driving is possible, however it is not recommended.
- Avoid high load and engine speed ranges if possible.
- Have the malfunction corrected as soon as possible at an authorized workshop, preferably an authorized BMW Motorrad retailer.

### **Engine oil level too low**



The oil can symbol is displayed.

OILLVL CHECK is indicated. Possible cause:

The electronic oil level sensor has detected a low engine oil level. At next refueling stop:

- Check engine oil level (▶▶▶ 113). If oil level is too low:
- Topping up engine oil (▶▶▶ 114). If the oil level is correct:

- Contact an authorized workshop, preferably an authorized BMW Motorrad retailer.

## Battery charging voltage insufficient

 The general warning lamp lights up red.

 The battery symbol is displayed.

### WARNING

#### Failure of various motorcycle systems, such as lighting, engine or ABS, due to a discharged battery.

Accident hazard

- Do not continue riding.◀

The battery is not being charged. If you continue driving, the motorcycle electronics will discharge the battery.



### NOTICE

If the 12 V battery is installed incorrectly, or if the terminals are swapped (e.g. when jump-starting), the fuse for the alternator regulator may blow.◀

Possible cause:

Defect in alternator or the alternator drive assembly, or the voltage regulator fuse has been triggered.

- Have the malfunction corrected as soon as possible at an authorized service facility, preferably an authorized BMW Motorrad retailer.

## Outside temperature

Engine heat can lead to spurious readings of outside temperature when the motorcycle is stationary. When the effects of engine heat on the monitored temperature become excessive

the display responds by temporarily reverting to -- as the display reading.



When outside temperatures are below 3 °C, there is a risk of black ice forming. The display automatically switches from any other mode to outside temperature reading **1**, when the temperature drops below this threshold for the first time. The displayed value flashes.



In addition, the ice crystal symbol **2** is displayed.

## **! WARNING**

**Danger of black ice even above 37 °F (3 °C), despite the lack of outside temperature warning.**

Risk of accident due to black ice.

- At a low outside temperature, icy conditions must be expected on bridges and in shady road areas. ◀

## **Fuel reserve**

The fuel level in the fuel tank, when the fuel warning lamp switches on, depends on the driving dynamics. The more the fuel is moved within the tank (due to frequently changing inclined positions, frequent braking and accelerating), the more difficult it is to determine the reserve quantity. For this reason, the reserve quantity cannot be accurately indicated.



After the fuel warning lamp is switched on, the range is automatically displayed.

The distance, which can still be driven with the reserve quantity, depends on the driving style (on the consumption) and on the fuel level when the warning lamp was initially activated (see the explanation above).

The odometer for the fuel reserve is reset if the fuel level after refueling is greater than the reserve quantity.

## **Oil level indicator**



The oil level display **1** provides information on the oil level in the engine. This display can only be activated when the vehicle is stopped.

The conditions required for using the oil level display are as follows:

- Engine at operating temperature
- Engine idling for at least ten seconds
- Side stand retracted

– Motorcycle standing vertically on a level surface

The readings mean:

OK: Oil level correct.

CHECK: Check oil level during next refueling stop.

---: No measurement possible (above-mentioned conditions not met).



If the oil level must be checked, symbol **2** is displayed, until the oil level is detected again as correct.

## Service display



If the time remaining until the next service is less than a month, or if the next service is due within 1000 km, the service date **1** and the remaining kilometers **2** appear for a short period of time after the Pre-Ride Check.



When a service date elapses without service, the general warning lamp lights up in yellow, appearing together with the date and mileage (kilometrage) display. The "Service" message is displayed continuously.



## NOTICE

If the service display appears more than a month before the service date, the stored date must be adjusted in the instrument cluster. This situation can occur if the battery has been disconnected for a longer time. Consult a certified workshop, preferably an authorized BMW Motorrad retailer, for setting of the date. ◀

## Tire inflation pressure

– with Tire Pressure Control (TPC)<sup>OE</sup>



The figure on the left side **1** indicates the front tire's inflation pressure, while the figure on the right **2** shows the inflation pressure in the rear tire. Immediately after switching on the ignition, "-- --" is indicated. The tire pressures are not signaled until the road speed exceeds 30 kph for the first time. The tire pressures indicated relate to a tire air temperature of 68 °F (20 °C).

 If the **3** symbol appears at the same time, the display is a warning. The critical tire-inflation pressure flashes.

 If the level concerned is borderline in terms of the permissible tolerance, the general warning light also lights up yellow. If the monitored tire inflation pressure is outside the specified range the general warning light will flash red.

Additional information on the BMW Motorrad Tire Pressure Control is provided starting on page (➡ 109).

## Upshift recommendation

The upshift recommendation must be switched on in the display settings (➡ 52).



Upshift recommendation **1** signals the economically best point in time for upshifting.



## Operation

Ignition.....	44	Damping.....	71
Ignition with Keyless Ride.....	46	Dynamic ESA, Electronic Suspension Adjustment .....	72
Multifunction display .....	50	Clutch .....	74
Alarm system (DWA).....	57	Brakes .....	75
Emergency on/off switch (kill switch).....	59	Shifting .....	76
Headlight .....	59	Tyres .....	76
Lights.....	60	Handlebars .....	77
Turn indicators.....	61	Heated handlebar grips .....	77
Hazard warning flashers.....	62	Mirrors .....	78
BMW Motorrad Integral ABS .....	62	Windshield.....	79
ASC Automatic Stability Control ....	63	Rider and passenger seats.....	79
Riding mode .....	64	Storage compartment .....	82
Cruise control.....	68		
Spring preload .....	70		

## Ignition

### Keys

You are provided with 2 ignition keys.

Should you lose your keys, refer to the information regarding the electronic immobilizer (EWS) (►► 45).

A single key fits the steering and ignition lock, the fuel filler cap and the seat lock.

The cases and the topcase can also be ordered with locks for the same key on request. Please contact an authorized workshop for this purpose, preferably an authorized BMW Motorrad retailer.

## Locking handlebars




### ATTENTION

**Incorrect steering angle when the motorcycle is parked on the side stands.**


Component damage caused by tipping over.

- On level ground, always turn the handlebars to the left to set the steering lock.
- Otherwise the angle of the ground determines whether the handlebars are set to the left or right. ◀
- Turn handlebars to full left or right lock position.

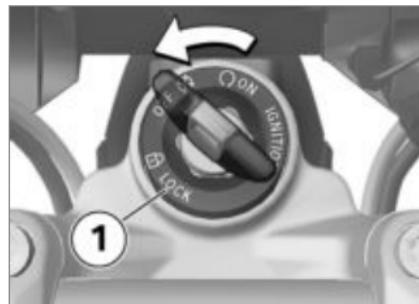


- Turn key to position **1** while moving handlebars slightly.
  - » Ignition, lights and all electrical circuits switched off.
  - » Handlebars are locked.
  - » Key can now be removed.

## Switching on ignition

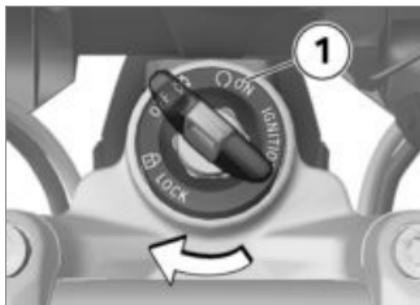

- Insert key into the steering and ignition lock. Turn key to position **1**.
  - » Parking lights and all function circuits are switched on.
  - » Pre-Ride-Check in progress (▬▬▬ 88)
  - » ABS self-diagnosis is performed (▬▬▬ 88)
  - » ASC self-diagnosis in progress (▬▬▬ 89)

## Switch off ignition

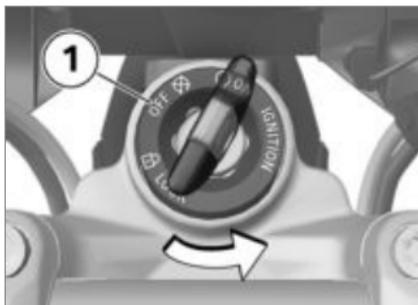

- Turn key to position **1**.
  - » After the ignition is switched off, the instrument cluster remains switched on for a short period of time and indicates possibly present fault codes.
  - » Handlebars not locked.
  - » Electrically powered accessories remain operational for a limited period of time.
  - » Battery can be recharged via onboard socket.
  - » Key can now be removed.

– with additional LED headlight<sup>OA</sup>

- The supplementary LED headlights switch off shortly after the ignition is switched off.<

## EWS Electronic immobilizer

The motorcycle's electronic circuitry monitors the data stored in the ignition key through a ring antenna incorporated in the steering and ignition lock. The engine management system does not enable engine starting until this key has been recognized as "authorized" for your motorcycle.



### NOTICE

A further key attached to the same ring as the ignition key used to start the engine could "irritate" the electronics, in which case the enabling signal for starting is not issued. The warning

with the key symbol appears in the multifunction display. Always store further vehicle keys separately from the ignition key. ◀

If you lose one of your motorcycle keys, you can have it disabled by your authorized BMW motorcycle retailer.

When having a key disabled you should also bring all of the motorcycle's remaining keys with you. The engine can no longer be started using a disabled key; however, a disabled key can be enabled again.

Emergency and spare keys are only available through an authorized BMW Motorrad retailer.

The keys are part of an integrated security system, so the retailer is under an obligation to check the legitimacy of all applications for replacement/extra keys.

## Ignition with Keyless Ride

– with Keyless Ride<sup>OE</sup>

### Keys



#### NOTICE

The indicator light for the radio-operated key flashes as long as the radio-operated key is being searched for.

If the radio-operated key or the emergency key is detected, it goes out.

If the radio-operated key or the emergency key is not detected, it lights up briefly. ◀

You are provided with one radio-operated key and one emergency key. Should you lose your keys, refer to the information regarding the electronic immobilizer (EWS) (▶▶ 45).

The ignition, tank filler cap and anti-theft alarm system are con-

trolled with the radio-operated key. The seat lock, Topcase and case can be operated manually.



#### NOTICE

When the range of the radio-operated key is exceeded (e.g. in case or Topcase), the motorcycle cannot be started and the central locking system cannot be locked/unlocked.

If the range is exceeded, the ignition is switched off after approx. 1.5 minutes and the central locking system is **not** locked.

It is advisable to carry the radio-operated key directly on your person (e.g. in a jacket pocket) and to also carry the emergency key as an alternative. ◀



Range of Keyless Ride radio-operated key

– with Keyless Ride<sup>OE</sup>




Range of Keyless Ride  
radio-operated key

Approx. 3.3 ft (Approx. 1 m)◀

## Locking handlebars

Condition: Handlebars are turned to left or right. Radio-operated key is within reception range.

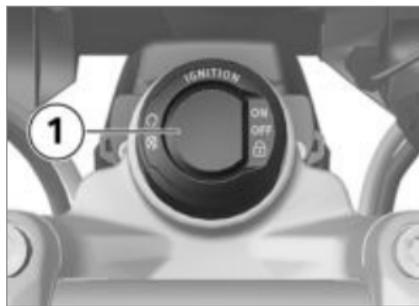

### ATTENTION


**Incorrect steering angle when the motorcycle is parked on the side stands.**

Component damage cause by tipping over.

- On level ground, always turn the handlebars to the left to set the steering lock.
- Otherwise the angle of the ground determines whether the handlebars are set to the left or right.◀
- Press and hold button **1**.
  - » Steering lock audibly locks.
  - » Ignition, lights and all electrical circuits switched off.
- To unlock the steering lock, briefly press the button **1**.

## Switching on ignition

Condition: Radio-operated key is within reception range.

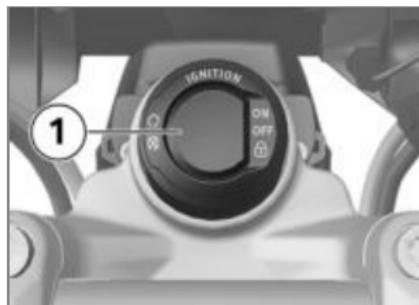

- The ignition can be activated in **two** ways.

### Version 1:

- Briefly press button **1**.
  - » Parking lights and all function circuits are switched on.
  - with additional LED headlight<sup>OA</sup>
    - » LED additional headlights are switched on.◀
    - » Pre-Ride-Check in progress (||||▶ 88)
    - » ABS self-diagnosis is performed (||||▶ 88)
    - » ASC self-diagnosis in progress (||||▶ 89)




If you lose a radio-operated key, you can have it disabled by your authorized BMW Motorrad retailer. When having a key disabled you should also bring all of the motorcycle's remaining keys with you.

The engine can no longer be started using a disabled radio-operated key; however, a disabled radio-operated key can be enabled again.

Emergency and spare keys are only available through an authorized BMW Motorrad retailer. As the radio-operated keys are part of an integrated security system, the retailer is under an obligation to check your legitimacy.

### Battery of radio-operated key is completely drained or radio-operated key has been lost

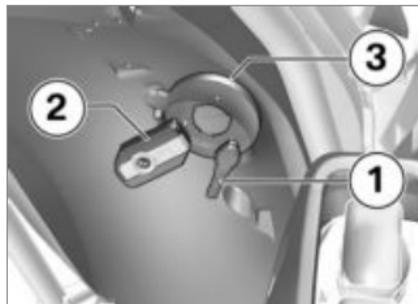

- Should you lose your keys, refer to the information regarding the electronic immobilizer (EWS) .
- Should you lose the radio-operated key while driving, the motorcycle can be started by using the emergency key.
- If the battery of the radio-operated key is completely drained, the motorcycle can be started by touching the rear wheel

cover with the radio-operated key.

- Hold emergency key **1** or completely drained radio-operated key **2** on rear wheel cover at level of antenna **3**.



#### NOTICE

The emergency key or the drained radio-operated key must **contact** the rear wheel cover. ◀



Period in which the engine must be started. Then unlocking must be repeated.

30 s

- » Pre-Ride Check in progress.
- Key has been detected.
- Engine can be started.
- Starting the engine (▮ 87).



- Total mileage (ODO)
- Trip odometer 1 (TRIP I)
- Trip odometer 2 (TRIP II)
- Range (RANGE)
- SETUP menu (SETUP), while stationary only

- with Pro onboard computer<sup>OE</sup>

The following information is additionally displayed using the onboard computer Pro:

- Automatic odometer (TRIP A)
- Current fuel consumption (CONS C)
- Current speed (SPEED)◀



- Press button **1** briefly to select the display in the bottom line of display **2**.

In the case of standard equipment, the following values can be displayed and selected per push of a button:

- Outside temperature (EXTEMP)
- Engine temperature (ENGTEMP)
- Average consumption 1 (CONS 1)
- Average consumption 2 (CONS 2)

- Average speed (Ø SPEED)
- with Tire Pressure Control (TPC)<sup>OE</sup>
- Tire inflation pressures (option) (TPM/TPC)◀

- Date (DATE)
- Oil level indicator (OILLVL)

- with Pro onboard computer<sup>OE</sup>
- Onboard electrical system voltage (VOLTGE)◀
- with Pro onboard computer<sup>OE</sup>
- Stopwatch overall time (ALTIME)◀
- with Pro onboard computer<sup>OE</sup>
- Stopwatch driving time (RDTIME)◀

### Reset tripmeter

- Switch on ignition (☛ 45).



- Repeat pressing button **1** briefly, until the odometer to be reset is shown in the top line of the display **2**.
- Press and hold button **1** until displayed value has been reset.

### Reset average data

- Switch on ignition (☛ 45).



- Repeat pressing button **1** briefly, until the average value to be reset is shown in the bottom line of the display **2**.
- Press and hold button **1** until displayed value has been reset.

### Configuring functions

- Switch on ignition (☛ 45).



- Repeat pressing button **1** briefly, until in the top line of the display **2** SETUP ENTER is shown.
- Press and hold button **1** to start the SETUP menu.
- » The following is indicated in the display depending on the equipment selected.



- Press button **1** briefly to respectively switch to the next menu item.
  - » The menu item appears in the top line of the display **2**.
  - » The adjusted value appears in the bottom line of the display **3**.
- Press button **4** briefly to change the adjusted value. The following menu items can be selected:
  - with anti-theft alarm system (DWA)<sup>OE</sup>
  - DWA: Switches alarm system on (ON) or off (OFF)◀

- with preparation for navigation system<sup>OE</sup>
- GPS TM: If a navigation system is installed: apply GPS time and GPS date (ON) respectively do not apply them (OFF)◀
- CLOCK: Setting the clock
- DATE: Setting the date
- ECOSFT: Show upshift recommendation in the display (ON) respectively do not show it (OFF)
- BRIGHT: Adjust display brightness from normal (0) to bright (5)
- EXIT: Exit SETUP menu
- with Pro onboard computer<sup>OE</sup>
- BC CUSTOM: Starts display customization.◀



- In order to exit the SETUP menu, press and hold menu item SETUP EXIT, button **1**.
- In order to exit the SETUP menu at any time, press and hold button **2**.

## Setting the clock

- Switch on ignition (➡ 45).



### WARNING

## Adjusting the clock while riding.

Accident hazard

- Adjust the clock only when the motorcycle is stationary.◀

- In the SETUP menu, select the SETUP CLOCK menu item.



- Press and hold button **2**, until the hours flash in the bottom line of display **3**.

#### NOTICE

If "-- : --" is indicated instead of the time, the power supply to the instrument cluster was interrupted (e.g., the battery was disconnected).◀

- Increase the flashing value using button **1** respectively decrease it using button **2**.
- Press and hold button **2**, until the minutes flash in the bottom line of display **3**.
- Increase the flashing value using button **1** respectively decrease it using button **2**.
- Press and hold button **2**, until the minutes stop flashing.
- » The adjustment is completed.
- In order to cancel the adjustment at any time, press and hold button **1**, until the original value is displayed again.

#### NOTICE

The adjustment is canceled, if you ride off before the adjustment is completed.◀

#### Set date

- Switch on ignition (☛ 45).

- In the SETUP menu, select the SETUP DATE menu item.



- Press and hold button **2**, until the day flashes in the bottom line of display **3**.

#### NOTICE

If "-- . -- . --" is indicated instead of the date, the power supply to the instrument cluster was interrupted (e.g., the battery was disconnected).◀

- Increase the flashing value using button **1** respectively decrease it using button **2**.
- Press and hold button **2**, until the month flashes in the bottom line of display **3**.
- Increase the flashing value using button **1** respectively decrease it using button **2**.
- Press and hold button **2**, until the year flashes in the bottom line of display **3**.
- Increase the flashing value using button **1** respectively decrease it using button **2**.
- Press and hold button **2**, until the year stops flashing.
- » The adjustment is completed.
- In order to cancel the adjustment at any time, press and hold button **1**, until the original value is displayed again.

## NOTICE

The adjustment is canceled, if you ride off before the adjustment is completed.◀

## Customize display

– with Pro onboard computer<sup>OE</sup>

- Switch on ignition (III 45). In the individualization menu it is possible to adjust, which information should be shown in which display line.
- In the SETUP menu, select the SETUP BC BASIC menu item.



- Press button **1** briefly to start the individualization menu.
  - » SETUP BC CUSTOM is indicated.
- Press button **1** briefly again to exit the individualization menu.

## NOTICE

If SETUP BC BASIC is selected, the factory setting becomes active again. The CUSTOM individualization remains stored.◀



- Press and hold button **1** to display the first menu item.
- » SETUP BC ODO is indicated.



- Press button **2** briefly to respectively switch to the next menu item.

- » The menu item appears in the top line of the display **3**.
- » The adjusted value appears in the bottom line of the display **4**. The following values can be adjusted.
  - TOP: The value is indicated in the top line of the display.
  - BELOW: The value is indicated in the bottom line of the display.
  - BOTH: The value is indicated in both lines of the display.
  - OFF: The value is not indicated.
- Press button **1** briefly to change the adjusted value. The following menu items can be selected. The factory setting is indicated in parentheses. Some menu items are displayed only, if the respective optional equipment is installed.
  - ODO: Odometer (TOP, setting OFF is not possible)
  - TRIP 1: Tripmeter 1 (TOP)

- TRIP 2: Tripmeter 2 (TOP)
- TRIP A: Automatic tripmeter (TOP)
- EXTEMP: Outside temperature (BELOW)
- ENGTMP: Engine temperature (BELOW)
- RANGE: Range (TOP)
- CONS R: Average consumption for range calculation (OFF)
- CONS 1: Average consumption 1 (BELOW)
- CONS 2: Average consumption 2 (BELOW)
- CONS C: Current fuel consumption (TOP)
- ØSPEED: Average speed (BELOW)
- SPEED: Current speed (TOP)
- RDC: Tyre inflation pressures (BELOW)
- VOLTGE: Onboard electrical system voltage (BELOW)
- ALTIME: Stopwatch overall time (BELOW)

- RDTIME: Stopwatch driving time (BELOW)
- DATE: Date (BELOW)
- SERV T: Date of next service (OFF)
- SERV D: Remaining mileage until next service (OFF)
- OILLVL: Oil level indicator (BELOW)
- EXIT: Exit individualization menu



- In order to exit the individualization menu, press and hold menu item **SETUP EXIT**, button **1**.

- In order to exit the individualization menu at any point in time, press and hold button **2**.
  - » All adjustments applied until then will be stored.

## Alarm system (DWA)

- with anti-theft alarm system (DWA)<sup>OE</sup>

### Activation

- Switch on ignition (➡ 45).
- Customize anti-theft alarm system settings (➡ 58).
- Switch off ignition.
  - » If DWA is activated, DWA is automatically activated after the ignition is switched off.
  - » Activation takes approximately 30 seconds to complete.
  - » Turn indicators are illuminated twice.
  - » Confirmation tone sounds twice (if programmed).

- » Anti-theft alarm system is activated.

### Alarm

The alarm can be set off by:

- motion sensor
- an attempt to use an unauthorized key to switch on the ignition
- disconnecting the alarm system from the motorcycle battery (alarm system battery takes over the power supply - alarm sound only, no illumination of the turn indicators)

If the battery is discharged all functions remain operational; the only difference is that the alarm cannot be set off if the system is disconnected from the motorcycle battery.

An alarm lasts for approximately 26 seconds. During the alarm, an alarm tone sounds and the turn indicators flash. The alarm tone type can be adjusted by an authorized BMW Motorrad retailer.

If an alarm was triggered while the motorcycle was unattended, the rider is notified accordingly by an alarm tone sounding once when the ignition is switched on. The alarm system indicator lamp then signals the reason for the alarm for one minute.

The meanings of the flash codes are as follows:

- 1 flash: motion sensor 1
- 2 flashes: motion sensor 2
- 3 flashes: ignition switched on with unauthorized key
- 4 flashes: alarm system is disconnected from the motorcycle battery
- 5 flashes: motion sensor 3

## Deactivation

- Emergency on/off switch (kill switch) in normal operating position.
- Switch on ignition.
  - » Turn indicators light up once.
  - » Confirmation tone sounds once (if programmed).
  - » Anti-theft alarm system is deactivated.

## Customize anti-theft alarm system settings

- Switch on ignition (►► 45).



- Repeat pressing button **1** briefly, until in the top line of

the display **2** SETUP ENTER is shown.

- Press and hold button **1** to start the SETUP menu.




- Press button **1** briefly to respectively select the DWA menu item.
  - » The top line of the display **2** shows DWA.
  - » The adjusted value appears in the bottom line of the display **3**.
- Press button **4** briefly to change the adjusted value.

The following settings are available:

- On: Anti-theft alarm system is activated respectively is activated automatically when the ignition is switched off.
- Off: DWA is deactivated.

## Emergency on/off switch (kill switch)

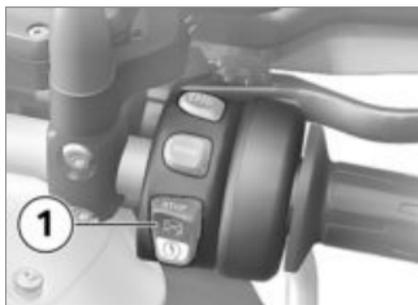

- 1** Emergency on/off switch (kill switch)


### **WARNING**

**Operation of the emergency ON/OFF switch when riding.**

Danger of falling due to blocking of rear wheel.

- Do not operate the emergency ON/OFF switch when riding. ◀

The engine can be switched off easily and quickly using the emergency on/off switch.

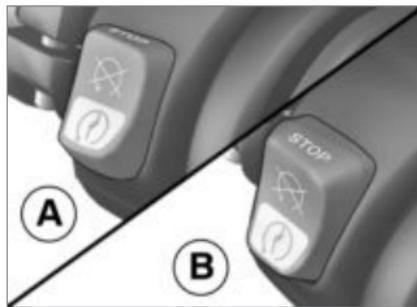

- A** Engine switched off  
**B** Operating position

## Headlight

### Headlamp range and spring preload

The headlamp range generally remains constant due to the adjustment of the spring preload to the loading state.

Spring preload adjustment may only be insufficient when the motorcycle is very heavily loaded. In this case, the headlamp range must be adjusted to the weight.

### **NOTICE**

If there are doubts as to the correct headlight range, have the adjustment checked by a specialized workshop, preferably by an authorized BMW Motorrad retailer. ◀

## Headlight range adjustment



In the case of high payload, if the spring preload adjustment is not sufficient anymore to avoid blinding the oncoming traffic:

- Turn adjustment wheel **1** counterclockwise to lower the headlight beam.

If the motorcycle is ridden again with lower payload:

- Have the headlight default setting readjusted by an authorized workshop, preferably an authorized BMW Motorrad retailer.

– with LED headlights<sup>OE</sup>



- A swiveling lever is used for the headlight range adjustment.
  - **A** Neutral position
  - **B** Position with heavy payload<

## Lights

### Lowbeam headlamp and parking lamps

The parking lamps come on automatically when the ignition is switched on.



### NOTICE

The parking lights are a strain on the battery. Do not leave the

ignition switched on longer than absolutely necessary.◀

The lowbeam headlamp switches on automatically when the engine is switched on.

### High-beam headlight and headlight flasher

- Switch on ignition (→ 45).



- Press switch **1** toward front to switch on high beams.
- Pull switch **1** rearward to actuate headlight flasher.

## Parking light

- Switch off ignition (▣▣▣ 45).



- Immediately after switching off the ignition push button **1** to the left and hold until the parking lights come on.
- Switch ignition on and then off again to switch off parking light.

## Auxiliary headlight

– with additional LED headlight<sup>OA</sup>

Precondition: The auxiliary headlight is only active, if the low-beam headlight is active.

## NOTICE

The auxiliary headlights are approved for use as fog lights and may only be used in poor weather conditions. Comply with the country-specific road traffic regulations. ◀

- Starting the engine (▣▣▣ 87).



- Press button **1** to switch on the auxiliary headlights.

 The indicator lamp for the auxiliary headlight lights up.

- Press button **1** again to switch off the auxiliary headlights.

## Turn indicators

### Operate turn indicator

- Switch on ignition (▣▣▣ 45).



- Press button **1** toward left to switch on left-hand turn indicator.
- Press button **1** toward right to switch on right-hand turn indicator.
- Press button **1** into center position to switch off turn indicators.



Turn indicator cancellation

The turn indicators automatically switch off when the defined driving time and distance have been reached.

## Hazard warning flashers

### Operating hazard warning flashers

- Switch on ignition (▶▶▶ 45).



#### NOTICE

The hazard warning flashers place a strain on the battery. Do not use the hazard warning flashers for longer than absolutely necessary. ◀



- Press button **1** to switch on hazard warning flashers.
  - » Ignition can be switched off.
- To switch off the hazard warning flashers, switch on the ignition as required, then press the button **1** once again.

## BMW Motorrad Integral ABS

### Switching off ABS function

- Switch on ignition (▶▶▶ 45).



- Press and hold button **1** until the ABS warning lamp's display changes.
  - » First the ASC symbol changes its display behavior. Press and hold button **1** until ABS warning lamp reacts. In this case, the ASC setting does not change.



ABS warning light lights up.

- Release button **1** within two seconds.



ABS warning light remains on.

- » ABS function is deactivated, integral function continues to be active.

## Switching on ABS function



- Press and hold button **1** until the ABS warning lamp's display changes.

 ABS warning light goes out; if self-diagnosis has not been completed, it begins to flash.

- Release button **1** within two seconds.



ABS warning light remains off or continues to flash.

- » The ABS function is switched on.
- As an alternative, the ignition can also be switched off and then on again.



### NOTICE

If the ABS warning light lights up after switching the ignition off and on and then continued driving over 4 mph (5 km/h), an ABS error has occurred.◀



### NOTICE

More detailed information on BMW Motorrad Integral ABS braking systems can be found in the section "Technology in detail".◀

## ASC Automatic Stability Control

### Deactivate ASC function

- Switch on ignition (➡ 45).



- Press and hold button **1** until the ASC warning lamp's display changes.



### NOTICE

The ASC function can also be deactivated while driving.◀



ASC warning light lights up.

- Release button **1** within two seconds.

 ASC warning light continues to light up.

- » The ASC function is switched off.

### Activate ASC function



- Press and hold button **1** until the ASC warning lamp's display changes.

 The ASC warning light does not light up anymore; if self-diagnosis has not been completed, it begins to flash.

- Release button **1** within two seconds.

 The ASC warning light still does not light up respectively continues flashing.

- » The ASC function is switched on.
- As an alternative, the ignition can also be switched off and then on again.



#### NOTICE

If the ASC warning light lights up after switching the ignition off and on and then continued driving over 4 mph (5 km/h), an ASC error has occurred.◀



#### NOTICE

More detailed information on the BMW Motorrad Automatic Stability Control (ASC) system can be found in the section "Technology in detail".◀

## Riding mode

### Use of the riding modes

BMW Motorrad has developed 5 riding scenarios for your motorcycle from which you can select the one matching your situation:

- Riding on wet roads
- Riding on dry roads

- with Pro riding modes<sup>OE</sup>
- Brisk riding on dry roads
- Moderate off-road riding
- Challenging off-road riding

For each of those 5 scenarios, the optimum balance between engine torque, throttle response, ABS control and ASC control for the situation concerned is provided.

– with Dynamic ESA<sup>OE</sup>

The suspension settings is adjusted to the selected scenario as well.

## Setting riding mode

- Switch on ignition (→ 45).



- Press button **1**.

### NOTICE

Details on the selectable driving modes are provided in the chapter "Technology in Detail".◀



The selection arrow **1** and the first selectable riding mode **2** are displayed.



### ATTENTION

#### Switching on off-road mode (Enduro and Enduro Pro) when in road mode.

Risk of falling due to unstable riding conditions when braking or accelerating in the ABS or ASC control range.

- Switch off-road mode (Enduro and Enduro Pro) during off-road riding on only.◀
- Press button **1** repeatedly, until the selection arrow is shown next to the desired riding mode.





- Press button **1** briefly to respectively select the RDC menu item.
  - » The top line of the display **2** shows RDC.
  - » The adjusted value appears in the bottom line of the display **3**.
- Press button **4** briefly to change the adjusted value.
  - » The following settings are available:
- ON: the RDC warning symbol is no longer shown on the display. The tire pressure outside permissible tolerance

warning is shown in the Enduro and Enduro Pro riding modes.

- OFF: the RDC warning symbol is displayed and in addition the tire pressure outside permissible tolerance warning is shown in the Enduro and Enduro Pro riding modes.

### Install coding plug

– with Pro riding modes<sup>OE</sup>

- Switch off ignition (►► 45).
- Remove rider's seat (►► 80).



### ATTENTION

#### Penetration of dirt and moisture in the open connector.

Malfunctions

- After removing the encoding plug, refit the cover cap.◀
- Remove cover cap of the plug connection **1**.



- To do so, press in locking device **1** and pull off cap.
- Insert the coding plug.
- Switch on ignition.



Symbol **1** for the coding plug appears on the display. Riding

mode **2** Enduro PRO can be selected.

- » The selected riding mode remains active even after the ignition is switched off.
- Install rider's seat (→ 80).

## Cruise control

– with cruise control<sup>OE</sup>


### Switching on cruise control

The cruise-control system is not available again until after the Enduro or Enduro Pro driving mode has been deactivated.



- Push switch **1** to right.
- » Button **2** is unlocked.

### Setting road speed

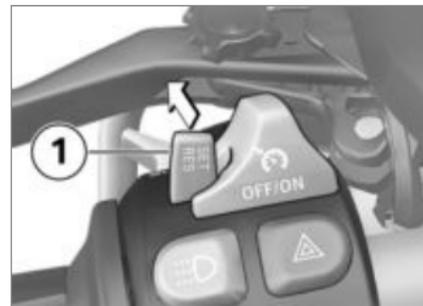

- Briefly press button **1** forward.



Adjustment range for  
cruise control

19...130 mph (30...210 km/h)



Indicator lamp for cruise-  
control system lights up.

- » The motorcycle maintains your current cruising speed and the setting is saved.


## Acceleration



- Briefly press button **1** forward.
- » Speed is increased by 1.2 mph (2 km/h) each time button is pressed.

- Press button **1** forward and hold.
- » The motorcycle accelerates steplessly.
- » If the button **1** is no longer pressed, the speed achieved is maintained and saved.

## Decreasing speed

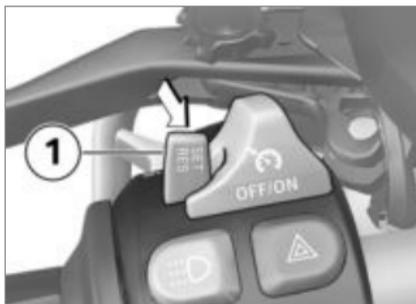

- Briefly press button **1** backward.
- » Speed is decreased by 1.2 mph (2 km/h) each time button is pressed.
- Press button **1** back and hold.

- » The motorcycle decelerates steplessly.
- » If the button **1** is no longer pressed, the speed achieved is maintained and saved.

## Deactivate cruise control

- Actuate brakes, clutch or throttle grip (take back throttle beyond back position) to deactivate cruise-control system.
- » Cruise control indicator lamp goes out.

## Resuming former cruising speed



- Briefly push button **1** back to return to the speed saved beforehand.



### NOTICE

Opening the throttle does not deactivate the cruise-control system. If you release the throttle grip, the motorcycle will decelerate only to the cruising speed saved in memory, even though you might have intended slowing to a lower speed. ◀



Indicator lamp for cruise-control system lights up.

## Switching off cruise control



- Push switch **1** to left.
  - » The system is deactivated.
  - » Button **2** is locked.

## Spring preload Setting

It is essential to set the spring preload to suit the load carried by the motorcycle. Increase spring preload when the vehicle is heavily loaded and reduce spring

preload accordingly when the vehicle is lightly loaded.

## Adjusting spring preload at rear wheel

- Park the motorcycle, ensuring that the support surface is firm and level.



### WARNING

**Uncoordinated settings of spring preload and spring strut damping.**

Poorer handling.

- Adjust damping characteristic to changed spring preload. ◀

## WARNING

### Adjusting the spring preload while riding.

Accident hazard

- Adjust the spring preload only when the motorcycle is stationary. ◀
- To increase the spring preload, turn the adjustment wheel **1** in the direction of the arrow HIGH.
- To decrease the spring load, turn the adjustment wheel **1** in the direction of the arrow LOW.

 Basic setting of spring preload, rear

– without Dynamic ESA<sup>OE</sup>

Turn adjustment wheel as far as possible into LOW direction (One-up without load)

 Basic setting of spring preload, rear

Turn adjuster wheel as far as possible in LOW direction, then rotate 15 turns in HIGH direction (One-up with load)

Turn adjuster wheel as far as possible in LOW direction, then rotate 30 turns in HIGH direction (Two-up and load) ◀


## Damping Setting

The damping must be adjusted to the road conditions and the spring preload.


- A rough road surface requires softer damping than a smooth road surface.
- An increase in spring preload requires firmer damping, a reduction in spring preload requires softer damping.

## Adjusting damping on rear wheel

- Park the motorcycle, ensuring that the support surface is firm and level.
- Adjust damping from the left side of the vehicle.

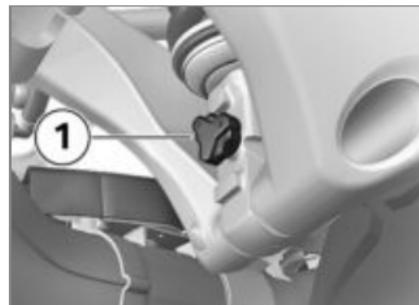

 - To increase damping, turn adjustment screw **1** clockwise.
- To decrease damping, turn adjustment screw **1** counterclockwise.



Basic setting of rear wheel rear-wheel damping

– without Dynamic ESA<sup>OE</sup>

Turn adjuster wheel as far as possible clockwise, then 8 clicks counterclockwise (One-up without load)

Turn adjuster wheel as far as possible clockwise, then 4 clicks counterclockwise (One-up with load)

Turn adjuster wheel as far as possible clockwise, then 4 clicks counterclockwise (Two-up with load)◀

## Dynamic ESA, Electronic Suspension Adjustment

– with Dynamic ESA<sup>OE</sup>

### Adjustment options

Using the electronic suspension adjustment Dynamic ESA you can conveniently adjust your motorcycle to the load.

Using leveling sensors, Dynamic ESA detects movements of the running gear and responds to them by adjusting the damper valves. As a result, the running gear is adjusted to the conditions of the ground.

Based on the NORMAL default setting, damping can be additionally adjusted harder (HARD) or softer (SOFT).

– with Pro riding modes<sup>OE</sup>

The running gear adjustment as well as the number of selectable damping variants depend on the selected riding mode. Damping set by the riding mode can be changed by the rider.

If the coding plug is not installed, the default set by the riding mode is set after every mode change. If the coding plug is installed, the rider's adjustments for every mode are maintained.

### Display suspension setting

- Switch on ignition (☛ 45).



- Press button **1** briefly to display current adjustment.



Damping is displayed in the multifunction display in area **1**, and spring preload is indicated in area **2**.

» The display is automatically hidden again after a short time.

### Adjust chassis

- Switch on ignition (➡ 45).



- Press button **1** briefly to display current adjustment.
- To set the damping rate:
- Repeat pressing button **1** briefly until desired setting is displayed.

### NOTICE

The damping cannot be adjusted while the motorcycle is being ridden. ◀

The following settings are available:

- SOFT: Comfortable damping
- NORMAL: Normal damping
- HARD: Sporty, performance-oriented damping

– with Pro riding modes<sup>OE</sup>

In the Enduro and Enduro Pro modes two adjustments are possible only:

- SOFT: Comfortable damping
- HARD: Sporty, performance-oriented damping

To set the spring preload:

- Starting the engine (➡ 87).
- Press and hold button **1** repeatedly until desired setting is displayed.

## NOTICE

The spring preload cannot be adjusted while the motorcycle is being ridden. ◀

The following settings are available:



One-up



One-up with luggage



Two-up (with luggage)

- Wait for the adjustment routine to finish before starting off again.
- » If the button **1** is not pressed for an extended period, the damping rate and the spring preload will be adjusted to the displayed settings. The ESA display flashes during the adjustment routine.

- At very low temperatures, unload the motorcycles before increasing the spring preload, and have the passenger dismount if necessary.
- » The ESA display disappears once the adjustment procedure has been completed.

## Clutch

### Adjusting clutch lever




#### WARNING

#### Adjusting the clutch lever while driving.

Accident hazard

- Only adjust the clutch lever when the motorcycle is stationary. ◀

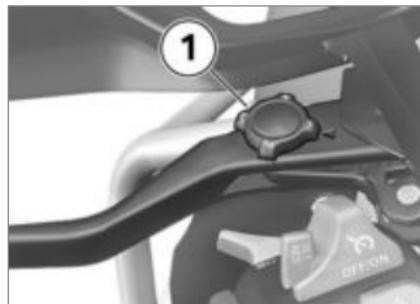

- Turn adjusting wheel **1** into desired position.

## NOTICE

The adjustment wheel can be turned more easily if you press the clutch lever forward when doing so. ◀

- » Four settings are available:
  - Position 1: smallest distance between handlebar grip and clutch lever
  - Position 4: largest distance between handlebar grip and clutch lever

## Brakes


### Adjusting handbrake lever

#### WARNING

#### Adjusting the brake lever while driving.

Accident hazard

- Only adjust the brake lever when the motorcycle is stationary. ◀

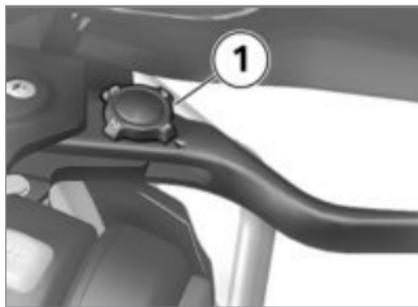

- Turn adjusting wheel **1** into desired position.


#### NOTICE

The adjustment wheel can be turned more easily if you press the handbrake lever forward when doing so. ◀


- » Four settings are available:
  - Position 1: smallest distance between handlebar grip and brake lever
  - Position 4: largest distance between handlebar grip and brake lever

#### Adjusting footbrake lever


- Make sure ground is level and firm and park motorcycle.

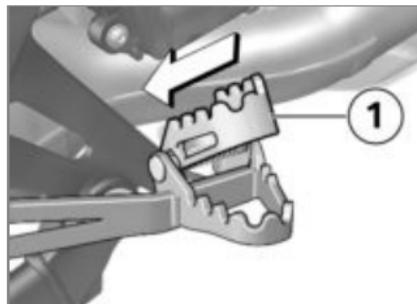

- Slide treadplate **1** of footrest sideways to the left to unlock.

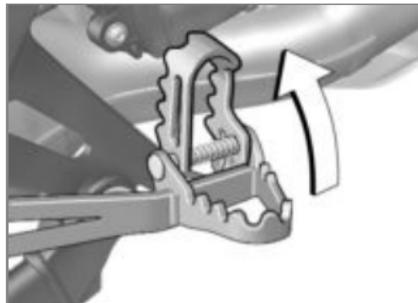


- Fold step plate upward up to detent when riding while seated.

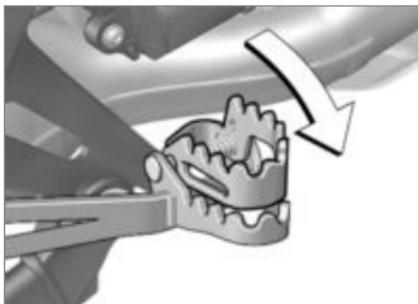

- Fold step plate downward to detent when riding while standing.

## Shifting

### Adjusting shift lever

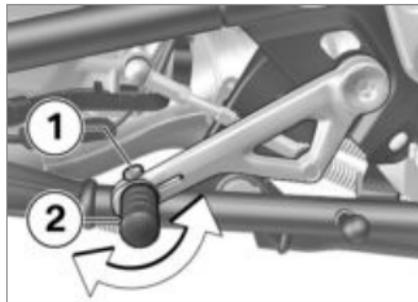

- Slacken screw **1**.
- Turn foot piece **2** into desired position.



### NOTICE

A foot piece adjusted too high or too low can cause problems when shifting. In case of shifting problems, check the adjustment of the foot piece. ◀

- Tighten screw **1** to specified torque.



Treadplate (fixing) on gear lever

6 lb/ft (8 Nm)

## Tyres

### Checking tyre pressure



### WARNING

#### Incorrect tire inflation pressure.

Poorer handling characteristic of the motorcycle. Reduced life of tires.

- Ensure proper tire inflation pressure. ◀



### WARNING

#### Automatic opening of vertically installed valve cores at high speeds.

Sudden loss of tyre inflation pressure.

- Use valve caps with rubber sealing ring and screw on firmly.◀
- Park motorcycle, ensuring that support surface is firm and level.
- Check tyre pressures against data below.



Tire pressure, front

36.3 psi (2.5 bar) (with tire cold)



Tire pressure, rear


42.1 psi (2.9 bar) (with tire cold)

If tyre pressure is too low:

- Correct tyre pressure.

## Handlebars

### Adjustable handlebars

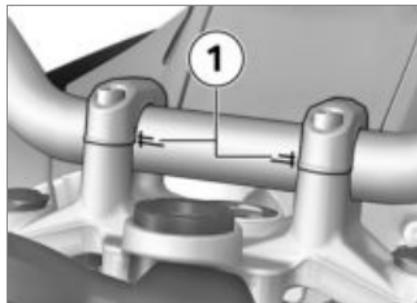

The inclination of the motorcycle handlebars can be adjusted within the **1** markings. Consult an authorized workshop, preferably an authorized BMW Motorrad retailer, for adjustment of the handlebars.

### Heated handlebar grips

– with heated handlebar grips<sup>OE</sup>

## Operating heated grips



### NOTICE

The heated grips option can only be activated when the engine is running.◀



### NOTICE

The increase in power consumption caused by the heated grips can drain the battery if you are riding at low engine speeds. If the battery is inadequately charged, the heated grips are switched off to ensure starting capability.◀

- Starting the engine (➡ 87).



- Press button **1** repeatedly until desired heating level **2** is shown.

The handlebar grips can be heated at two different levels.



50 % heating output



100 % heating output

- » The 2nd heating level is used for fast heat-up of the grips; then the switch should be switched back to the 1st level.

- » If no further changes are made the selected heating level is adopted as the setting.
- To switch off heated grips, press button **1** until heated grip symbol **2** is no longer shown in the display.


## Mirrors

### Adjust mirrors



- Move mirror into desired position by twisting.

### Adjust mirror arm

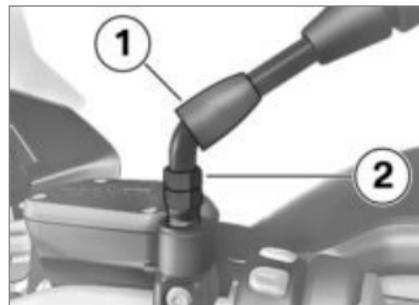

- Slide protective cap **1** up over screw connection on mirror arm.
- Loosen the nut **2**.
- Turn mirror arm into desired position.
- Tighten the nut to the specified torque while holding the mirror arm to ensure that it does not move out of position.




Mirror (locknut) on adapter

16 lb/ft (22 Nm)

- Slide protective cap over threaded fastener.

## Windshield

### Adjust windshield

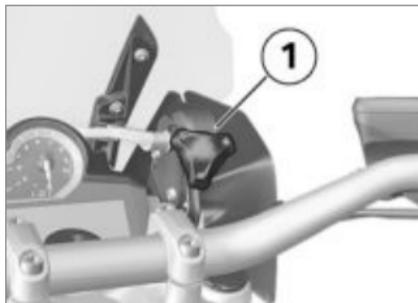

### **!** WARNING

#### Adjusting the windshield while driving.

Accident hazard


- Only adjust the windshield when the motorcycle is stationary. ◀

- Turn adjustment wheel **1** clockwise to lower the windshield.
- Turn adjustment wheel **1** counterclockwise to raise the windshield.

### Rider and passenger seats

#### Remove passenger seat


- Remove rider's seat (▶▶ 80).

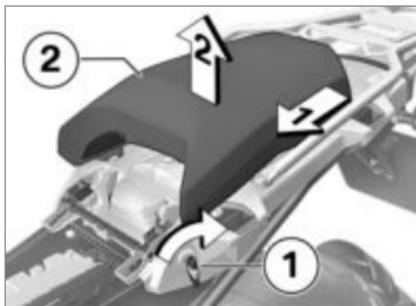


- Turn ignition key **1** clockwise.
- Slide pillion seat **2** forwards and lift up to remove.

- Place pillion seat on clean surface with the fabric side facing down.

### Installing passenger seat

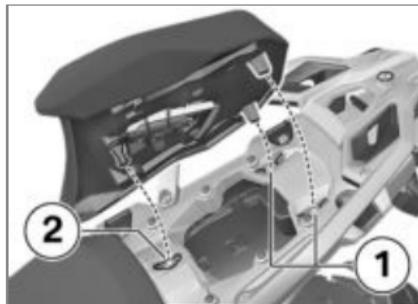


- Fit passenger seat centered in rear mounts **1** and in front mount **2**.
- Slide pillion seat to the rear.
- Check pillion seat is properly located.

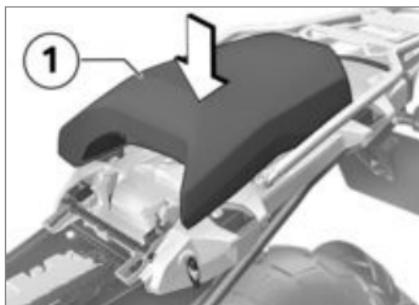


- Firmly press pillion seat **1** downwards.
- » Passenger seat clicks audibly into place.
- Install rider's seat (▣▣▣ 80).

### Remove rider's seat

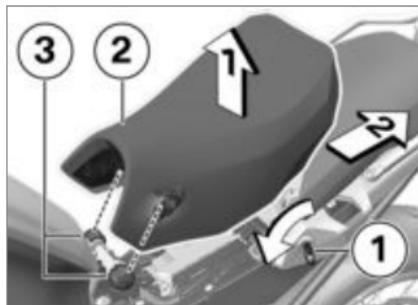

- Turn vehicle key **1** counter-clockwise and hold while lifting driver's seat **2** in rear area.
- Remove driver's seat **2** from seat bracket **3** toward rear.
- Lay driver's seat on a clean surface with the upholstered side down.


### Install rider's seat

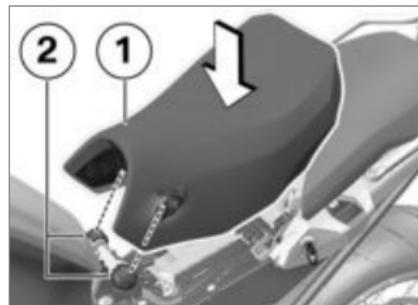


- Fit front seat **1** into seat mount **2** on left and right and place loosely on motorcycle.
- Press rider's seat slightly forward in rear area and then firmly downward until locking mechanism engages.

### Adjust seat height and seat tilt

- Remove rider's seat (▣▣▣ 80).

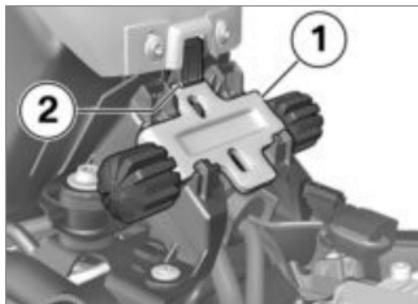


- In order to remove the front height adjustment **1**, press locking mechanism **2** down to remove the height adjustment upwards.

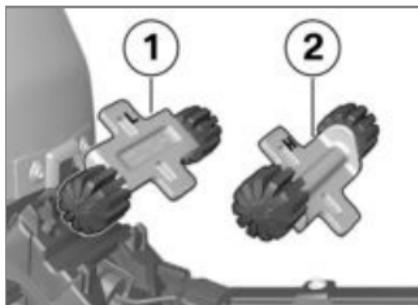


- In order to adjust the low seat position, install the front height

adjustment in orientation **1** (L marking).

- In order to adjust the high seat position, install the front height adjustment in orientation **2** (H marking).

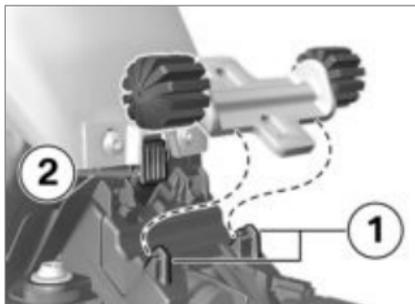

- First, slide the front height adjustment under mounts **1**. Then press locking mechanism **2**, until it engages.

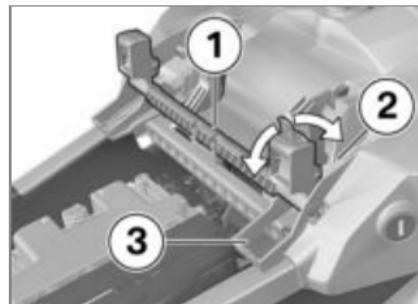


- In order to adjust the low seat position, swivel rear height adjustment **1** into position **3** (L marking).
- In order to adjust the high seat position, swivel rear height adjustment **1** into position **2** (H marking).

If seat tilt should be changed:

- Position the front and rear height adjustment differently.
- Install rider's seat (→ 80).

## Storage compartment

### Opening and locking stow compartment

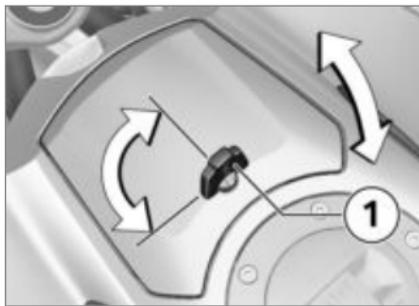

- To open the stow compartment **1**, turn knob 90° counter-clockwise and pull upwards.
- To lock the stow compartment **1**, close the compartment lid, turn knob 90° clockwise and fold down forwards onto the stow compartment lid.

## **Riding**

Safety information .....	84
Observe checklist.....	86
Starting .....	87
Running in .....	89
Shifting gears .....	90
Brakes .....	91
Parking your motorcycle .....	93
Off-road riding .....	93
Refueling .....	94
Fastening motorcycle for transport .....	98

## Safety information

### Rider's Equipment

Do not ride without the correct clothing. Always wear:

- Helmet
- Rider's suit
- Gloves
- Boots

This applies even to short journeys, and to every season of the year. Your authorized BMW Motorrad Dealer will be happy to advise you and has the correct clothing for every purpose.

### Reduced clearance in inclined position

Motorcycles with lowered running gear have less ground clearance in all positions than motorcycles with standard running gear.



### WARNING

#### When cornering with lowered motorcycles, motorcycle parts can contact the road surface sooner than normal.

Accident hazard

- Carefully test the clearance of the motorcycle in an inclined position and adjust your riding style accordingly. ◀

Test the clearance of your motorcycle at an angle in safe situations. Remember to take the limited ground clearance of your motorcycle into account when driving over curbs and similar obstacles.

The lowering of the motorcycle shortens the spring travel (see the chapter "Technical Data"). A possible reduction in the accustomed driving comfort may result. Especially when riding with

a passenger, the spring preload should be adjusted accordingly.

### Load



 
### WARNING

#### Reduced riding stability caused by overloading and uneven loading.

Accident hazard

- Do not exceed the gross weight limit and observe the loading information. ◀
- Adjust spring preload and damping rate for the current gross vehicle weight.
- Ensure that case volumes on left and right are equal.
- Make sure that weight is uniformly distributed between right and left.
- Pack heavy pieces of luggage and cargo as low and as close to the center of the motorcycle as possible.

- Observe the maximum payload and maximum speed as indicated on the label in the case (see also the chapter "Accessories").
  - Observe the maximum payload and maximum speed as indicated on the label in the topcase (see also the chapter "Accessories").
- with tank backpack<sup>OA</sup>
- Observe maximum payload of tank rucksack.



Payload of tank rucksack

max 11 lbs (max 5 kg)◀

## Speed

If you ride at high speed, always bear in mind that various boundary conditions can adversely affect the handling of your motorcycle:

- Settings of spring-strut and shock absorber system
- Unevenly distributed load
- Loose clothing
- Insufficient tire inflation pressure
- Tire tread in poor condition
- Etc.

## Maximum speed with studded or winter tyres

### DANGER

### Maximum speed of the motorcycle is higher than the permissible maximum speed of the tyres.

Accident hazard caused by tyre damage at excessively high speed.

- Observe the maximum permissible speed for the tyres.◀

With studded or winter tyres, the maximum permissible speed for the tyres must be observed.

Attach a label specifying the maximum permissible speed in the field of view of the instrument cluster.

## Risk of poisoning

Exhaust fumes contain carbon monoxide, which is colorless and odorless but highly toxic.

### WARNING

### Harmful exhaust gas.

Danger of suffocation

- Do not inhale exhaust fumes.
- Do not run the engine in closed rooms.◀

## Burn hazard

### CAUTION

### Engine and exhaust system become very hot when the motorcycle is in use.

Burn hazard

- After parking the motorcycle, make sure that no persons or objects come into contact with the engine and exhaust system.◀

## Catalytic converter

If misfiring causes unburned fuel to enter the catalytic converter, there is a danger of overheating and damage.

For this reason, observe the following points:

- Do not run the fuel tank dry
- Do not run the engine with the spark-plug cap removed
- Stop the engine immediately if it misfires
- Use unleaded fuel only
- Comply with all specified maintenance intervals.



### ATTENTION

**Unburned fuel in the catalytic converter.**

Damage to the catalytic converter.

- Note the points listed for protection of the catalytic converter.◀

## Danger of overheating



### ATTENTION

#### Engine idling for a lengthy period while at a standstill.

Overheating caused by insufficient cooling. In extreme cases, the motorcycle could catch fire.

- Do not allow the engine to idle unnecessarily.
- After starting, ride off immediately.◀

## Modifications



### ATTENTION

**Modifications to the motorcycle (e.g. engine control unit, throttle valves, clutch).**

Damage to the affected parts, failure of safety-relevant functions. Damage caused in this way is not covered by the warranty.

- Do not make any modifications.◀

## Observe checklist

- Use the following checklist to check your motorcycle at regular intervals.

### Before every journey:

- Function of the brake system.
- Function of the lighting and signal system.
- Check clutch function (▣▶ 119).
- Checking tire tread depth (▣▶ 120).
- Firm seating of cases and luggage.

### At every third refuelling stop:

- without Dynamic ESA<sup>OE</sup>
  - Adjusting spring preload at rear wheel (➡ 70).◀
- without Dynamic ESA<sup>OE</sup>
  - Adjusting damping on rear wheel (➡ 71).◀
- with Dynamic ESA<sup>OE</sup>
  - Adjust chassis (➡ 73).◀
  - Check engine oil level (➡ 113).
  - Checking front brake pad thickness (➡ 115).
  - Checking rear brake pad thickness (➡ 115).
  - Check front brake fluid level (➡ 116).
  - Checking rear brake fluid level (➡ 117).
  - Checking coolant level (➡ 118).

## Starting

### Starting the engine

- Switch on ignition.
  - » Pre-Ride-Check in progress. (➡ 88)
  - » ABS self-diagnosis is performed. (➡ 88)
  - » ASC self-diagnosis in progress. (➡ 89)
- Engage neutral, or pull back clutch lever if a gear is engaged.

#### NOTICE

You cannot start the motorcycle with the side stand extended and a gear engaged. The engine will switch itself off if it is started with the transmission in neutral and then a gear is engaged before retracting the side stand.◀

- In the case of cold start or under cold temperatures: Pull back clutch lever.



- Press starter button **1**.

#### NOTICE

The starting attempt is automatically interrupted if battery voltage is too low. Recharge the battery before you attempt to start the engine again, or use jumper cables and a donor battery to start. More detailed information can be found in the "Maintenance" chapter under "Jump-starting."◀

- » Engine starts.
  - » If the engine fails to start, the troubleshooting table in the



## ASC self-diagnosis

The self-diagnosis routine checks whether the BMW Motorcycle ASC is ready for operation. The self-diagnosis routine runs automatically when you switch on the ignition.

### Phase 1

- » Check on system components monitored by the diagnostic system while vehicle is parked.



ASC warning light flashes slowly.

### Phase 2

- » Check of diagnosable system components while motorcycle is moving (minimum speed 5 kph).



ASC warning light flashes slowly.

## ASC self-diagnosis completed

- » ASC warning lamp goes out.

- Watch all warning and indicator lights on the display.

If an ASC error is indicated following completion of the ASC self-diagnosis routine:

- It remains possible to continue riding. Please be aware that ASC functionality is no longer available.
- Have the malfunction corrected as soon as possible at an authorized service facility, preferably an authorized BMW Motorrad Retailer.

## Running in Engine

- While running in the motorcycle, vary the throttle opening and engine-speed range frequently; avoid driving for long periods at a constant speed.
- Choose curvy, slightly hilly sections of road if possible.

- Observe the engine run-in speeds.



Engine break-in speeds

<5000 min<sup>-1</sup> (Odometer reading 0...621 miles (0...1000 km))

no full throttle (Odometer reading 0...621 miles (0...1000 km))

- Observe mileage, after which the running-in check should be performed.



Mileage until running-in check

311...746 miles  
(500...1200 km)

## Brake pads

New brake pads must be run in before they achieve their optimum friction force. This initial reduction in braking efficiency can be compensated for by ex-

erting greater pressure on the brake levers.

## WARNING

### **New brake pads.**

Extension of the braking distance. Accident hazard.

- Brake early.◀

### **Tires**

New tires have a smooth surface. This must be roughened by riding in a restrained manner at various heel angles until the tires are run in. This running in procedure is essential if the tires are to achieve maximum grip.

## WARNING

### **Loss of adhesion of new tires on wet roads and at extreme angles.**

Accident hazard

- Always think well ahead and avoid extreme angles.◀

## **Shifting gears**

– with Pro shift assistant<sup>OE</sup>

### **Pro Gear Shift Assistant**

The gearshift assistant provides help with upward and downward gear shifts without the clutch or the accelerator having to be operated. This is not an automatic transmission. The rider is an essential part of the system and makes the decision as to when to change gear.


## NOTICE

More detailed information on Pro Gear-shift Assistance can be found in the section "Technology in detail".◀

## NOTICE

When changing gear using the Pro Gear-shift Assistance function, the cruise-control system

is automatically deactivated for safety reasons.◀

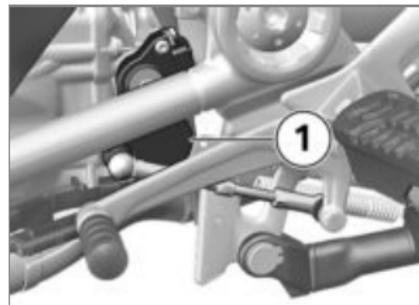

- The gears are shifted into as usual with foot force on the shift lever.
- » The sensor **1** on the gear-lever shaft detects the intention to change gear and initiates gear-shift assistance.
- » When driving at constant speed in low gears at high revs, changing gear without using the clutch can result in major load change reactions. BMW Motorrad recommends only changing gear using the

clutch in such situations. The Pro shifting assistant should not be used in the area of the rev-limiter.

- » No shifting support is provided in the following situations:
  - If the clutch is operated
  - If the gear lever is not in the zero position
  - When changing up with the throttle closed (overrunning mode) or when decelerating.
- To be able to make another gear shift using Pro Gear Shift Assistant, the gear lever must be fully released after the first gear change.

## Brakes

### How do you achieve the shortest stopping distances?

The dynamic load distribution between the front and rear wheel changes during braking. The heavier you brake, the greater the weight transfer to the front wheel. Increases in the load at an individual wheel are accompanied by a rise in the effective braking force that the wheel can provide.

To achieve the shortest possible braking distance, the front brake must be applied quickly and with increasing force. This procedure provides ideal exploitation of the extra weight transfer to the front wheel. The clutch should also be disengaged at the same time. With the "forced braking" often practiced in which the brake pressure is generated as quickly

as possible and with great force, the dynamic load distribution cannot follow the increased deceleration and the braking force cannot be completely transferred to the road surface.

Locking up of the front wheel is prevented by the BMW Motorrad Integral ABS.

### Descending mountain passes



#### **Braking only with the rear-wheel brake when descending mountain passes.**

Loss of braking action. Destruction of the brakes caused by overheating.

- Use both front and rear brakes, and make use of the engine's braking effect as well. ◀

## Wet, soiled brakes

Moisture and dirt on the brake rotors and the brake pads result in a decrease in the braking action.

Delayed or poorer braking action must be expected in the following situations:

- When driving in the rain and through puddles.
- After washing the vehicle.
- When driving on roads spread with salt.
- After working on the brakes due to oil or grease residues.
- When driving on soiled roads or offroad.



### WARNING

#### Moisture and dirt.

Poorer braking action.

- Brake until brakes are dry or clean; clean if necessary.

- Brake early until the full braking action is available again.◀

## ABS Pro

- with ABS Pro<sup>OE</sup>

## Physical riding limits



### WARNING

#### Braking in curves.

Danger of falling despite ABS Pro

- The rider is always responsible for adapting his/her driving style.
- Do not reduce the system's extra safety margin with careless riding or unnecessary risks.◀

ABS Pro is available in all driving modes except for Enduro Pro.

Support varies depending on the selected riding mode and decreases from RAIN to Enduro in 3 steps.

## Support by ABS Pro

- RAIN and ROAD: Maximum support.
- DYNAMIC: Slightly reduced support.
- Enduro: Minimum support.
- Enduro Pro: ABS Pro inactive.

## Falling cannot be excluded

Although ABS Pro represents valuable support and an enormous safety advantage for the rider when braking in the inclined position, it by no means redefines the physical riding limits. It is still possible to exceed those limits through misjudgments or riding errors. In extreme cases this may result in a fall.

## Use on public roads

ABS Pro helps make riding your motorcycle on public roads even safer. When braking due to unexpected hazards in curves, locking-up and slipping of the

wheels is prevented within the scope of the physical riding limits.

## NOTICE

ABS Pro was not developed to increase the individual braking performance in the inclined position in the limit range.◀

## Parking your motorcycle

### Side stand

- Switch off engine.

## ATTENTION

### Poor ground conditions in area of stand.

Component damage caused by tipping over.

- Always check that the ground under the stand is level and firm.◀

## ATTENTION

### Loading of the side stand with additional weight.

Component damage cause by tipping over.

- Do not sit on the motorcycle when it is parked on the side stands.◀
- Fold out side stand and park motorcycle.
- If the slope of the road permits, turn the handlebars to the left.
- On slopes point the motorcycle uphill and engage 1st gear.

### Center stand

- Switch off engine.

## ATTENTION

### Poor ground conditions in area of stand.

Component damage caused by tipping over.

- Always check that the ground under the stand is level and firm.◀

## ATTENTION

### Folding in of the main stand during strong movements.

Component damage caused by tipping over.

- Do not sit on the motorcycle while it is resting on the center stand.◀
- Fold out center stand and jack up motorcycle.
- On a grade, the motorcycle should always face uphill; select 1st gear.

## Off-road riding

### After driving offroad

BMW Motorrad recommends that the following be observed after driving offroad:

## Tire inflation pressure



### WARNING

#### When riding off-road, reduced tyre pressure when riding on paved surfaces.

Risk of accident due to poorer driving characteristics.

- Ensure proper tyre inflation pressure. ◀

## Brakes



### WARNING

#### Riding on unpaved or dirty roads.

Delayed braking effect caused by dirty brake discs and brake pads.

- Brake early until the brakes are braked clean. ◀



### ATTENTION

#### Riding on unpaved or dirty roads.

Increased brake pad wear.

- Check the brake pad thickness more often and replace the brake pads sooner. ◀

## Spring preload and damping



### WARNING

#### Modified values for spring preload and spring strut damping when riding off-road.

Poorer driving characteristics on paved surfaces.

- Before returning to on-road use, reset the correct spring preload and spring strut damping. ◀

## Rims

BMW Motorrad recommends checking the rims for possible damage after riding offroad.

## Air cleaner insert



### ATTENTION

#### Dirty air filter element.

Engine damage

- When driving in dusty terrain, check air filter insert for soiling at short intervals and clean or replace if necessary. ◀

Use under very dusty conditions (deserts, savannas, etc.) requires the use air cleaner inserts specially developed for these kinds of applications.

## Refueling

### Fuel specifications

For optimal fuel economy, the gasoline should be sulfur-free or very low in sulfur content.



### ATTENTION

#### Leaded fuel.

Damage to the catalytic converter.

- Do not refuel with leaded gasoline or gasoline with metallic additives, e.g. manganese or iron. ◀



## ATTENTION

### Use of Ethanol E85 as fuel.

Damage to the engine and fuel supply.

- Do not refuel with E85, i.e. fuel with an ethanol content of 85 %, or with Flex Fuel. ◀
- Fuels with a maximum ethanol content of 10 %, meaning "E10," may be used for refueling. Ethanol should satisfy the quality standards for US (ASTM 4806-xx) and Canada (CGSB-3.511-xx). "xx" - comply with the current standard in each case.



Recommended fuel quality

Super unleaded (max. 10 % ethanol, E10)  
89 AKI (95 ROZ/RON)  
89 AKI



Alternative fuel quality

Regular unleaded (restrictions with regard to power and fuel consumption. If the engine should for example be operated with 91 RON in countries with lower fuel quality, the motorcycle must be respectively programmed first by your authorized BMW Motorrad retailer.) (max. 10 % ethanol, E10)  
87 AKI (91 ROZ/RON)  
87 AKI

## Refueling procedure



### WARNING

#### Fuel is highly flammable.

Fire and explosion hazard.

- Do not smoke. Never bring a naked flame near the fuel tank. ◀



### WARNING

#### Escaping of fuel due to expansion under exposure to heat with overfilled fuel tank.

Accident hazard

- Do not overfill the fuel tank. ◀




## ATTENTION

#### Fuel attacks plastic surfaces.

Surfaces become unattractive or cloudy.

- Immediately clean plastic parts after contact with fuel. ◀

- Place motorcycle on the center stand, ensuring that it is resting on a firm and level support surface.

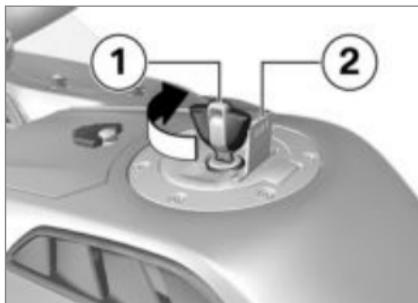

- Open protective cap **2**.
- Unlock cap of fuel tank **1** with ignition key by turning it clockwise, and fold it up.



- Do not fill the tank past the bottom edge of the filler neck.

#### NOTICE

When refueling after running on reserve, make sure that you top up the tank to a level above reserve, as otherwise the sensor will not be able to register the new level and the fuel warning lamp will not be switched off.◀

#### NOTICE

The "usable fuel quantity" indicated in the Technical data is the fuel quantity, which can be refueled,

if the fuel tank was completely emptied, i.e., if the engine dies off due to lack of fuel.◀



Usable fuel quantity

Approx. 7.9 gal (Approx. 30 l)



Reserve fuel quantity

Approx. 1.1 gal (Approx. 4 l)

- Press fuel tank cap down firmly to close.
- Remove key and close protective cap.

### Refueling procedure

– with Keyless Ride<sup>OE</sup>

Steering lock is unlocked.



**WARNING**

**Fuel is highly flammable.**

Fire and explosion hazard.

- Do not smoke. Never bring a naked flame near the fuel tank.◀

## **! WARNING**

### **Escaping of fuel due to expansion under exposure to heat with overfilled fuel tank.**

Accident hazard

- Do not overfill the fuel tank.◀

## **⚠ ATTENTION**

### **Fuel attacks plastic surfaces.**

Surfaces become unattractive or cloudy.

- Immediately clean plastic parts after contact with fuel.◀
- Place motorcycle on center stand, ensuring that it is resting on a firm and level support surface.
- with Keyless Ride<sup>OE</sup>
- Switch off ignition (▶▶▶ 48).

## **⚠ NOTICE**

After the ignition is switched off, the fuel filler cap can be opened within the specified run-on time even without the radio-operated key being within the reception area.◀

 After-running period for opening the fuel filler cap


2 min

- » There are **2 ways** to open the fuel filler cap:
  - Within the run-on time
  - After run-on time expires

### **Version 1**

- with Keyless Ride<sup>OE</sup>

Within the run-on time

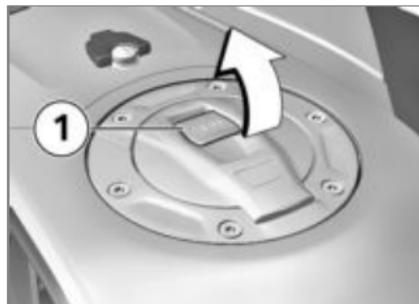

- Slowly pull lug **1** of fuel filler cap upward.
- » Fuel filler cap unlocked.
- Open fuel filler cap completely.

### **Version 2**

- with Keyless Ride<sup>OE</sup>

After run-on time expires

- Bring radio-operated key into reception range.
- Slowly pull up lug **1**.
- » The indicator light for the radio-operated key flashes as long as the radio-operated key is being searched for.

- Slowly pull lug **1** of fuel filler cap upward again.
- » Fuel filler cap unlocked.
- Open fuel filler cap completely.



- Refuel with a fuel meeting the specifications above, continuing until fuel is no higher than lower edge of filler neck.

### NOTICE

When refueling after running on reserve, make sure that you top up the tank to a level above reserve, as otherwise the sensor will not be able to register the

new level and the fuel warning lamp will not be switched off. ◀

### NOTICE

The "usable fuel quantity" indicated in the Technical data is the fuel quantity, which can be refueled, if the fuel tank was completely emptied, i.e., if the engine dies off due to lack of fuel. ◀



Usable fuel quantity

Approx. 7.9 gal (Approx. 30 l)



Reserve fuel quantity

Approx. 1.1 gal (Approx. 4 l)

- Press fuel filler cap of fuel tank down firmly.
- » Fuel filler cap audibly engages.
- » Fuel filler cap automatically locks after run-on time expires.

- » The engaged fuel filler cap locks immediately when the steering lock is locked or during starting.

## Fastening motorcycle for transport

- Protect all components over which straps are run against abrasion, e.g. using adhesive tape or soft cloths.



### ATTENTION

**Motorcycle tips to the side when raising.**

Component damage cause by tipping over.

- Secure the motorcycle against tipping to the side, preferably with the assistance of a second person.◀
- Push motorcycle onto transport surface, and do not place on side stand or center stand.



## ATTENTION

### Pinching of components.

Component damage

- Do not pinch components, e.g. brake lines or wiring harnesses.◀
- Fasten front straps to both sides of the handlebars.
- Guide straps through leading link and then tension.



- Fasten rear straps on both sides to the passenger foot-pegs and then tighten them.
- Tension all straps evenly; the vehicle should be pulled down against its springs with the suspension compressed as much as possible.



## Technology in detail

Riding mode .....	102
Gearshift assistant .....	103
Brake system with BMW Motorrad Integral ABS .....	104
Engine management with BMW Motorrad ASC.....	108
Tyre Pressure Control TPC .....	109

## Riding mode

### Selection

In order to adjust the motorcycle to the road condition, one of 5 riding modes can be selected:

- RAIN
- ROAD (standard mode)
- with Pro riding modes<sup>OE</sup>
- DYNAMIC
- Enduro
- Enduro Pro (if coding plug is installed only)

For each of the 5 riding modes, adapted settings for the ABS and ASC systems and for the throttle response are available.

- with Dynamic ESA<sup>OE</sup>

The Dynamic ESA alignment depends on the selected riding mode as well.

ABS and/or ASC can be switched off in each mode; the following explanations always refer to the activated systems.

### Throttle response

- In RAIN and Enduro modes: restrained
- In ROAD and Enduro Pro modes: direct
- In DYNAMIC mode: dynamic

### ABS

- The rear wheel lift assistant is active in all modes.
- In the RAIN, ROAD and DYNAMIC modes, ABS is aligned to road operation.
- In the Enduro mode, ABS is aligned to off-road operation using street tyres.
- In the Enduro Pro mode, no ABS control is applied to the rear wheel, if the footbrake lever is actuated. ABS is

aligned to off-road operation using massive-bar tyres.

- with ABS Pro<sup>OE</sup>
- In RAIN and ROAD modes, ABS Pro is fully available. The inclination the motorcycle has when braking in curves is reduced to a minimum.
- In DYNAMIC mode, ABS Pro is available. Support is reduced compared to the ROAD riding mode.
- In Enduro mode, ABS Pro is available only to a limited extent.
- In Enduro Pro mode, ABS Pro is inactive.

### ASC

- The front wheel lift assistant is active in all modes.
- In the RAIN, ROAD and DYNAMIC modes, ASC is aligned to road operation.

- In the Enduro, and Enduro Pro modes, ASC is aligned to off-road operation.

- with Dynamic ESA<sup>OE</sup>

### **Dynamic ESA**

- In the RAIN, ROAD and DYNAMIC modes, damping variants HARD, NORMAL and SOFT can be selected.
- RAIN mode default setting: SOFT
- ROAD mode default setting: NORMAL
- DYNAMIC mode default setting: HARD
- In the Enduro and Enduro Pro modes, damping variants HARD and SOFT can be selected.
- Enduro mode default setting: SOFT
- Enduro Pro mode default setting: HARD

### **Switchover**

The driving modes can only be changed while driving under the following condition:

- No drive torque at rear wheel
- No brake pressure in the braking system.

This operating mode is active when the motorcycle is stopped with the ignition switched ON. As an alternative, the following steps must be carried out:

- Turn throttle twist-grip back
- Do not actuate brake lever
- Actuate clutch.

First the desired riding mode is preselected. The switchover does not take place until the affected systems are in the required state.

The selection menu does not disappear in the display until the driving mode has been switched over.

### **Gearshift assistant**

- with Pro shift assistant<sup>OE</sup>

### **Pro Gear Shift Assistant**

Your motorcycle is equipped with a Pro Gear Shift Assistant originally developed for racing but now specially adapted for touring use. It allows you upshift and downshift under almost any load conditions and in virtually all engine-speed ranges without operating the clutch or accelerator.

### **Benefits**

- 70-80 % of all gear changes can be performed without using the clutch.
- Less movement between pilot and pillion due to shorter gear-change intervals.
- Throttle does not have to be closed when changing gear under acceleration.

- During deceleration and downshifts (throttle plate closed) the system blips the throttle to obtain the correct engine speed.
- Shifting times are faster than when the clutch is used to change gears.

For the system to detect the rider's intention to change gear, the previously stationary gear lever must be moved in the desired direction against the force of the spring and with a certain amount of "overtravel" at a standard to rapid travel speed, and then maintained in this position until execution of the shift is completed. No additional increase in shifting force is necessary during the gear shifting process. After the gear change is completed, the gear lever must be fully released before the Pro Gear Shift Assistant can execute a new gear change. The

load factor (throttle grip position) should remain constant both prior to and during execution of shifts using the Pro Gear Shift Assistant. Changing the position of the throttle grip while the shift is in progress can lead to cancellation of the function and/or shifting errors. No support is provided by the Pro Gear Shift Assistant during gear changes made using the clutch.

### Downshifts

- Downshifts are assisted up to the speed at which the engine reaches maximum rpm in the gear to be engaged. Over-revving is thus prevented.



Maximum engine speed

max 9000 min<sup>-1</sup>

### Upshifts

- The Pro Gear Shift Assistant does not provide added support when the engine speed would fall below idle in the new gear.



Idle speed

1150 min<sup>-1</sup> (Engine at operating temperature)

## Brake system with BMW Motorrad Integral ABS

### Partially integral brake

Your motorcycle is equipped with a partially integral brake configuration. Both front and rear brakes are applied simultaneously when you pull the handbrake lever. The footbrake lever acts only on the rear brake.

The BMW Motorrad Integral ABS adapts the braking force distribution between the front and rear wheel brake to the loading of the motorcycle during braking with ABS control.



## ATTENTION

### **Spinning of the rear wheel with the front brake applied (Burn Out) is prevented by the integral function.**

Damage to rear-wheel brake and clutch.

- Do not attempt Burn Outs. ◀

### **How does ABS work?**

The maximum braking force that can be transferred to the road surface is partially dependent on the friction coefficient of the road surface. Gravel, ice, snow and wet roads offer a considerably lower friction coefficient than a dry, clean asphalt surface. The poorer the friction coefficient of

the road surface is, the longer the braking distance will be. If the maximum transferable braking force is exceeded when the rider increases the brake pressure, the wheels begin to lock and driving stability is lost, and a fall can result. Before this situation occurs, ABS is activated and the brake pressure is adjusted to the maximum transferable braking force. This enables the wheels to continue to turn and maintains driving stability regardless of the road surface condition.

### **What happens when rough roads are encountered?**

Bumpy or rough roads can briefly lead to a loss of contact between the tires and the road surface, until the transferable braking force is reduced to zero. If braking is carried out in this sit-

uation, ABS must reduce the brake pressure to ensure driving stability when restoring contact to the road. At this point in time, the BMW Motorrad Integral ABS must assume extremely low friction coefficients (gravel, ice, snow) so that the running wheels turn in every imaginable case and the driving stability is ensured. After detecting the actual conditions, the system adjusts the optimum brake pressure.

### **How is the BMW Motorrad Integral ABS noticeable to the rider?**

If the ABS system must reduce the braking forces due to the conditions described above, then vibrations can be felt at the handbrake lever.

If the handbrake lever is pulled, then braking pressure is built up at the rear wheel with the integral function. If the footbrake lever is

first actuated after this, the brake pressure already built up can be felt earlier than the counter-pressure, than when the footbrake lever is actuated before or together with the handbrake lever.

### Lifting off rear wheel

However, during extremely heavy and rapid deceleration it is possible that the BMW Motorrad Integral ABS will not prevent the rear wheel from lifting off the ground. In these cases, the motorcycle can also flip end over end.



#### WARNING

### Lifting off of the rear wheel due to heavy braking.

Accident hazard

- When braking heavily, bear in mind that the ABS control cannot always be relied on to prevent the rear wheel from lifting off the ground. ◀

## What are the design characteristics of the BMW Motorrad Integral ABS?

The BMW Motorrad Integral ABS ensures driving stability on any surface within the limits of driving physics. The system is not optimized for special requirements resulting under extreme weather conditions offroad or on the racetrack. Handling should be adopted to driving skills and road conditions.

### Special situations

To detect the tendency of the wheels to lock up, the speeds of the front and rear wheel are compared. If implausible values are detected over a longer period of time, the ABS function is deactivated for safety reasons and an ABS fault is indicated. A self-diagnosis routine must be com-

pleted before the error will be displayed.

In addition to problems on the BMW Motorrad Integral ABS, unusual driving conditions can also lead to a fault code:

- Heating up on the main or additional stand at idle or with gear engaged
- Rear wheel locked-up for a longer period of time by engine brake, e.g. when riding downhill on slippery surfaces.

Should a fault code occur due to unusual riding conditions, the ABS function can be reactivated by switching the ignition off and then on again.

## How important is regular maintenance?

### WARNING

#### **Failure to have maintenance performed on the brake system regularly.**

Accident hazard

- To ensure that the ABS is in a properly maintained condition, it is vital that the specified service intervals be observed.◀

#### **Reserves for safety**

But remember: the potentially shorter braking distances which BMW Motorrad Integral ABS permits must not be used as an excuse for careless riding. ABS is primarily a means of ensuring a safety margin in genuine emergencies.

### WARNING

#### **Braking in curves.**

Accident hazard despite ABS.

- The rider is always responsible for adapting his/her driving style.
- Do not reduce the additional safety function with careless riding or unnecessary risks.◀

#### **Further development of ABS to ABS Pro**

– with ABS Pro<sup>OE</sup>

In the past, the BMW Motorrad ABS system provided for a very high level of safety while braking during straight-ahead riding. Now ABS Pro also offers increased safety even when braking in curves. ABS Pro prevents locking-up of the wheels even in case of rapid brake actuation. ABS Pro reduces abrupt changes in steering forces, especially during panic braking, and therefore decreases the risk of unwanted wheelies occurring.

#### **ABS control**

From a technical standpoint, ABS Pro adjusts the ABS control to the angle of inclination of the motorcycle in dependence on the respective riding situation. Signals for the roll and yaw rate and the lateral acceleration are used to determine the inclination of the motorcycle.

With an increasing inclination, the braking pressure gradient is increasingly limited at the start of braking. This results in a slower pressure buildup. In addition, the pressure modulation in the range of the ABS control is more uniform.

#### **Advantages for the driver**

The advantages of ABS Pro for the rider are sensitive response and high braking and riding stability with the best possible deceleration, even in curves.

## Engine management with BMW Motorrad ASC

### How does ASC work?

BMW Motorrad ASC compares the wheel speeds of the front and rear wheels. From the speed difference the slip, and with it the stability reserves on the rear wheel are determined. When a slip limit is exceeded, the engine torque is adapted by the engine management system.

### What are the design characteristics of the BMW Motorrad ASC?

BMW Motorrad ASC is an assistance system for the rider and is designed for riding on public roads. The extent to which the rider affects ASC control can be considerable (weight shifts when cornering, loose luggage on the motorcycle), especially when ap-

proaching the limits imposed by the laws of physics.

The Enduro riding mode should be activated for off-road riding. In this mode the controlling intervention by the ASC is carried out later, enabling controlled drifting. The system is not optimized for the special conditions encountered under extreme weather during off-road and race-track use. BMW Motorrad ASC can be switched off under these conditions.



### WARNING

#### Risky riding style.

Accident hazard despite ASC.

- The rider is always responsible for adapting his/her driving style.
- Do not reduce the system's extra safety margin with careless riding or unnecessary risks. ◀

### Special situations

As lean angles increase, acceleration potential is also progressively restricted by the laws of physics. This can result in delayed acceleration when exiting very tight curves.

The system compares the rotation speeds of the front and rear wheels to detect any tendency for the rear wheel to spin or lose traction. If the system registers implausible data for an extended period of time it will deactivate the function as safety precaution and a display will alert you to error. A self-diagnosis routine must be completed before the error will be displayed.

The following unusual riding conditions may lead to automatic deactivation of BMW Motorrad ASC:

- Driving on the rear wheel (wheelie) for a longer period with ASC deactivated
- Rear wheel spinning in place with front brake engaged (burn out)
- Heating up on the main or additional stand at idle or with gear engaged

Switching the ignition off and on again and then riding the motorcycle at a speed of over 6 mph (10 km/h) reactivates the ASC.

With extremely massive-bar tyres, an ASC intervention can occur before the optimum propulsion is achieved due to the greater slip involved. In these cases the BMW Motorrad ASC should be deactivated.

If the front wheel loses contact to the ground during extreme acceleration, the ASC reduces the engine torque until the front wheel touches the ground again. BMW Motorrad recommends that you respond to this condition by twisting back the throttle grip somewhat to return to stable dynamic operating conditions as quickly as possible.

On a slippery surface, the throttle grip should never be suddenly twisted back completely unless the clutch is disengaged at the same time. The engine's braking torque could cause the rear wheel to lock, resulting in unstable vehicle conditions. This situation cannot be controlled by the BMW Motorrad ASC.

## Tyre Pressure Control TPC

- with Tire Pressure Control (TPC)<sup>OE</sup>

### Function

A sensor is located in each tire, which measures the air temperature and the inflation pressure inside the tire and sends these values to the control unit.

The sensors are equipped with a centrifugal controller, which does not enable the transmission of the measured values until after a speed of approx. 18 mph (30 km/h) is exceeded for the first time. Before initial reception of the tire inflation pressure, -- is shown in the display for each tire. The sensors continue to transmit the measured values for approx. 15 minutes after the vehicle comes to a stop. If a TCP control unit is installed, however the wheels have no

sensors, then a fault code is output.

## Tire inflation pressure ranges

The TCP control unit distinguishes between 3 inflation pressure ranges matched to the motorcycle:

- Inflation pressure within the permissible tolerance
- Inflation pressure at the limits of the permissible tolerance
- Inflation pressure outside the permissible tolerance

## Temperature compensation

The tire inflation pressure is temperature dependent, i.e., it increases or decreases together with the tire temperature. The tire temperature is dependent on the outside temperature and on the driving style and duration.

The tire inflation pressures are shown temperature-compensated in the multifunction display; they refer to a tire temperature of 68 °F (20 °C). No temperature compensation takes place in the inflation pressure testers at filling stations, meaning that the measured tire inflation pressure varies according to tyre temperature. As a result, in most cases the values displayed there do not match the values shown in the multifunction display.

## Adjusting inflation pressure

Compare the TCP/RDC value in the multifunction display with the value on the back cover of the Rider's Manual. The difference between the two values must be compensated with the air pressure tester at the filling station.

Example: According to the Rider's Manual, the tire inflation pressure is to be 36.3 psi (2.5 bar), however 33.4 psi (2.3 bar) is shown in the multifunction display, i.e. it is low by 2.9 psi (0.2 bar). The tester at the filling station indicates 34.8 psi (2.4 bar). This value must be increased by 2.9 psi (0.2 bar) to 37.7 psi (2.6 bar) to produce the correct tire inflation pressure.

## Maintenance

General instructions.....	112
Tool kit .....	112
Engine oil .....	113
Brake system .....	114
Coolant .....	118
Clutch .....	119
Wheel rims and tyres .....	120
Wheels .....	120
Front wheel stand .....	127
Light sources .....	128
Air filter .....	133
Jump-starting.....	134
Battery.....	135
Fuses .....	139

## General instructions

The "Maintenance" chapter describes work involving the checking and replacement of wear parts that can be performed with a minimum of effort.


If special tightening torques are to be taken into account for assembly, these are listed. An overview of all required tightening torques is contained in the chapter "Technical Data".

Further information about maintenance and repair work can be obtained on DVD through your authorized BMW Motorrad retailer.

Special tools and thorough specialized knowledge are required to carry out some of the work. If you are in doubt, consult an authorized workshop, preferably your authorized BMW Motorrad retailer.

## Tool kit

### Onboard toolkit

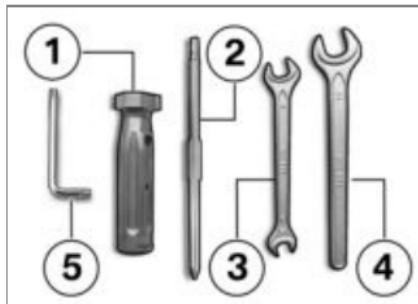

- 1** Screwdriver handle
  - Use with screwdriver bit.
  - Topping up engine oil (▣▶ 114).
- 2** Reversible screwdriver insert
  - Phillips PH1 and Torx T25
  - Remove bulb for front and rear turn indicator (▣▶ 131).
  - Remove battery cover (▣▶ 137).

- 2** – Topping up coolant (▣▶ 119).
- 3** Open-ended wrench  
Wrench size: 8/10 mm
  - Removing battery (▣▶ 137).
- 4** Open-ended wrench  
Wrench size: 14
  - Adjust mirror arm (▣▶ 78).
- 5** Torx wrench T30
  - Lower gear lever adjustment.

## Service tool kit

– with service toolkit<sup>OA</sup>



For more extensive service operations (such as wheel removal and installation), BMW Motorrad has put together a service tool kit matched to your motorcycle. You can purchase this tool kit from your authorized BMW Motorrad retailer.

## Engine oil


### Check engine oil level

#### ATTENTION


**The oil level varies with the temperature of the oil. The higher the temperature, the higher the level of oil in the sump.**

Misinterpretation of the oil capacity

- Only check the oil level after a longer journey or when the engine is warm.◀
- Switch off engine at operating temperature.
- Make sure ground is level and firm and place motorcycle on center stand.
- Wait five minutes to allow oil to drain to the oil pan.

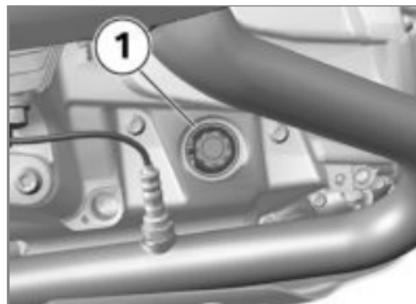

- Read the oil level in the display **1**.

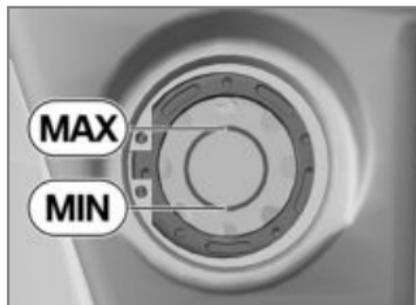

 Specified level of engine oil

between MIN- and MAX mark

If the oil level is below MIN mark:


- Topping up engine oil (➡ 114).

If oil level is above MAX mark:

- Have the oil level corrected at an authorized service facility, preferably an authorized BMW Motorrad retailer.

## Topping up engine oil

- Park the motorcycle, ensuring that the support surface is firm and level.

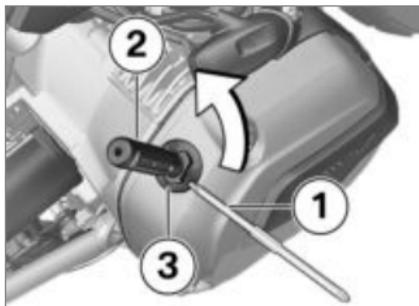

- Wipe area around oil fill location to clean it.

- To be able to apply force more easily, insert the interchangeable screwdriver bit **1**, Torx end first, into the screwdriver handle **2** (from motorcycle toolkit).
- Locate the specified tool from the vehicle toolkit on the oil fill location **3** and turn counter-clockwise.
- Check engine oil level (➡ 113).



### ATTENTION

#### Too little or too much engine oil.

Engine damage

- Always make sure that the oil level is correct.◀
- Add engine oil up to specified level.



Engine oil, quantity for topping up

max 1 quarts (max 0.95 l) (Difference between MIN and MAX)

- Check engine oil level (➡ 113).
- Install cap of oil fill location.

## Brake system

### Checking brake operation

- Actuate the handbrake lever.
  - » Pressure point must be clearly perceptible.
- Actuate the footbrake lever.
  - » Pressure point must be clearly perceptible.

If no clear pressure points are perceptible:



### ATTENTION

#### Improper working on the brake system.

Endangering of the operating safety of the brake system.

- Have all work on the brake system carried out by experts.◀
- Have the brakes checked at an authorized workshop, preferably

an authorized BMW Motorrad retailer.

## Checking front brake pad thickness

- Park the motorcycle, ensuring that the support surface is firm and level.



- Visually inspect left and right brake pads to determine their thickness. Viewing direction: between wheel and front suspension toward brake pads **1**.



 Front brake-pad wear limit

0.04 in (1.0 mm) (Only friction material without carrier plate. Wear markings (grooves) must be clearly visible.)

If the wear indicators are no longer clearly visible:

 **WARNING**

**Dropping below the minimum pad thickness.**

Reduced braking action. Damage to the brake.

- In order to ensure the operating reliability of the brake system, make sure that the brake pads are not worn beyond their minimum thickness. ◀

- Have the brake pads replaced at an authorized service facility, preferably an authorized BMW Motorrad retailer.

## Checking rear brake pad thickness

- Park the motorcycle, ensuring that the support surface is firm and level.



- Conduct a visual inspection of the brake pad thickness. Viewing direction: between splash guard and rear wheel toward brake pads **1**.



Rear brake-pad wear limit

0.04 in (1.0 mm) (Only friction material without carrier plate.)

If wear limit is reached:



### WARNING

#### **Dropping below the minimum pad thickness.**

Reduced braking action. Damage to the brake.

- In order to ensure the operating reliability of the brake system, make sure that the brake

pads are not worn beyond their minimum thickness. ◀

- Have the brake pads replaced by a specialist service facility, preferably an authorized BMW Motorrad retailer.

### **Check front brake fluid level**



### WARNING

#### **Insufficient brake fluid in the brake-fluid reservoir.**

Considerably reduced braking performance caused by air in the brake system.

 
- Check brake fluid level regularly. ◀
- Make sure ground is level and firm and place motorcycle on its center stand.
- Move handlebars into straight-ahead position.



- Check brake fluid level in front brake-fluid reservoir **1**.

#### NOTICE

The brake fluid level in the brake-fluid reservoir drops due to brake pad wear. ◀



Brake fluid, DOT4

The brake fluid level must not fall below the MIN mark. (Brake-fluid reservoir horizontal, motorcycle standing upright)

If brake fluid level falls below the approved level:

- Have the defect corrected as soon as possible by an authorized workshop, preferably an authorized BMW Motorrad retailer.

## Checking rear brake fluid level

### WARNING

#### Insufficient brake fluid in the brake-fluid reservoir.

Considerably reduced braking performance caused by air in the brake system.

- Check brake fluid level regularly. ◀
- Make sure ground is level and firm and place motorcycle on its center stand.



- Check level of brake fluid in rear brake-fluid reservoir **1**.



### NOTICE

The brake fluid level in the brake-fluid reservoir drops due to brake pad wear. ◀



Rear brake fluid level

Brake fluid, DOT4

The brake fluid level must not fall below the MIN mark. (Brake-fluid reservoir horizontal, motorcycle standing upright)

If brake fluid level falls below the approved level:

- Have the defect corrected as soon as possible by an authorized workshop, preferably an authorized BMW Motorrad retailer.

## Coolant

### Checking coolant level



### CAUTION

#### Working on the hot cooling system.


Burn hazard

- Only carry out work on the cooling system when it has cooled down. ◀
- Park motorcycle, ensuring that support surface is firm and level.




- Read off coolant level on expansion tank **1**.
- If coolant level drops below approved level:
- Add coolant.

## Topping up coolant

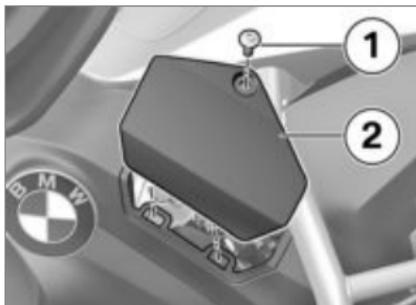


- Remove screw **1** and remove cover **2**.

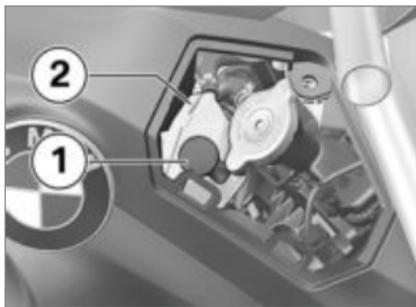

- Open cap **1** of coolant expansion tank **2** and add coolant up to specified level.

- Checking coolant level (→ 118).
- Close cap of coolant expansion tank.

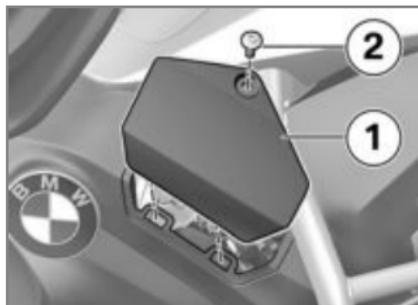

- Place cover **1** in position.
- Install screw **2**.

## Clutch

### Check clutch function

- Pull back the clutch lever.  
» Pressure point must be clearly perceptible.

If no clear pressure point can be felt:

- Have the clutch checked by an authorized workshop, preferably an authorized BMW Motorrad retailer.

## Wheel rims and tyres

### Check wheel rims

- Make sure ground is level and firm and park motorcycle.
- Subject wheel rims to visual inspection for defects.
- Have damaged rims checked and, if necessary, replaced by a specialist service facility, preferably an authorized BMW Motorrad retailer.

### Checking spokes

- Make sure ground is level and firm and park motorcycle.

- Sweep across spokes with a screwdriver handle or similar item, paying attention to the sound that they emit as you proceed.

If the tone does not remain consistent:

- Have spokes checked by an authorized service facility, preferably an authorized BMW Motorrad retailer.

### Checking tire tread depth



#### Riding with heavily worn tyres

Risk of accident due to poorer rideability

- If necessary, replace the tyres before the legally specified minimum tread depth is reached.◀
- Make sure ground is level and firm and park motorcycle.

- Measure tire tread depth in main tread grooves with wear indicators.

 **NOTICE**

Tread wear marks are integrated into the main grooves on every tire. If the tire tread has worn down to the level of the marks, the tire is completely worn. The locations of the marks are indicated on the edge of the tire, e.g. by the letters TI, TWI or by an arrow.◀

When the minimum tread depth is reached:

- Replace the worn tires.

## Wheels

### Tyre recommendation

For every size of tyre, BMW Motorrad has tested and approved certain makes as roadworthy. BMW Motorrad cannot evaluate the suitability of

other tyres, and can therefore take no responsibility for their driving safety.

BMW Motorrad recommends only using the tyres tested and approved by BMW Motorrad. The permissible maximum speed and load capacity figures must be complied with (see "Technical Data").

Observe the notes on maximum speed with studded or winter tyres (►► 85).

Extensive information is available at your authorized BMW Motorrad retailer or on the Internet at "[www.bmw-motorrad.com](http://www.bmw-motorrad.com)".

## **Affect of wheel sizes on suspension control systems**


The wheel sizes play a major role for the ABS and ASC suspension control systems. The diameter and width of the wheels stored

in the control unit have particular significance as the basis for all necessary calculations. A change in these sizes resulting from conversion to wheels not installed as standard equipment can seriously affect the control efficiency of these systems.

The sensor rings required for wheel speed detection must also match the installed control systems and may not be replaced. If you want to equip your motorcycle with different wheels, please contact a specialist service facility, preferably a BMW Motorrad retailer. In some cases the data stored in the control units can be adapted for the new wheel sizes.

## **TPC sticker**

– with Tire Pressure Control (TPC)<sup>OE</sup>

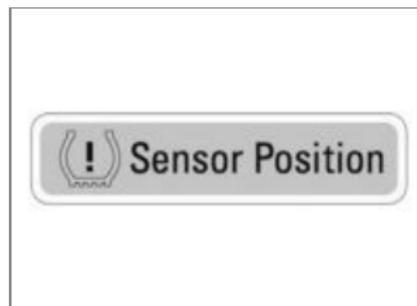

## **ATTENTION**

### **Improper tire removal.**

Damage to the TPC/TPC sensors.


- Inform a specialist service facility or an authorized BMW Motorrad retailer on the fact that the wheel is equipped with a TPC/TPC sensor.◀

On motorcycles equipped with TPC, a corresponding sticker is located on the wheel rim at the position of the TPC sensor. During a tire change it must be ensured that the TPC sen-

sor is not damaged. Inform the BMW Motorrad retailer or the authorized workshop of the TPC sensor.

## Removing front wheel

- Make sure ground is level and firm and place motorcycle on its center stand.

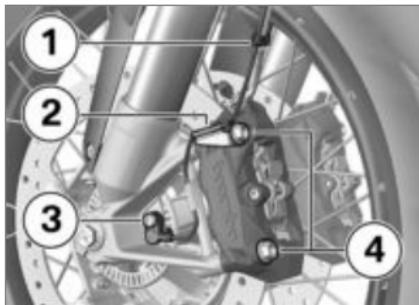

- Detach wheel speed sensor lead from retaining clips **1** and **2**.
- Remove screw **3** and take wheel speed sensor out of bore.

- Mask off areas of wheel rim that could be scratched in the process of removing the brake calipers.




### ATTENTION

#### Pressing together the brake pads with the brake caliper removed.

The brake caliper cannot be mounted over the brake disc.


- Do not actuate the brake lever with the brake caliper removed. ◀
- Remove securing screws **4** of left and right brake calipers.

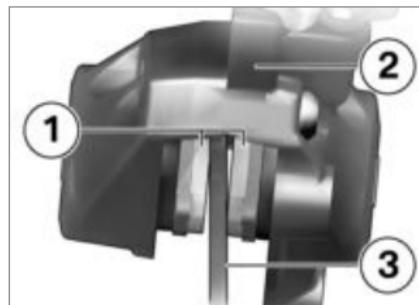

- Push brake pads **1** slightly apart by turning the brake caliper **2** back and forth against the brake rotor **3**.
- Carefully pull brake calipers back and outward to remove them from the brake rotors.
- Raise front of motorcycle, preferably using a BMW Motorrad front wheel stand, continuing until the wheel rotates freely.
- Mounting front wheel stand (▶▶ 127).




- Remove right-hand axle clamping screw **1**.

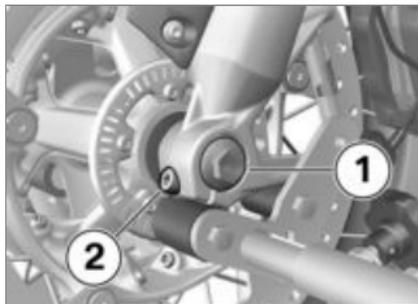

- Remove screw **1**.
- Remove left axle clamping screw **2**.

- Slightly press the quick-release axle inward for a better grip on the right side.

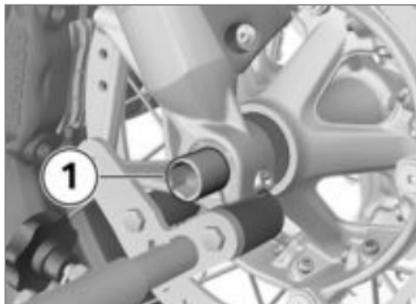

- Pull quick-release axle **1** out while supporting the front wheel.
- Place front wheel down and roll it forward out of the front suspension.



- Remove spacer bushing **1** from the wheel hub.

## Installing front wheel

### WARNING

**Use of a wheel which does not comply with series specifications.**

Malfunctions during control interventions by ABS and ASC.

- Please see the information on the effect of wheel sizes on the ABS and ASC chassis control systems at the beginning of this chapter. ◀

## ATTENTION

### Tightening of screwed connections with incorrect tightening torque.

Damage or loosening of screwed connections.

- Always have the tightening torques checked by a specialized workshop, preferably an authorized BMW Motorrad retailer. ◀




- Mount spacing bushing **1** on left side in wheel hub.

## ATTENTION

### Front wheel installation opposite the running direction.


Accident hazard

- Observe running direction arrows on tire or rim. ◀
- Roll front wheel into front suspension.

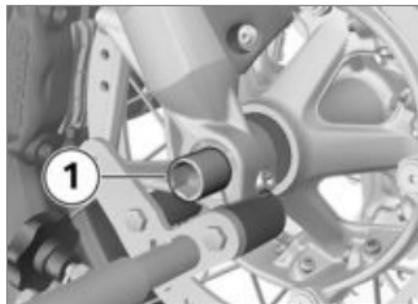

- Lift front wheel and install quick-release axle **1**.
- Remove front wheel stand and firmly compress front forks. Do not actuate handbrake lever at the same time.

- Mounting front wheel stand (→ 127).

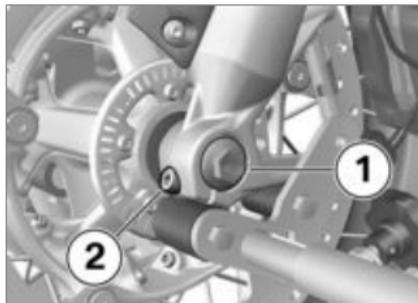

- Install screw **1** with specified torque. Brace quick-release axle on the right side at the same time.



Quick-release axle in telescopic fork

22 lb/ft (30 Nm)

- Tighten left axle clamping screw **2** with appropriate torque.

 Clamping screw for quick-release axle in telescopic fork

14 lb/ft (19 Nm)




- Tighten the right-hand axle clamping screw **1** with the specified torque.

 Clamping screw for quick-release axle in telescopic fork

14 lb/ft (19 Nm)

- Remove front wheel stand.

- Slide the brake calipers on the left-hand and right-hand side onto the brake rotors.

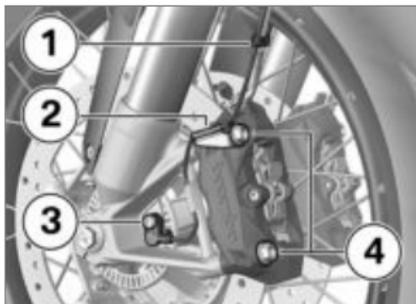

- Install securing screws **4** on left and right with specified torque.

 Brake caliper on telescopic forks

28 lb/ft (38 Nm)

- Remove adhesive tape from wheel rim.

 **WARNING**

**Brake pads do not contact the brake disk.**

Delayed braking action.

- Before driving off, check that the braking effect kicks in without any delay. ◀
- Engage the brakes repeatedly, continuing until the brake pads seat against the rotors.
- Locate wheel speed sensor lead in the retaining clips **1** and **2**.
- Insert wheel speed sensor in bore and install screw **3**.

 Wheel speed sensor on fork

Joint compound: Micro-encapsulated or medium-strength screw lock

6 lb/ft (8 Nm)

## Removing rear wheel


- Make sure ground is level and firm and place motorcycle on its center stand.
- Shift into first gear.

## CAUTION

### Hot exhaust system.

Burn hazard

- Do not touch hot exhaust system. ◀
- Let rear muffler cool down.

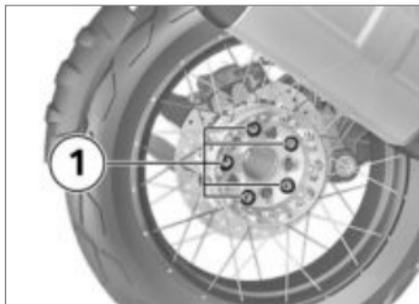

- Remove bolts **1** of rear wheel, holding wheel as you do so.
- Roll rear wheel out toward rear.

## Install rear wheel

### WARNING

#### Use of a wheel which does not comply with series specifications.

Malfunctions during control interventions by ABS and ASC/.

- Please see the information on the effect of wheel sizes on the ABS and ASC chassis control systems at the beginning of this chapter. ◀


### ATTENTION

#### Tightening of screwed connections with incorrect tightening torque.

Damage or loosening of screwed connections.

- Always have the tightening torques checked by a specialized workshop, preferably an authorized BMW Motorrad retailer. ◀

- Place rear wheel on rear wheel support.

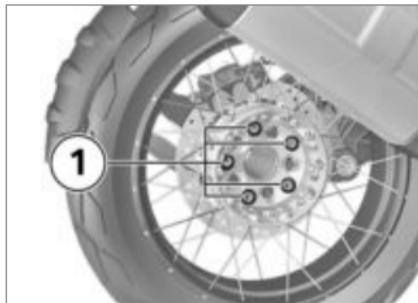

### WARNING

#### Mixed installation of wheel bolts for spoked wheels and cast wheels.

Accident hazard

- Use only wheel bolts with the same permitted length code numbers.
- Do not lubricate the lug bolts. ◀
- Install wheel studs **1** with specified torque.

 Tighten rear wheel on wheel flange

Tightening sequence: tighten diagonally

44 lb/ft (60 Nm)

## Front wheel stand

### Mounting front wheel stand


#### ATTENTION

#### Use of the BMW Motorrad front wheel stand without an additional center or auxiliary stand.

Component damage caused by tipping over.


- Place the motorcycle on the center stand or an auxiliary stand before lifting it with the BMW Motorrad front wheel stand. ◀

- Place motorcycle on the center stand, ensuring that it is resting on a firm and level support surface.
- Use basic stand with front wheel mount. The base stand and its accessories are available through your authorized BMW Motorrad retailer.

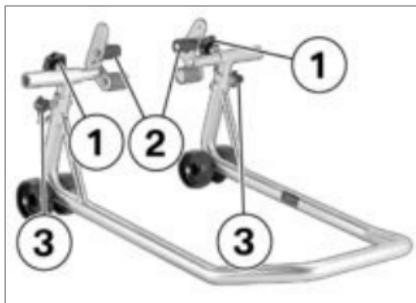


- Loosen screws **1**.
- Push the two mounts **2** outward, continuing until the front suspension fits between them.
- Use locating pins **3** to set front wheel stand to desired height.

- Center front wheel stand relative to front wheel and push it against front axle.

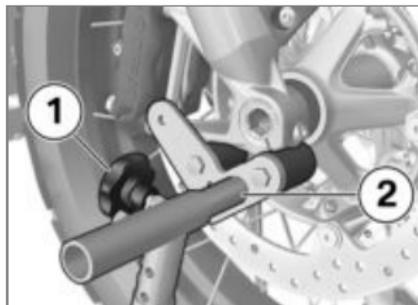

- Align two mounts **2** so that front suspension rests securely on them.
- Tighten screws **1**.

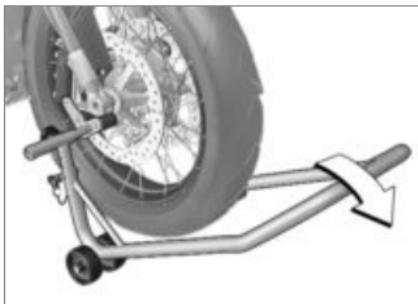**ATTENTION****Lifting off of the main stand if the motorcycle is raised too high.**

Component damage caused by tipping over.

- When raising the motorcycle, make sure that the center stand remains on the ground.◀
- Apply uniform pressure to push front wheel stand down and raise motorcycle.

**Light sources****Replacing low and high-beam light sources in headlight**

– without LED headlights<sup>OE</sup>

**NOTICE**

The alignment of connector, spring wire strap and bulb may differ from that shown in the following illustrations.◀


- Park motorcycle, ensuring that support surface is firm and level.
- Switch off ignition.




- To replace main-beam headlight bulb, remove cover **1** by turning it counterclockwise.



- Remove cover **1** by turning it counterclockwise to replace high-beam headlight bulb.

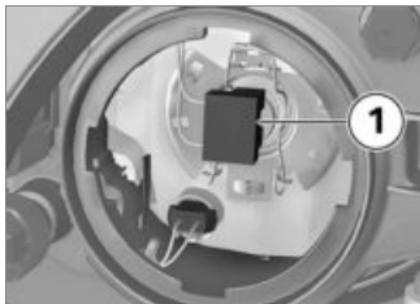

- Disconnect plug **1**.

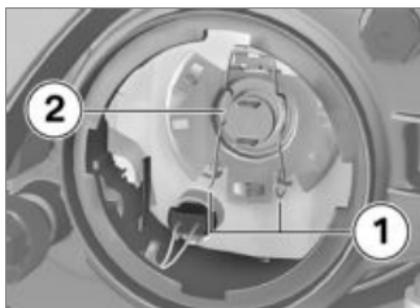

- Remove spring strap **1** from detent and fold to side.
- Remove bulb **2**.

- Replace defective light source.



Bulbs for low-beam  
headlight

H7 / 12 V / 55 W

– with LED headlights<sup>OE</sup>

LED◀




Bulb for high-beam  
headlight

H7 / 12 V / 55 W

– with LED headlights<sup>OE</sup>

LED◀

- To avoid leaving contamination deposits on the new bulb's glass surface, always hold it by its base.

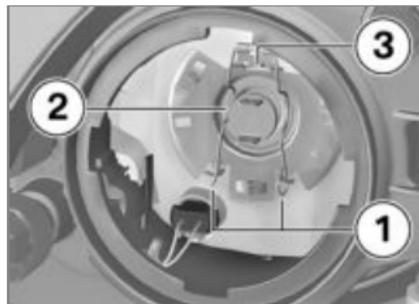


- Insert bulb **2** while ensuring that the lug **3** is in the correct position.



#### NOTICE

The alignment of the bulb may differ from the illustration.◀

- Insert spring clip **1** into catch.

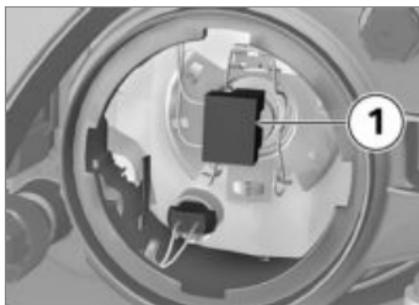

- Connect connector **1**.
- Position cover panel and install it by turning clockwise.


## Replacing parking light light source

– without LED headlights<sup>OE</sup>

- Make sure ground is level and firm and park motorcycle.
- Switch off ignition.



- Remove cover panel **1** by turning counterclockwise.

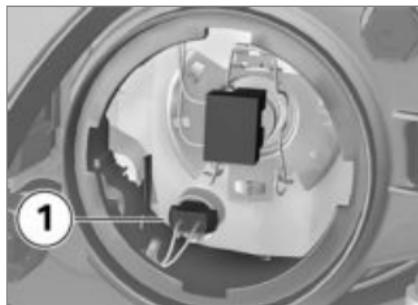

- Remove bulb holder **1** from the headlight housing.



- Remove bulb **1** from the socket.
- Replace defective light source.



Bulb for parking light

W5W / 12 V / 5 W

– with LED headlights<sup>OE</sup>

LED<

- To protect the glass on the new bulb against contamination, always use a clean, dry cloth to hold it; do not touch with bare fingers.



- Insert bulb **1** in bulb socket.



- Insert bulb holder **1** into the headlight housing.
- Position cover panel and install it by turning clockwise.

## Replacing bulb for front and rear turn indicator


- Make sure ground is level and firm and park motorcycle.
- Switch off ignition.



- Remove screw **1**.



- Pull glass on screw connection side out of mirror housing.

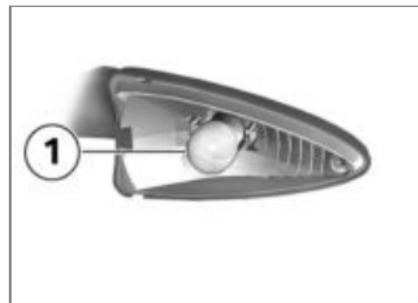

- Remove bulb **1** from mirror housing by turning it counter-clockwise.

- Replace defective light source.


 Bulbs for flashing turn indicators, front

RY10W / 12 V / 10 W


 Bulbs for flashing turn indicators, rear

RY10W / 12 V / 10 W

- To protect the glass on the new bulb against contamination, always use a clean, dry cloth to hold it; do not touch with bare fingers.

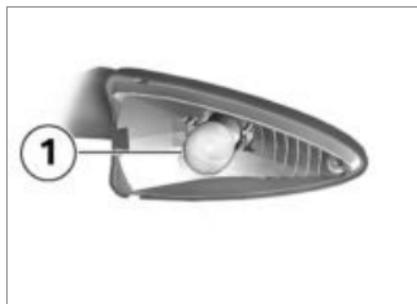

- Fit bulb **1** in mirror housing by turning it clockwise.

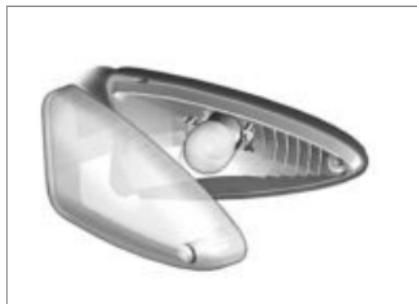

- Locate lens in mirror housing inner side first and close.



- Fit the screw **1**.

### Replacing LED tail light

The LED tail light can only be completely replaced.

- Please contact a specialist service facility for this purpose, preferably an authorized BMW Motorrad retailer.

### Replacing the LED headlight

- with LED headlights<sup>OE</sup>
- LED headlights can be completely replaced only. Please contact a specialist service facility for this purpose,

preferably an authorized  
BMW Motorrad retailer.◁


## Replace additional LED headlight

– with additional LED  
headlight<sup>OA</sup>


The LED additional headlights  
can only be completely replaced;  
it is not possible to replace indi-  
vidual LEDs.

Please contact a specialized  
workshop, preferably an autho-  
rized BMW Motorrad retailer.


## Air filter Replacing air cleaner insert

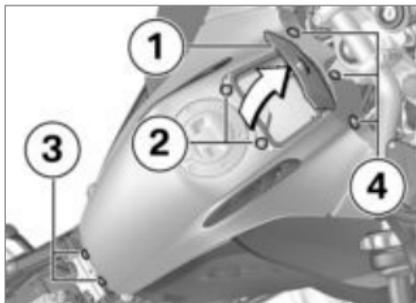

- Remove rider's seat (►► 80).
- Open stow compartment lid **1**.
- Remove screws **2**, **3** and **4**.
- Remove fuel tank cover.

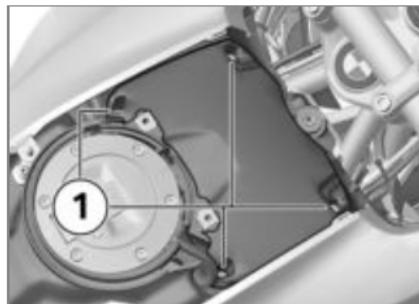


- Remove screws **1**.
- Remove air cleaner housing  
cover.

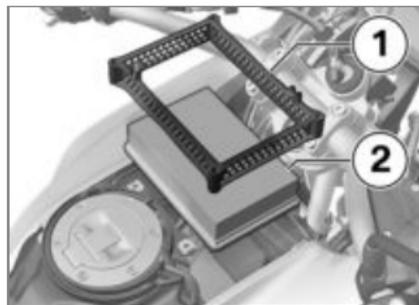


- Remove frame **1** and air filter  
element **2**.
- Insert new air filter element **2**  
and frame **1**.



- Attach air cleaner housing cover.
- Install screws **1**.

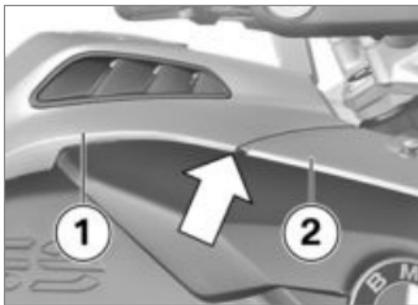

- Place fuel tank cover **1** in position, taking care that the guide **arrowed** is underneath the upper front-wheel fairing **2**.

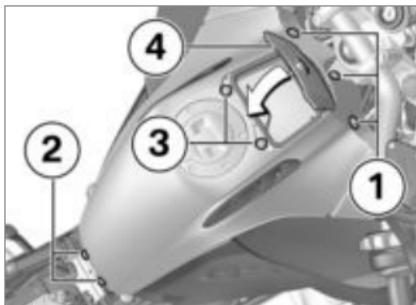

- Install screws **1**, **2** and **3**.
- Close stow compartment lid **4**.
- Install rider's seat (☞ 80).

## Jump-starting



### ATTENTION

#### Current too high when jump-starting the motorcycle

Cable fire or damage to the vehicle electronics

- Do not jump-start the motorcycle using the power socket, only via the battery terminal.◀



### ATTENTION

#### Contact between crocodile clips of jump leads and motorcycle.

Danger of short circuit

- Use jump leads fitted with fully insulated crocodile clips at both ends.◀




### ATTENTION

#### Jump-starting with a voltage higher than 12 V.

Damage to the motorcycle's electronics.

- The battery of the donor vehicle must have a voltage of 12 V.◀
- Park motorcycle, ensuring that support surface is firm and level.
- Remove battery cover (☞ 137).
- Do not disconnect the battery from the onboard electrical sys-

tem when jump-starting the engine.

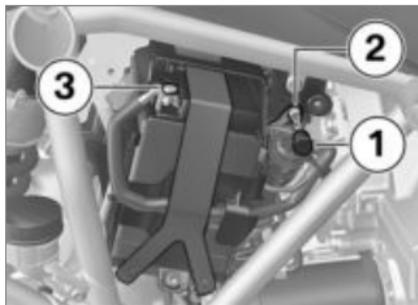

- Remove the protective cap **1**.
- Begin by connecting one end of the red jumper cable to the positive terminal **2** on the discharged battery and the other end to the positive terminal of the donor battery.

#### NOTICE

If the 12 V battery is installed incorrectly, or if the terminals are swapped (e.g. when jump-start-

ing), the fuse for the alternator regulator may blow.◀

- Connect black jumper cable to negative terminal on donor battery and then to negative terminal **3** of discharged battery.
- Run engine of donor vehicle during jump-starting procedure.
- Start engine of vehicle with discharged battery in usual way; if engine does not start, wait a few minutes before repeating attempt in order to protect starter motor and donor battery.
- Allow both engines to idle for a few minutes before disconnecting jumper cables.
- Disconnect jumper lead from negative terminal first, then from positive terminal.

#### NOTICE

To start the engine, do not use start sprays or similar items.◀

- Install the protective cap.
- Installing battery cover (▶▶▶ 139).

## Battery Maintenance instructions

Correct battery maintenance combined with proper charging and storage procedures extends the battery's service life, and is also required for warranty claims. Compliance with the points below is important in order to maximize battery life:

- Keep the surface of the battery clean and dry.
- Do not open the battery.
- Do not top up with water.
- Be sure to read and comply with the instructions for charging.

- ing the battery on the following pages.
- Do not turn the battery upside down.



### ATTENTION

#### Discharging of the connected battery by the vehicle electronics (e.g. clock).

Total discharge of battery leading to a rejection of warranty claims.

- During riding breaks of more than 4 weeks, connect a trickle-charger to the battery.◀



### NOTICE

BMW Motorrad has developed a trickle-charger specially designed for compatibility with the electronics of your motorcycle. Using this charger, you can keep the battery charged during long periods when the motorcycle is not being used without having to dis-

connect the battery from the motorcycle's onboard systems. Additional information is available at your authorized BMW Motorrad retailer.◀

### Charge connected battery



### ATTENTION

#### Charging of the connected battery on the battery terminals.

Damage to the motorcycle's electronics.

- Disconnect the battery before charging on the battery terminals.◀



### ATTENTION

#### Charge a fully discharged battery via the power socket or additional socket.

Damage to the motorcycle's electronics.

- Always charge a fully discharged battery (battery voltage below 9 V; with the ignition switched on, the indicator lights and the multifunction display remain off) directly at the poles of the **disconnected** battery.◀



### ATTENTION

#### Unsuitable chargers connected to the power socket.

Damage to charger and chassis electronics.

- Use suitable BMW chargers. The correct charger is available through your authorized BMW Motorrad retailer.◀
- Charge disconnected battery via onboard socket.



### NOTICE

The motorcycle's onboard electronics know when the battery is fully charged. The onboard

socket is switched off when this happens.◀

- Comply with operating instructions of charger.

## NOTICE

If you are unable to charge the battery via the onboard socket, you may be using a charger that is not compatible with your motorcycle's electronics. In this case, charge the battery directly at the terminals of the disconnected battery.◀


## Charging disconnected battery

- Charge battery using a suitable charger.
- Comply with operating instructions of charger.
- Once battery is fully charged, disconnect charger's terminal clips from battery terminals.

## NOTICE

In the case of longer periods when the motorcycle is not being used, the battery must be recharged regularly. See the instructions for caring for your battery. Always fully recharge the battery before returning it to use.◀


## Removing battery

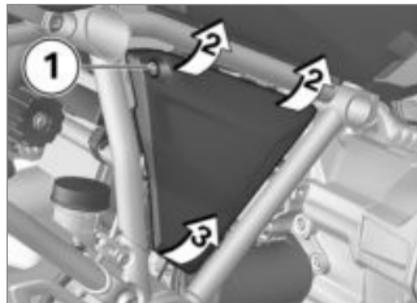

- Switch off ignition.
- Remove screw **1**.
- Pull battery cover at top slightly forward at the positions **2**.

- In order not to damage the battery cover and the mount, remove the battery cover upward at position **3**.

- with anti-theft alarm system (DWA)<sup>OE</sup>
- Switch off anti-theft alarm system if necessary.◀

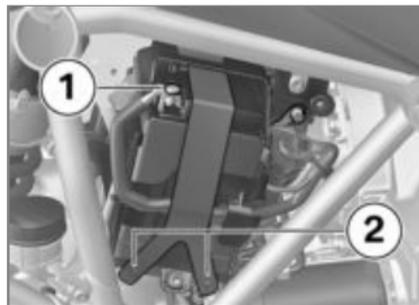

- Remove negative battery cable **1** and rubber strap **2**.



- Pull mounting plate on position **1** outward and remove it upward.
- Slightly lift and remove battery from holder until positive terminal becomes accessible.



- Remove positive cable **1**.

### Install battery



#### NOTICE


If the 12 V battery is installed incorrectly, or if the terminals are swapped (e.g. when jump-starting), the fuse for the alternator regulator may blow. ◀




- Install positive cable **1**.
- Slide battery into holder.




- First, insert mounting plate into supports **1**. Next, press it under the battery at position **2**.

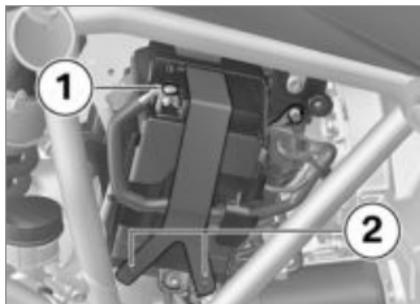

- Fasten negative battery cable **1**.
- Fasten battery with rubber strap **2**.

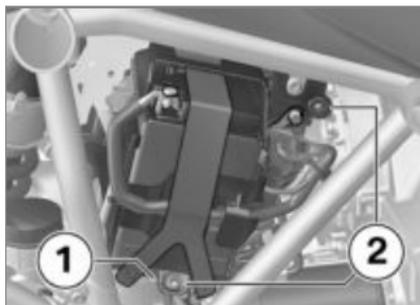


- Insert battery cover into mount **1** and press it into mounts **2**.

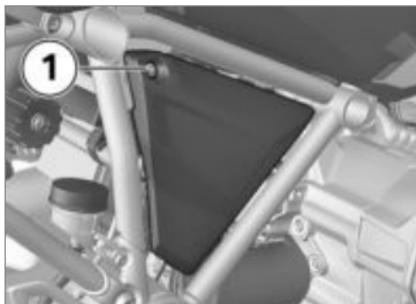

- Install screw **1**.
- Setting the clock (☞ 53).
- Set date (☞ 54).

## Fuses

### Replace fuses

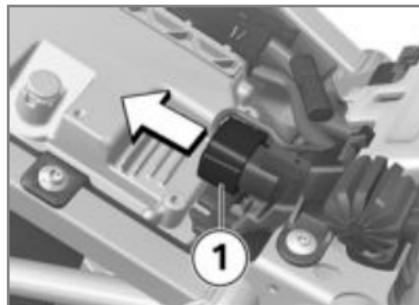

- Switch off ignition.
- Remove rider's seat (☞ 80).
- Disconnect plug **1**.



### ATTENTION

#### **Bypassing defective fuses.**


Risk of short circuit and fire.

- Replace defective fuses with new fuses. ◀
- Consult the fuse assignment diagram and replace the defective fuse.


**NOTICE**

If the fuses blow frequently, have the electrical system checked by an authorized specialized workshop, preferably an authorized BMW Motorrad retailer. ◀

- Install connector **1**.
- Install rider's seat (➡ 80).

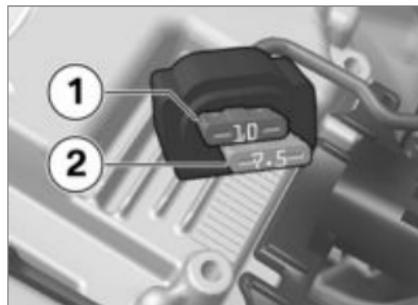**Fuse assignment**

- 1** 10 A  
Instrument cluster  
Anti-theft alarm system (DWA)  
Ignition switch  
Diagnostic socket
- 2** 7.5 A  
Multifunction switch, left  
Tire Pressure Control (TCP)

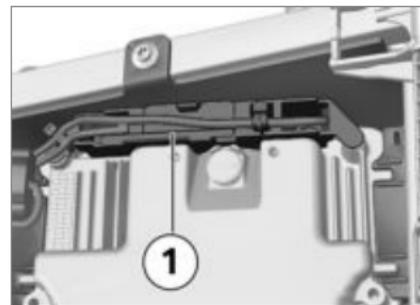**Fuse for alternator regulator**

- 1** 50 A  
Alternator regulator

## **Accessories**

General instructions.....	142
Onboard power sockets .....	142
Navigation system .....	143
Case .....	148
Topcase .....	150

## General instructions



### CAUTION

#### Use of products from other manufacturers.

Safety risk

- BMW Motorrad cannot examine or test each product of outside origin to ensure that it can be used on or in connection with BMW motorcycles without constituting a safety hazard. Nor is this guarantee provided when the official approval of a specific country has been granted. Tests conducted by these instances cannot make provision for all operating conditions experienced by BMW motorcycles and, consequently, they are not sufficient in some circumstances.
- Use only parts and accessories approved by BMW for your motorcycle. ◀

The safety, operation and suitability of the parts and accessory products have been checked extensively by BMW. Therefore, BMW assumes responsibility for these products. BMW shall not be liable for unapproved parts and accessory products of any kind.

Whenever you are planning modifications, comply with all the legal requirements. The vehicle must not violate the regulations governing vehicle approval for highway use applicable in your own country.

Your authorized BMW Motorrad retailer offers you qualified advice in choosing genuine BMW parts, accessories and other products. You will find all BMW Motorrad optional accessories on our website: "[www.bmw-motorrad.com](http://www.bmw-motorrad.com)".

## Onboard power sockets

### Connection of electrical devices

- The ignition must be switched on before electrical devices connected to the power sockets can be operated.

### Cable routing

- The cables from the onboard sockets to the auxiliary devices must be routed in such a way that they do not impede the rider.
- Cable routing must not restrict the steering angle and the handling characteristics.
- Cables must not be trapped.

### Automatic deactivation

- The onboard sockets are automatically switched off during starting.
- These sockets are switched off approx. 15 minutes after

switching off the ignition to reduce the strain on the onboard electrical system. Additional devices with low power consumption are possibly not detected by the vehicle electronics. In these cases, onboard sockets are already switched off shortly after the ignition is switched off.

- In case of insufficient battery voltage, the onboard sockets are switched off to maintain the ability to start the motorcycle.
- If the maximum loadability specified in the technical data is exceeded, the onboard sockets are switched off.

## Navigation system

- with preparation for navigation system<sup>OE</sup>


## Securely fastening navigation device

### NOTICE


The navigation preparation is suitable for the BMW Motorrad Navigator IV and the BMW Motorrad Navigator V. ◀

### NOTICE

The locking system of the Mount Cradle offers no protection against theft. Remove the navigation system and store in a safe place after every drive. ◀

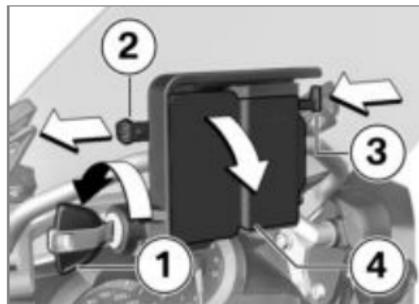

- Turn ignition key **1** counter-clockwise.
- Pull shut-off lock **2** to **left**.
- Press in locking device **3**.
- » Mount Cradle is unlocked and cover **4** can be removed with a rotating movement toward front.

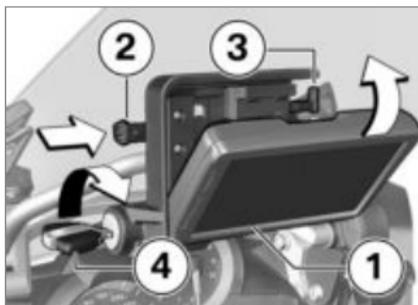

- Mount navigation device **1** in lower area and swing toward rear with a rotating movement.
  - » Navigation device audibly engages.
- Slide shut-off lock **2** completely to **right**.
  - » Locking device **3** is locked.
- Turn ignition key **4** clockwise.
  - » Navigation device is locked and ignition key can be removed.


## Removing navigation device and installing cover

### ATTENTION

#### Dust and dirt on contacts of the Mount Cradle.


Damage to the contacts.

- Reinstall the cover after end of each drive. ◀

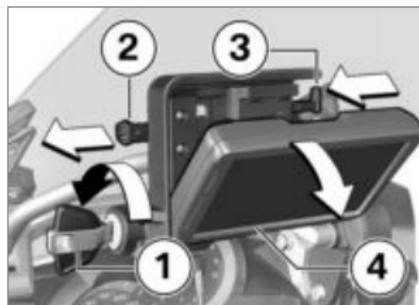

- Turn ignition key **1** counter-clockwise.
- Pull shut-off lock **2** completely to **left**.
  - » Locking device **3** is unlocked.

- Slide locking device **3** completely to **left**.
  - » Navigation device **4** is unlocked.
- Remove navigation device **4** downward with a tilting movement.

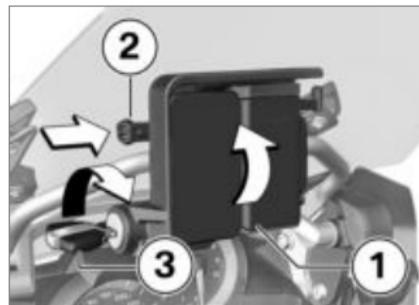

- Mount cover **1** in lower area and swing upward with a rotating movement.
  - » Cover audibly engages.
- Slide shut-off lock **2** to **right**.
- Turn ignition key **3** clockwise.
  - » Cover **1** is secured.

## Operating the navigation system

### NOTICE

The following description refers to the Navigator V. The Navigator IV does not offer all options described. ◀

### NOTICE

Only the latest version of the BMW Motorrad communication system is supported. A software update may be required for the BMW Motorrad communication system. In this case, please contact your authorized BMW Motorrad retailer. ◀

If BMW Motorrad Navigator is installed, some of its functions can be directly operated from the handlebars using the Multi-Controller.



The Multi-Controller is operated using six motions:

- Turning up and down.
- Short actuation to the left and right.
- Long actuation to the left and right.

Turning the Multi-Controller increases or decreases the volume of a BMW Motorrad communication system connected via Bluetooth on the Compass and Mediaplayer page.

Menu items on the BMW special menu are selected by turning the Multi-Controller.

Short actuation of the Multi-Controller to the left respectively to the right switches between the main pages of the Navigator:

- Map view
- Compass
- Mediaplayer
- BMW special menu
- My motorcycle page

Long actuation of the Multi-Controller corresponds to the activation of certain functions on the Navigator display. These functions are marked with a right arrow or a left arrow above the corresponding touch field.

 The function is triggered by long actuation to the right.

 The function is triggered by long actuation to the left.

In detail, the following functions can be operated:

### Map view

- Turning upward: Increase size of map section (Zoom in).
- Turn downward: Zoom out map section (Zoom out).

### Compass page

- Turning increases or reduces volume of a BMW Motorrad communication system connected via Bluetooth.

### BMW special menu

- Speak: Repeat last navigation announcement.
- Way point: Save current way point as favorite.
- Navigate home: Starts navigation to the home address (is grayed-out if no home address is set).
- Mute: Switch automatic navigation announcements (off: the top line in the display shows

a crossed-out lip icon). Navigation announcements can still be output via "Speak". All other sound outputs remain switched on.

- Switching off display: Switch off display.
- Call home: Calls the phone number stored in the navigator (only displayed when a phone is connected).
- Detour: Activates the detour function (only displayed if a route is active).
- Skip: Skips the next way point (only displayed if route is provided with way points).

### My Motorcycle

- Turn: Changes the number of data displayed.
- Touching a data field on the display opens a menu for selecting the data.

- The values available for selection are dependent on the optional extras installed.



### NOTICE

The Medioplayer function is only available when using a Bluetooth device in accordance with the A2DP standard, e.g. a BMW Motorrad communication system. ◀

### Medioplayer

- Long actuation to left: Play previous title.
- Long actuation to right: Play next title.
- Turning increases or reduces volume of a BMW Motorrad communication system connected via Bluetooth.

## Warning and status messages



Warning and status displays of the motorcycle are indicated with a corresponding icon **1** at the upper left on the map view.

### NOTICE

If a BMW Motorrad communication system is connected, an acoustic signal is also sounds in case of a warning. ◀

If several warning messages are active, the number of messages is indicated below the warning triangle.

A list of all warning messages is opened by pressing on the warning triangle with more than one message.

Additional information is displayed when a message is selected.

### NOTICE

Detailed information cannot be displayed for all warnings. ◀

## Special functions

Due to integration of the BMW Motorrad Navigator, there are a number of differences from the descriptions in the instruction manual for the Navigator.

### Reserve fuel level warning

The settings for the fuel gauge are not available, as the reserve warning is being transferred from the vehicle to the Navigator. If the message is active, the nearest filling stations are displayed when the message is pressed.

## Time and Date

The Navigator sends the time and date to the motorcycle. Transfer of this data into the instrument cluster must be activated in the **SETUP** menu of the instrument cluster.

## Security settings

The BMW Motorrad Navigator V can be secured against unauthorized use with a four-digit PIN (Garmin Lock). When this function is activated, once the Navigator GPS receiver is cradled on the motorcycle and the ignition is switched on you will receive a prompt asking whether the motorcycle should be added to the list of secure vehicles. If you answer "Yes" to this question, the Navigator saves the vehicle identification number (VIN) of this motorcycle in its internal memory.

A maximum of five VINs can be saved in this way.

When the Navigator is subsequently switched on by switching on the ignition on one of those motorcycles, entry of the PIN is no longer necessary.

If the Navigator is removed from the motorcycle while switched on, a security prompt asking for the PIN to be entered is issued.

### Screen brightness


Screen brightness is adjusted by the motorcycle while the unit is cradled. No manual input is necessary.

The automatic setting can be switched off in the display settings in the Navigator if desired.

## Case

### Open case

– with aluminum case<sup>OA</sup>

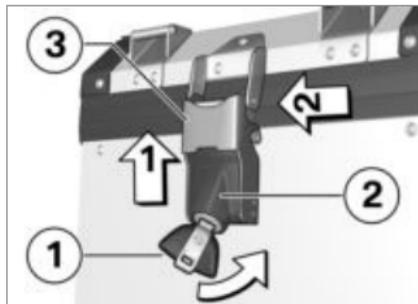

- Turn key **1** counterclockwise.




### NOTICE

The case cover can be opened with both the left and the right latch. ◀

- Press lock housing **2** upward to release locking claw **3**.
- Pull locking claw **3** to side and open cover lid.

### Closing case

– with aluminum case<sup>OA</sup>

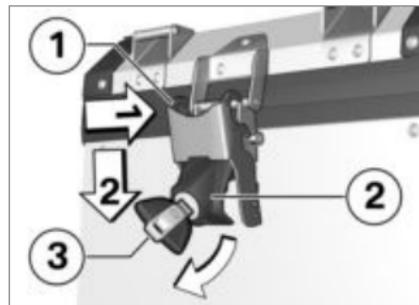

- Close case lid.
- Position locking claw **1** on lid.
- Press lock housing **2** downward while making sure that claw grips into lid.
- To lock, turn key **3** clockwise and remove.

### Remove case lid

– with aluminum case<sup>OA</sup>

- Open case (▣▣▣ 148).



- Detach lid retaining cable **1**.
- Close case lid.
- Open second latch of case lid.
- Remove case lid.

### Install case lid

– with aluminum case<sup>OA</sup>


- Lay case lid on case.
- Close one lock of case lid.
- Open case lid toward closed side.



- Hook in lid retaining cable **1**.
- Close case lid.
- Close second lock of case lid.

### Remove case


– with aluminum case<sup>OA</sup>

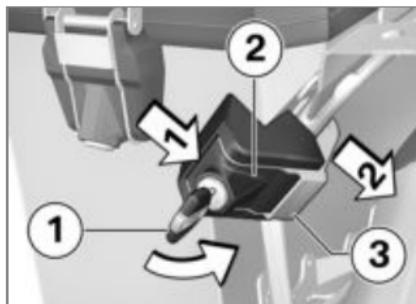


- Turn key **1** counterclockwise.
- Press lock housing **2** to side to release locking claw **3**.
- Pull locking claw **3** to side while holding case in place.
- Pull case forward as far as possible and remove to side.

### Mount case

– with aluminum case<sup>OA</sup>

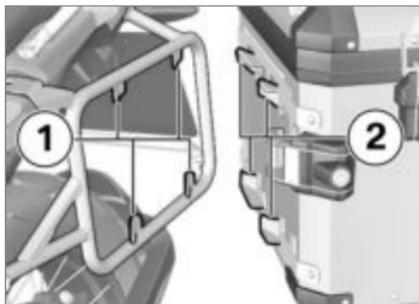

- Position pannier on pannier rack and slide rearwards so that the tabs on the pannier rack **1** engage with the lugs on the pannier **2**.

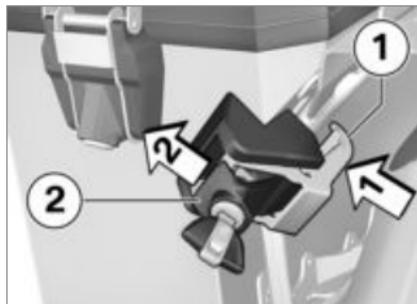

- Position locking claw **1** on case carrier while holding case in place.
- Press lock housing **2** to side while ensuring that claw grips around bracket.
- Turn key clockwise and remove.

### Maximum payload and maximum speed

Observe maximum payload and maximum speed as indicated on label in case.

If you cannot find your combination of vehicle and case on

the label, contact your BMW Motorrad Retailer.

The following values apply to the combination described here:



Maximum speed for riding with aluminum case

max 112 mph (max 180 km/h)




Payload per aluminum case

max 22 lbs (max 10 kg)

## Topcase

### Opening topcase


– with aluminum Topcase<sup>OA</sup>

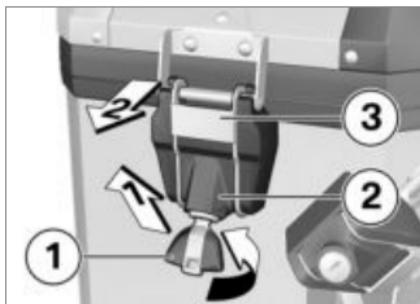

- Turn key **1** counterclockwise.
- Press lock housing **2** upward to release locking claw **3**.
- Pull locking claw **3** toward rear and open lid.

### Close topcase


– with aluminum Topcase<sup>OA</sup>

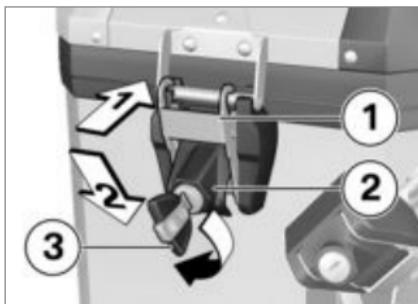

- Close topcase lid.
- Position locking claw **1** on lid.
- Press lock housing **2** downward while making sure that claw grips into lid.
- To lock lock, turn key **3** clockwise and remove.

### Remove topcase


– with aluminum Topcase<sup>OA</sup>

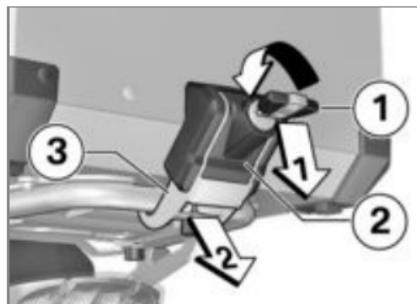


- Turn key **1** counterclockwise.
- Press lock housing **2** downward to release locking claw **3**.
- Pull locking claw **3** back.
- First pull topcase toward rear and then remove upward.

### Mounting topcase

– with aluminum Topcase<sup>OA</sup>

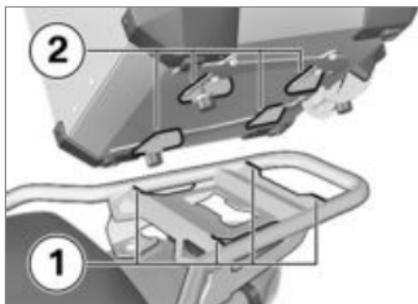

- Position topcase on topcase rack and slide forward so that tabs on topcase rack **1** engage with lugs on topcase **2**.

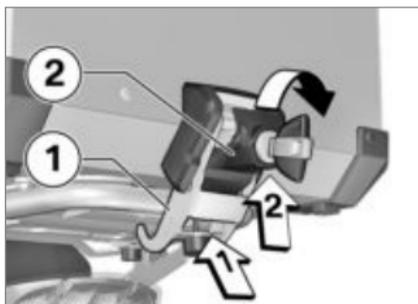

- Position locking claw **1** on topcase carrier.

- Press lock housing **2** upward while making sure that claw grips around carrier.
- To lock lock, turn key clockwise and remove.

### Maximum payload and maximum speed

Observe maximum payload and maximum speed as indicated on label in the topcase.

If you cannot find your combination of vehicle and topcase on the label, contact your BMW Motorrad Retailer.

The following values apply to the combination described here:



Maximum speed for riding with aluminum topcase

max 112 mph (max 180 km/h)



Payload of aluminum topcase

max 11 lbs (max 5 kg)

## Care

Care products .....	154
Washing your motorcycle .....	154
Cleaning sensitive motorcycle parts .....	155
Paint care .....	156
Store motorcycle .....	156
Protective wax coating .....	156
Return motorcycle to use .....	157

## Care products

BMW Motorrad recommends that you use cleaning and care products available at your authorized BMW Motorrad retailer. BMW CareProducts have been materials tested, laboratory tested, and field tested and provide optimum care and protection for the materials used in your vehicle.



### ATTENTION

#### Use of unsuitable cleaning and care agents.

Damage to motorcycle parts.

- Do not use any solvents such as nitro thinners, cold cleaners, fuel or similar, and do not use cleaning agents that contain alcohol. ◀

## Washing your motorcycle

BMW Motorrad recommends that you use BMW Insect Remover to soften and wash off insects and stubborn dirt from painted parts before washing the motorcycle.

To prevent stains, do not wash the motorcycle immediately after it has been exposed to bright sunlight and do not wash it in the sun.

Make sure that the motorcycle is washed frequently, especially during the winter months.

To remove road salt, clean the motorcycle with cold water immediately after completion of every trip.



### WARNING

**Damp brake disks and brake pads after washing the mo-**

**torcycle, after riding through water or in the rain.**

Poorer braking action.

- Brake early until the brake rotors and brake pads are dry. ◀



### ATTENTION

#### Increased effect of salt caused by warm water.

Corrosion

- Only use cold water to remove road salt. ◀



### ATTENTION

#### Damage caused by high water pressure from high-pressure cleaners or steam-jet devices.

Corrosion or short-circuit, damage to seals, to hydraulic brake system, to the electrical system and the seat.

- Exercise caution when using high-pressure or steam-jet devices. ◀



## NOTICE

Cases and topcases made of aluminum have no surface coating. The best possible appearance is preserved with the following care: Remove road salt and corrosive deposits immediately with cold water after completing the trip. ◀

## Cleaning sensitive motorcycle parts

### Plastics



## ATTENTION

### Use of unsuitable cleaning agents.

Damage to plastic surfaces.

- Do not use abrasive cleaners or cleaners containing alcohol or solvents.

- Do not use insect sponges or sponges with a hard surface. ◀

### Fairings and panels

Clean fairings and panels with water and BMW plastic cleaner.

### Windshields and lenses are manufactured in plastic

Clean off dirt and insects with a soft sponge and plenty of water.



## NOTICE

Soften stubborn dirt and dead insects by covering the affected areas with a wet cloth. ◀



Clean with water and sponge only.



Do not use chemical cleansers.

## Chrome

Especially in the case of road salt, carefully clean chrome parts with plenty of water and BMW auto shampoo. Use chrome polish for additional treatment.

## Radiator

Clean the radiator regularly to prevent overheating of the engine due to inadequate cooling. For example, use a garden hose with low water pressure.



## ATTENTION

### Radiator fins bend easily.

Damage to radiator fins.

- When cleaning, ensure that the cooler fins are not bent. ◀

## Rubber parts

Treat rubber components with water or BMW rubber protection coating agent.



## ATTENTION

### Use of silicone sprays for care of rubber seals.

Damage to rubber seals.

- Do not use silicone sprays or care products that contain silicone. ◀

### Paint care

Washing the vehicle on a regular basis will help prevent long-term damage from harmful substances, and is especially important when your vehicle is used in areas with high levels of air pollution or where natural contaminants such as tree resin and pollen are present.

However, remove particularly aggressive substances (spilled fuel, oil grease, brake fluid as well as bird droppings) immediately; otherwise changes in the paint or discolorations may occur.

BMW Motorrad recommends BMW car polish or BMW paint cleaner for the purpose. Contamination on the paint finish is particularly easy to see after the vehicle has been washed. Remove this type of soiling with cleaning naphtha or spirit on a clean cloth or cotton ball. BMW Motorrad recommends using BMW tar remover for removing tar spots. Then add a protective wax coating to the paint at these locations.

### Store motorcycle

- Clean motorcycle.
- Completely fill the motorcycle's fuel tank.
- Removing battery (▶▶▶ 137).
- Spray the brake and clutch lever, and the center and side stand pivots with a suitable lubricant.

- Protect metal and chrome-plated parts with an acid-free grease (Vaseline).
- Store the motorcycle in a dry room, raising it to remove the weight from both front wheels (preferably using the front and rear-wheel stands offered by BMW Motorrad).

### Protective wax coating

Paint must be protected, if water no longer pearls up on it. To preserve the finish of your vehicle, BMW Motorrad recommends BMW Car Wax or agents that contain carnauba or synthetic waxes.

## Return motorcycle to use

- Remove the protective wax coating.
- Clean motorcycle.
- Install battery (▣▣▣▶ 138).
- Observe checklist (▣▣▣▶ 86).



## Technical Data

Troubleshooting chart .....	160
Threaded fasteners .....	161
Engine .....	163
Fuel.....	164
Engine oil .....	165
Clutch .....	165
Transmission .....	166
Rear-wheel drive.....	167
Suspension .....	167
Brakes .....	168
Wheels and tyres .....	169
Electrical system.....	171
Frame .....	172
Alarm system .....	173
Dimensions .....	173

Weights.....	175
Performance data.....	175



## Threaded fasteners

Front wheel	Value	Valid
<b>Brake caliper on telescopic forks</b>		
M10 x 65	28 lb/ft (38 Nm)	
<b>Clamping screw for quick-release axle in telescopic fork</b>		
M8 x 35	14 lb/ft (19 Nm)	
<b>Wheel speed sensor on fork</b>		
M6 x 16 Micro-encapsulated or medium-strength screw lock	6 lb/ft (8 Nm)	
<b>Quick-release axle in telescopic fork</b>		
M12 x 20	22 lb/ft (30 Nm)	
Rear wheel	Value	Valid
<b>Tighten rear wheel on wheel flange</b>		
M10 x 1.25 x 40	<b>Tighten diagonally</b>	
	44 lb/ft (60 Nm)	

<b>Mirror arm</b>	<b>Value</b>	<b>Valid</b>
<b>Mirror (locknut) on adapter</b>		
Left-hand thread, M10 x 1.25	16 lb/ft (22 Nm)	
<b>Adapter on clamping block</b>		
M10 x 14 - 4.8	18 lb/ft (25 Nm)	
<b>Handlebars</b>	<b>Value</b>	<b>Valid</b>
<b>Clamping block (handlebar clamp) on fork bridge</b>		
M8 x 35	<b>Tighten on block in front (in the direction of travel)</b>	
	14 lb/ft (19 Nm)	

## Engine

Engine number location	Lower right of engine block beneath the starter
Engine type	122EN
Engine design	Air/liquid-cooled two-cylinder, four-stroke opposed-twin engine with two spur gear-driven overhead camshafts and one counterbalance shaft
Displacement	1170 cc (1170 cm <sup>3</sup> )
Cylinder bore	4 in (101 mm)
Piston stroke	2.9 in (73 mm)
Compression ratio	12.5:1
Rated output	125 hp (92 kW), at engine speed: 7750 min <sup>-1</sup>
Torque	92 lb/ft (125 Nm), at engine speed: 6500 min <sup>-1</sup>
Maximum engine speed	max 9000 min <sup>-1</sup>
Idle speed	1150 min <sup>-1</sup> , Engine at operating temperature

**Fuel**

Recommended fuel quality	Super unleaded (max. 10 % ethanol, E10) 89 AKI (95 ROZ/RON) 89 AKI
Alternative fuel quality	Regular unleaded (restrictions with regard to power and fuel consumption. If the engine should for example be operated with 91 RON in countries with lower fuel quality, the motorcycle must be respectively programmed first by your authorized BMW Motorrad retailer.) (max. 10 % ethanol, E10) 87 AKI (91 ROZ/RON) 87 AKI
Usable fuel quantity	Approx. 7.9 gal (Approx. 30 l)
Reserve fuel quantity	Approx. 1.1 gal (Approx. 4 l)
Emission standard	EU 3

## Engine oil

Engine oil, capacity	max 1.1 gal (max 4 l), with filter replacement
Specification	SAE 5W-40, API SL/JASO MA2, Additives (for instance, molybdenum-based substances) are prohibited, because they would attack the coatings on engine components, BMW Motorrad recommends BMW Motorrad ADVANTEC Ultimate Oil
Engine oil, quantity for topping up	max 1 quarts (max 0.95 l), Difference between MIN and MAX

**BMW recommends** **ADVANTEC**  
ORIGINAL BMW ENGINE OIL

## Clutch

Clutch design	Multi-disk oil-bath clutch, slipper clutch
---------------	--

## Transmission

Transmission design	Dog-engagement 6-speed transmission with helical gears
Transmission gear ratios	1.000 (60:60 teeth), Primary gear ratio 1.650 (33:20 teeth), Transmission input ratio 2.438 (39:16 teeth), 1st gear 1.714 (36:21 teeth), 2nd gear 1.296 (35:27 teeth), 3rd gear 1.059 (36:34 teeth), 4th gear 0.943 (33:35 teeth), 5th gear 0.848 (28:33 teeth), 6th gear 1.061 (35:33 teeth), Transmission output ratio

## Rear-wheel drive

Type of final drive	Shaft drive with bevel gears
Type of rear suspension	Cast-aluminum single swing arm with BMW Motorrad paralever
Gear ratio of final drive	2.91 (32:11 teeth)

## Suspension

### Front wheel

Type of front suspension	BMW Telelever, upper fork bridge tilt decoupled, leading link mounted in engine and on telescopic fork, centrally positioned spring strut supported on leading link and frame
Design of the front-wheel suspension	Central spring strut with coil spring
– with Dynamic ESA <sup>OE</sup>	Central spring strut with coil spring and expansion tank, electrically adjustable rebound-stage and compression damping
Spring travel, front	8.3 in (210 mm), on wheel

**Rear wheel**

Type of rear suspension	Cast-aluminum single swing arm with BMW Motorrad paralever
Type of rear suspension	Central spring strut with coil spring, adjustable rebound-stage damping and spring preload
– with Dynamic ESA <sup>OE</sup>	Central spring strut with coil spring and expansion tank, electrically adjustable rebound-stage and compression damping, electrically adjustable spring preload
Spring travel at rear wheel	8.7 in (220 mm)

**Brakes**

Type of front brake	Hydraulically operated double disc brakes with 4-piston radial monobloc calipers and floating brake discs
Brake-pad material, front	Sintered metal
Front brake-disk thickness	min 0.16 in (min 4 mm), Wear limit
Free travel of brake actuation (Front wheel brake)	Approx. 0.07 in (Approx. 1.85 mm), at piston
Type of rear brake	Hydraulically operated disc brake with 2-piston floating caliper and fixed brake disc
Brake-pad material, rear	Organic

Rear brake-disk thickness	min 0.18 in (min 4.5 mm), Wear limit
Free travel of brake actuation (Rear wheel brake)	Approx. 0.04 in (Approx. 1 mm), at piston

## Wheels and tyres

Recommended tire combinations	An overview of the current tire approvals is available from your authorized BMW Motorrad retailer or on the Internet at <a href="http://bmw-motorrad.com">bmw-motorrad.com</a> .
Speed category of front/rear tires	V, minimum requirement: 149 mph (240 km/h)

### Front wheel

Front wheel design	Cross spoke wheel
Front-wheel rim size	3.0"x19"
Front tire designation	120/70 - 19
Load index for front tire	At least 54
Permissible front-wheel imbalance	max 0.2 oz (max 5 g)
Front wheel load at unladen weight	295 lbs (134 kg)
Permissible front wheel load	max 381 lbs (max 173 kg)
Permissible front-wheel imbalance	max 0.2 oz (max 5 g)

**Rear wheel**

Rear wheel design	Cross spoke wheel
Rear-wheel rim size	4.50"x17"
Rear tire designation	170/60 - 17
Load index for rear tire	At least 71
Permissible rear-wheel imbalance	max 1.6 oz (max 45 g)
Rear wheel load at unladen weight	278 lbs (126 kg)
Permissible rear wheel load	max 677 lbs (max 307 kg)

**Tire inflation pressures**

Tire pressure, front	36.3 psi (2.5 bar), with tire cold
Tire pressure, rear	42.1 psi (2.9 bar), with tire cold

## Electrical system

Electrical rating of onboard sockets	max 5 A, all onboard sockets together
Fuse carrier 1	10 A, Slot 1: instrument cluster, anti-theft alarm system (DWA), ignition lock, diagnostic socket 7.5 A, Slot 2: left multifunction switch, Tire Pressure Control (TCP)
Fuse carrier	50 A, Fuse 1: Voltage regulator

### Battery

Battery design	AGM (Absorptive Glass Mat) battery.
Battery voltage	12 V
Battery capacity	12 Ah

### Spark plugs

Spark plugs, manufacturer and designation	NGK LMAR8D-J
Electrode gap of spark plug	0.03±0.01 in (0.8±0.1 mm), New 0.04 in (1.0 mm), Wear limit

### Bulbs

Bulb for high-beam headlight	H7 / 12 V / 55 W
– with LED headlights <sup>OE</sup>	LED
Bulbs for low-beam headlight	H7 / 12 V / 55 W
– with LED headlights <sup>OE</sup>	LED

Bulb for parking light	W5W / 12 V / 5 W
– with LED headlights <sup>OE</sup>	LED
Bulb for taillight/brake light	LED
Bulbs for flashing turn indicators, front	RY10W / 12 V / 10 W
Bulbs for flashing turn indicators, rear	RY10W / 12 V / 10 W

## Frame

Frame design	Steel-tube frame with partially self-supporting drive unit, steel-tube rear frame
Location of type plate	Frame at front right (next to spring strut)
Location of the vehicle identification number	Frame at front right on steering head

## Alarm system

– with anti-theft alarm system (DWA)<sup>OE</sup>

Activation time	Approx. 30 s
Alarm duration	Approx. 26 s
Battery type	CR 123 A

## Dimensions

Motorcycle length	88.8 in (2255 mm), above luggage rack
Motorcycle height	57.1 in (1450 mm), windshield in highest position
– with lowered suspension <sup>OE</sup>	55.5 in (1410 mm), windshield in highest position
Motorcycle width	37.5 in (952 mm), across mirrors 38.6 in (980 mm), across hand protectors
Rider's seat height	35...35.8 in (890...910 mm), without rider at unladen weight
– with low seat <sup>OA</sup>	33.1...33.9 in (840...860 mm), without rider at unladen weight
– with Rally seat <sup>OA</sup>	35.2 in (895 mm), without rider at unladen weight
– with lowered suspension <sup>OE</sup>	33.1...33.9 in (840...860 mm), without rider at unladen weight

<ul style="list-style-type: none"> <li>– with lowered suspension<sup>OE</sup></li> <li>– with black seat<sup>OE</sup></li> </ul>	32.3...33.1 in (820...840 mm), without rider at unladen weight
Rider's inside-leg arc, heel to heel	76.8...78.3 in (1950...1990 mm), without rider at unladen weight
<ul style="list-style-type: none"> <li>– with low seat<sup>OA</sup></li> </ul>	72.8...74.4 in (1850...1890 mm), without rider at unladen weight
<ul style="list-style-type: none"> <li>– with Rally seat<sup>OA</sup></li> </ul>	77.6 in (1970 mm), without rider at unladen weight
<ul style="list-style-type: none"> <li>– with lowered suspension<sup>OE</sup></li> </ul>	72.8...74.4 in (1850...1890 mm), without rider at unladen weight
<ul style="list-style-type: none"> <li>– with lowered suspension<sup>OE</sup></li> <li>– with black seat<sup>OE</sup></li> </ul>	71.7...73.2 in (1820...1860 mm), without rider at unladen weight

## Weights

Unladen weight	573 lbs (260 kg), DIN unladen weight, ready for road, fuel tank 90 % full, without OE
Permissible gross weight	1058 lbs (480 kg)
Maximum payload	485 lbs (220 kg)

## Performance data

Start-off capacity on uphill grades (with permissible total weight)	20 %
Top speed	>124 mph (>200 km/h)



## **Service**

Reporting safety defects .....	178
BMW Motorrad Service .....	179
BMW Motorrad Mobility Services .....	179
Maintenance procedures .....	179
Maintenance schedule .....	183
Standard BMW Service .....	184
Confirmation of maintenance work .....	185
Confirmation of service .....	190

## Reporting safety defects

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying BMW of North America, LLC.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your retailer, or BMW of North America, LLC.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (teletypewriter TTY for the deaf: 1-800-424-9153); go to the website <http://www.safercar.gov>; or write to: Administrator, NHTSA, 400 Seventh Street, SW., Washington, DC 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

## BMW Motorrad Service

With its worldwide dealer network, BMW Motorrad can attend to you and your motorcycle in over 100 countries around the globe. Authorized BMW Motorrad retailers have the technical information and the technical know-how needed to conduct reliable service and repairs covering every aspect of your BMW.

You can find the nearest authorized BMW Motorrad retailer by visiting our Internet site at "[www.bmw-motorrad.com](http://www.bmw-motorrad.com)".

### WARNING

#### **Improperly performed maintenance and repair work.**

Accident hazard due to subsequent damage.

- BMW Motorrad recommends having corresponding work on your motorcycle carried out

by a specialized workshop, preferably by an authorized BMW Motorrad retailer. ◀

To ensure that your BMW consistently remains in optimal condition BMW Motorrad urges you to observe the recommended service intervals.

Have all maintenance and repair work confirmed in the "Service" chapter in this manual. Documentation confirming regular maintenance is essential for generous treatment of claims submitted after the warranty period has expired (goodwill).

You can obtain information on the contents of the BMW Services from your BMW Motorrad retailer.

## BMW Motorrad Mobility Services

The BMW Motorrad Mobility Services furnish you and your new BMW motorcycle with extra security by offering a wide array of assistance services in the event of a breakdown (BMW Roadside Assistance, breakdown assistance, vehicle recovery and retrieval, etc.).

Contact your authorized BMW Motorrad retailer for additional information on available mobility-maintenance services.

## Maintenance procedures

### **BMW Pre-Delivery Check**

The BMW pre-delivery check is carried out by your authorized BMW Motorrad retailer before it turns over the vehicle to you.

## BMW Running-in Check

The BMW running-in check has to be performed when the vehicle has covered between 300 mls and 750 mls.

## BMW Service

BMW Service is carried out once a year. The scope of the services performed may be dependent on the motorcycle owner and the mileage driven. Your BMW Motorrad retailer confirms that the service has been performed and enters the date for the next service.

For riders who drive long distances annually, it may be necessary to come in for service before the entered date. In this case a corresponding maximum odometer reading will also be entered in the confirmation of service. If this odometer reading is reached before the next service date, service must be performed sooner.

The service display in the multi-function display reminds you of the next service date approx. one month or 1000 km (700 mls) before the entered values.

More information on the topic of service is available at:

**[bmw-motorrad.com/service](http://bmw-motorrad.com/service)**

The required scope of maintenance work for your motorcycle can be found in the following maintenance plan:





## Maintenance schedule

- 1** BMW running-in check
- 2** Standard BMW Service  
( 184)
- 3** Engine oil change with filter
- 4** Oil change in rear bevel gear
- 5** Check valve clearance
- 6** Replace all spark plugs
- 7** Replacing air cleaner insert
- 8** Check or replace the air filter element
- 9** Change the brake fluid in the entire system
  - a** annually or every 6000 miles (whichever comes first)
  - b** annually or every 12000 miles (whichever comes first)
  - c** when used off-road, annually or every 6000 miles (whichever comes first)

**d** for the first time after one year, then every two years

## Standard BMW Service

The standard BMW Service includes the following maintenance work:

- Perform the brief test using the BMW Motorrad diagnosis system.
- Visual inspection of hydraulic clutch system.
- Visual inspection of brake lines, brake hoses and connections.
- Checking the front/rear brake pads and brake discs for wear.
- Checking the front/rear brake fluid level.
- Checking the coolant level.
- Checking the side stands for ease of movement.
- Checking the center stand for ease of movement.
- Checking the tyre pressure and tread depth.
- Checking tension of spokes and tightening as needed.
- Checking the lighting and signal system.
- Checking that the engine starting suppression works.
- Final inspection and checking for road safety.
- Setting the service date and remaining distance to service.
- Checking the battery state of charge.
- Recording the BMW Service in the on-board literature.

## Confirmation of maintenance work

### BMW Pre-Delivery Check

Conducted

on \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature

### BMW Running-in Check

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service  
at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature

**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service  
at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service  
at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service  
at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature

**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service  
at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service  
at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service  
at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature

**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service  
at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service  
at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service  
at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature

**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service  
at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service  
at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service  
at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature

## Confirmation of service

The table is intended as proof of maintenance and repair work, the installed optional accessories and any special campaign (recall) work carried out.

Work carried out	Odometer reading	Date

Work carried out	Odometer reading	Date



## Appendix

Certificate for Electronic Immobilizer .....	194
Certificate for Keyless Ride .....	196
Certificate for Tyre Pressure Control .....	198

## FCC Approval

### Ring aerial in the ignition switch



To verify the authorization of the ignition key, the electronic immobilizer exchanges information with the ignition key via the ring aerial.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. ◀

## Approbation de la FCC

### Antenne annulaire présente dans le commutateur d'allumage



Pour vérifier l'autorisation de la clé de contact, le système d'immobilisation électronique échange des

informations avec la clé de contact via l'antenne annulaire.

Le présent dispositif est conforme à la partie 15 des règles de la FCC. Son utilisation est soumise aux deux conditions suivantes :

- (1) Le dispositif ne doit pas produire d'interférences nuisibles, et
- (2) le dispositif doit pouvoir accepter toutes les interférences extérieures, y compris celles qui pourraient provoquer une activation inopportune.



Toute modification qui n'aurait pas été approuvée expressément par l'organisme responsable de l'homologation peut annuler l'autorisation accordée à l'utilisateur pour utiliser le dispositif. ◀

## Certifications

---

### BMW Keyless Ride ID Device



#### USA, Canada

Product name: BMW Keyless Ride ID Device  
FCC ID: YGOHUF5750  
IC: 4008C-HUF5750

#### Canada:

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

#### USA:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# Declaration Of Conformity

---

We declare under our responsibility that the product

## **BMW Keyless Ride ID Device (Model: HUF5750)**


complies with the appropriate essential requirements of the article 3 of the R&TIE and the other relevant provisions, when used for its intended purpose. Applied Standards:

1. Health and safety requirements contained in article 3 (1) a)
  - EN 60950-1:2006+A11:2009+A1:2010+A12:2011; Information technology equipment- Safety
2. Protection requirements with respect to electromagnetic compatibility article 3 (1) b)
  - EN 301 489-1 (V1 .9.2, 09/2011 ), Electromagnetic compatibility and radio spectrum matters (ERM); Electromagnetic compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements
  - EN 301 489-3 (V1.4.1, 08/2002) Electromagnetic compatibility and radio spectrum matters (ERM); Electromagnetic compatibility (EMC) standard for radio equipment and services; Part 3: Specific conditions for short range devices (SRD) operating on frequencies between 9 kHz and 40 GHz
3. Means of the efficient use of the radio frequency spectrum article 3 (2)
  - EN 300 220-1 & -2 (V2.4.1, 05/2012), electromagnetic compatibility and radio spectrum matters (ERM); Short range devices (SRD); Radio equipment to be used in the 25 MHz to 1000 MHz frequency range with power levels ranging up to 500 mW;  
Part 1: Technical characteristics and test methods.  
Part 2: Harmonized EN covering essential requirements under article 3.2 of the R&TIE directive

The product is labeled with the CE marking: **CE**

Velbert, October 15<sup>th</sup>, 2013

---

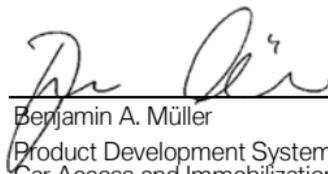

---

Benjamin A. Müller  
Product Development Systems  
Car Access and Immobilization – Electronics  
Huf Hüsbeck & Fürst GmbH & Co. KG  
Steeger Straße 17, D-42551 Velbert

## Certification Tire Pressure Control (TPC)

---

FCC ID: MRXBC54MA4  
IC: 2546A-BC54MA4

FCC ID: MRXBC5A4  
IC: 2546A-BC5A4

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

**WARNING:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

**A**  
Abbreviations and symbols, 6  
ABS  
  Control, 15  
  Operating, 62  
  Self-diagnosis, 88  
  Technology in detail, 104  
  Warning indicators, 35  
Accessories  
  General instructions, 142  
Air filter  
  Position in motorcycle, 13  
  Replacing insert, 133  
Ambient temperature  
  Outside temperature warning, 29  
Anti-theft alarm system  
  Operating, 57  
  Warning indicator, 32  
ASC  
  Control, 15  
  Operating, 63  
  Self-diagnosis, 89  
  Technology in detail, 108  
  Warning indicator, 35

Average values  
  Resetting, 52

**B**  
Battery  
  Charging connected battery, 136  
  Charging disconnected battery, 137  
  Installing, 138  
  Maintenance instructions, 135  
  Removing, 137  
  Technical data, 171  
  Warning for battery charging voltage, 38  
Brake fluid  
  Checking fluid level at rear, 117  
  Checking front fluid level, 116  
  Front reservoir, 13  
  Rear reservoir, 13  
Brake pads  
  Check front, 115  
  Check rear, 115  
  Running in, 89

Brakes  
  ABS Pro in detail, 107  
  ABS Pro dependent on riding mode, 92  
  Adjusting brake lever, 75  
  Checking operation, 114  
  Safety information, 91  
  Technical Data, 168  
Breaking in, 89  
Bulbs  
  Replace additional LED headlight, 133  
  Replacing bulb for front and rear turn indicator, 131  
  Replacing high-beam headlight light source, 128  
  Replacing low-beam light source in headlight, 128  
  Replacing parking light light source, 130  
  Replacing tail light, 132  
  Replacing the LED headlight, 132

- Technical data, 171
  - Warning indicator for defective bulb, 31
- C**
- Case
    - Operating, 148
  - Checklist, 86
  - Clock
    - Adjusting, 53
  - Clutch
    - Adjusting handlebar lever, 74
    - Checking operation, 119
    - Technical Data, 165
  - Confirmation of maintenance work, 185
  - Coolant
    - Check fill level, 118
    - Overheating warning indicator, 30
    - Topping up, 119
  - Cruise-control system
    - Operating, 68
- D**
- Damping
    - Adjusting, 71
    - Rear adjuster, 11
  - Dimensions
    - Technical Data, 173
  - DWA
    - Indicator light, 17
    - Technical Data, 173
- E**
- Electrical system
    - Technical Data, 171
  - Emergency on/off switch (kill switch), 16
    - Operating, 59
  - Engine
    - Starting, 87
    - Technical Data, 163
    - Warning for electronic engine management, 30
    - Warning for the engine management system, 37
  - Engine oil
    - Checking level, 113
    - Fill location, 13
    - Fluid level indicator, 13
    - Oil level indicator, 39
    - Technical Data, 165
    - Topping up, 114
    - Warning for engine oil level, 37
- E**quipment, 7
- ESA**
- Control, 15
  - Operating, 72
- F**
- Frame
    - Technical Data, 172
  - Front wheel stand
    - Mounting, 127
  - Fuel
    - Fill location, 11
    - Refueling, 95
    - Refueling with Keyless Ride, 96, 97
    - Reserve quantity, 39
    - Technical Data, 164
  - Fuel reserve
    - Warning indicator, 36

Fuses  
Replacing, 139  
Technical Data, 171

**G**  
Gearshift assistant  
Riding, 90  
Technology in detail, 103

**H**  
Handlebars  
Adjusting, 77  
Hazard warning flashers  
Control, 15, 16  
Operating, 62  
Headlight  
Headlamp range, 59  
Headlight courtesy delay  
feature, 45  
Heated handlebar grips  
Control, 16  
Operating, 77  
Horn, 15

**I**  
Ignition  
Switching off, 45  
Switching on, 45  
Immobilizer  
Emergency key, 48  
Spare key, 45  
Warning indicator, 29

Indicator lights, 17  
Overview, 20  
Instrument cluster  
Ambient light photosensor, 17  
Overview, 17

**J**  
Jump-start, 134

**K**  
Keyless Ride  
Battery of radio-operated key is  
completely drained or radio-  
operated key has been lost, 49  
EWS Electronic immobilizer, 48  
Locking handlebars, 47  
Switch off ignition, 48  
Switching on ignition, 47

Unlocking fuel filler cap, 96, 97  
Warning indicator, 29, 30  
Keys, 44, 46

**L**  
Lights  
Control, 15  
Lowbeam headlamp, 60  
Operating auxiliary  
headlight, 61  
Operating headlight flasher, 60  
Operating high-beam  
headlight, 60  
Parking lamps, 60  
Parking light, 61  
Lowered suspension  
Limitations, 84  
Luggage  
Loading information, 84

**M**  
Maintenance  
General instructions, 112  
Maintenance schedule, 183  
Maintenance intervals, 179

- Mirrors
  - Adjusting, 78
- Mobility Services, 179
- Motorcycle
  - Care, 153
  - Cleaning, 153
  - Lashing down, 98
  - Parking, 93
  - Returning to use, 157
  - Storage, 156
- Multifunction display, 17
  - Control, 15
  - Operating, 50
  - Overview, 22
  - Selecting display readings, 50
- Multifunction switch
  - General view, left , 15
  - General view, right, 16

**N**

- Notice concerning current status, 7

**O**

- Odometer
  - Resetting, 51
- Offroad riding, 93
- Onboard power socket
  - Information on use, 142
  - Position on vehicle, 13
- Onboard tool kit
  - Contents, 112
  - Position on vehicle, 14
- Outside temperature
  - Display, 38
- Overview of warning indicators, 25
- Overviews
  - Instrument cluster, 17
  - Left side of vehicle, 11
  - Left-side multifunction switch, 15
  - Multifunction display, 22
  - Right side of vehicle, 13
  - Right-hand multifunction switch, 16
  - Underneath seat, 14

- Warning and indicator lights, 20
- Warning symbols, 23

**P**

- Parking light, 61
- Pre-Ride-Check, 88

**R**

- RDC/TPC
  - Rim sticker, 121
  - Technology in detail, 109
  - Warning lamps, 32
- Rear-wheel drive
  - Technical Data, 167
- Refueling, 95
  - with Keyless Ride, 96, 97
- Remote control
  - Replacing battery, 50
- Rider's Manual (US Model)
  - Position on vehicle, 14
- Riding mode
  - Adjusting, 64
  - Control, 16
  - Technology in detail, 102

## S

- Safety instructions
  - On braking, 91
  - On riding, 84
- Seat
  - Height adjustment position, 14
- Seats
  - Adjusting seat height, 80
  - Locking mechanism, 11
  - Removing and installing, 79
- Service, 179
  - Reporting safety defects, 178
- Service display, 40
- Shift lever
  - Adjusting, 76
- Shifting gears
  - Upshift recommendation, 41
- Spark plugs
  - technical data, 171
- Speedometer, 17
- Spring preload
  - Adjusting, 70
  - Rear adjuster, 13
- Starting, 87
  - Control, 16

- Steering lock
  - Locking, 44
- Suspension
  - Technical Data, 167
- Switching off, 93

## T

- Tachometer, 17
- Technical data
  - Alarm system, 173
  - Battery, 171
  - Brakes, 168
  - Bulbs, 171
  - Clutch, 165
  - Dimensions, 173
  - Electrical system, 171
  - Engine, 163
  - Engine oil, 165
  - Frame, 172
  - Fuel, 164
  - Rear-wheel drive, 167
  - Spark plugs, 171
  - Standards, 7
  - Suspension, 167
  - Transmission, 166

Weights, 175

Wheels and tyres, 169

- Tire Pressure Control TPC/RDC
  - Display, 40

## Tires

- Checking tire tread depth, 120
- Checking tyre inflation pressures, 76
- Inflation pressure table, 14
- Inflation pressures, 170
- Maximum speed, 85
- Recommendation, 120
- Running in, 90
- Technical Data, 169

## Topcase

Operating, 150

Torques, 161

## Transmission

Technical Data, 166

Troubleshooting chart, 160

## Turn indicators

Control, 15

Control, right, 16

Operating, 61

Type plate

Position on vehicle, 13

## V

Vehicle identification number

Position on vehicle, 13

## W

Warning lamps, 17

ABS, 35

Anti-theft alarm system, 32

ASC, 35

Battery charging voltage, 38

Bulb defect, 31

Coolant temperature, 30

Display, 24

Electronic engine  
management, 30

Engine management  
system, 37

Engine oil level, 37

Fuel reserve, 36

Immobilizer, 29

Outside temperature  
warning, 29

Overview, 20, 23

Tire Pressure Monitor, 32

Weights

Load capacity table, 14

Technical Data, 175

Wheels

Check wheel rims, 120

Checking spokes, 120

Install rear wheel, 126

Installing front wheel, 123

Removing front wheel, 122

Size change, 121

Technical Data, 169

Windshield

Adjusting, 79

Adjustment element, 13



The descriptions and illustrations in this manual may vary from your own motorcycle's actual equipment, depending upon its equipment level and accessories as well as your specific national version. No claims stemming from these differences can be recognized.

Dimensions, weights, fuel consumption and performance data are quoted to the customary tolerances.

The right to modify designs, equipment and accessories is reserved.

Errors and omissions excepted.

© 2015 Bayerische Motoren Werke Aktiengesellschaft  
80788 Munich, Germany  
Reprints and duplication of this work, in whole or part, are prohibited without the express written approval of BMW Motorrad, Aftersales.

Original Rider's Manual, printed in Germany.

