



BMW Motorrad



The Ultimate
Riding Machine

Rider's Manual
R 1200 RT

Vehicle data/dealership details

Vehicle data

Model

Vehicle Identification Number

Colour code

Date of first registration

Registration number

Dealership details

Person to contact in Service department

Ms/Mr

Phone number

Dealership address/phone number (company stamp)

Welcome to BMW

We congratulate you on your choice of a vehicle from BMW Motorrad and welcome you to the community of BMW riders. Familiarise yourself with your new vehicle so that you can ride it safely and confidently in all traffic situations.

About this Rider's Manual

Please read this Rider's Manual carefully before starting to use your new BMW. It contains important information on how to operate the controls and how to make the best possible use of all your BMW's technical features. In addition, it contains information on maintenance and care to help you maintain your vehicle's reliability and safety, as well as its value.

Suggestions and criticism

If you have questions concerning your motorcycle, your authorised BMW Motorrad dealer will gladly provide advice and assistance.

We hope you will enjoy riding your BMW and that all your journeys will be pleasant and safe

BMW Motorrad.

01 41 8 563 361



Table of Contents

1 General instructions	5	Range	42	Electronic Suspension Ad-	
Overview	6	Oil level	42	justment.....	73
Abbreviations and		Service-due indicator.....	42	Clutch	75
symbols	6	Tyre pressures	43	Brakes	75
Equipment	7	4 Operation.....	45	Hill Start Control	76
Technical data	7	Ignition	47	Tyres.....	77
Actualy.....	7	Ignition with Key-		Heating.....	77
2 General views	9	less Ride	49	Adjusting instrument	
General view, left side	11	Multifunction display	55	panel	80
General view, right side	13	On-board computer	59	Mirrors	80
Underneath the seat	14	Trip meter.....	61	Windscreen	80
Multifunction switch, left	15	Emergency off switch (kill		Stowage compartment.....	81
Multifunction switch,		switch)	62	Central locking	82
right	17	Headlight.....	62	DWA	86
Instrument panel	18	Lights	63	Front seat	90
3 Status indicators	21	Daytime riding light.....	64	Rear seat.....	91
Warning and telltale		Turn indicators	66	5 Riding.....	95
lights	22	Hazard warning flashers	67	Safety instructions	96
Multifunction display	24	ASC.....	67	Checklist	98
Meaning of symbols.....	25	Riding mode	68	Starting.....	98
Warnings	26	Cruise-control system.....	69	Running in	101
Ambient temperature.....	41	Spring preload	71	Shifting gear	102
		Damping	72	Brakes	103

Parking your motor- cycle	104
Refuelling	105
Securing motorcycle for transportation	108

6 Engineering details 111

Riding mode	112
Shift assistant Pro	113
Hill Start Control	114
BMW Motorrad Integral ABS	114
BMW Motorrad ASC	117
RDC	119
ESA	120

7 Maintenance 121

General instructions	122
Toolkit	122
Engine oil	123
Brake system	124
Coolant	128
Clutch	130
Rims and tyres	130
Wheels	131
Silencer	137

Front-wheel stand	139
Lighting	140
Jump-starting	147
Battery	149
Fuses	153

8 Accessories 155

General instructions	156
Power sockets	156
Navigation system	157
Cases	160
Topcase	162

9 Care 167

Care products	168
Washing the vehicle	168
Cleaning easily damaged components	169
Paint care	170
Laying up the motor- cycle	170
Protective wax coating	170
Restoring motorcycle to use	171

10 Technical data 173

Troubleshooting chart	174
Threaded fasteners	175
Engine	177
Fuel	178
Engine oil	178
Clutch	179
Transmission	179
Rear-wheel drive	180
Running gear	180
Brakes	181
Wheels and tyres	182
Electrics	184
Frame	185
Anti-theft alarm	186
Dimensions	186
Weights	187
Riding specifications	187

11 Service 189

BMW Motorrad Service ...	190
BMW Motorrad Mobility services	190
Maintenance work	190
Maintenance schedule	193
Standard BMW service	194

Confirmation of maintenance work	195
Confirmation of service....	200
12 Appendix	203
Certificate for electronic immobiliser	204
Certificate for remote control	206
Certificate for Keyless Ride	210
Certificate for tyre pressure monitoring (Reifendruck-Control, RDC)	212
13 Index	213

General instructions

Overview	6
Abbreviations and symbols	6
Equipment	7
Technical data	7
Actuality	7

Overview

An important aspect of this Rider's Manual is that it can be used for quick and easy reference. Consulting the extensive index at the end of this Rider's Manual is the fastest way to find information on a particular topic or item. To first read an overview of your motorcycle, please go to Chapter 2. All maintenance and servicing work on the vehicle is documented in Chapter 11. This record of the maintenance work you have had performed on your vehicle is a precondition for generous treatment of goodwill claims. When the time comes to sell your BMW, please remember to hand over this Rider's Manual; it is an important part of the motorcycle.

Abbreviations and symbols

 **CAUTION** Low-risk hazard. Non-avoidance can lead to slight or moderate injury.

 **WARNING** Medium-risk hazard. Non-avoidance can lead to fatal or severe injury.

 **DANGER** High-risk hazard. Non-avoidance leads to fatal or severe injury.

 **ATTENTION** Special notes and precautionary measures. Non-compliance can lead to damage to the vehicle or accessory and, consequently, to voiding of the warranty.

 **NOTE** Specific instructions on how to operate, control, adjust or look after items of equipment on the vehicle.

◀ Indicates the end of an item of information.

- Instruction.
- » Result of an activity.
- ➔ Reference to a page with more detailed information.
- ◁ Indicates the end of a passage relating to specific accessories or items of equipment.
-  Tightening torque.
-  Technical data.
- OE Optional extras. The vehicles are assembled complete with all the BMW Motorrad optional extras originally ordered.

- OA Optional accessories. You can obtain BMW Motorrad optional accessories through your authorised BMW Motorrad dealer; optional accessories have to be retrofitted to the vehicle.
- EWS Electronic immobiliser.
- DWA Anti-theft alarm (Diebstahlwarnanlage).
- ABS Anti-lock brake system.
- ASC Automatic Stability Control.
- ESA Electronic Suspension Adjustment.
- RDC Tyre pressure monitoring.

Equipment

When you purchased your BMW motorcycle, you chose a model with individual equipment. This Rider's Manual describes the optional extras (OE) offered by BMW and selected optional accessories (OA). You may find that it contains descriptions of items of equipment that you did not select. Please note, too, that your motorcycle might not be exactly as illustrated in this manual on account of country-specific differences.

If your motorcycle contains equipment that has not been described, its description can be found in a separate manual.

Technical data

All dimensions, weights and power ratings stated in the Rider's Manual are quoted to the standards and comply with the


tolerance requirements of the Deutsches Institut für Normung e.V. (DIN). Versions for individual countries may differ.

Actuality

The high safety and quality level of BMW motorcycles is ensured by continuous development work on design, equipment and accessories. Because of this, your motorcycle may differ from the information supplied in the Rider's Manual. Nor can BMW Motorrad entirely rule out errors and omissions. Consequently no claims can be derived from the information, graphics or descriptions.


General views

General view, left side.....	11
General view, right side	13
Underneath the seat	14
Multifunction switch, left	15
Multifunction switch, right.....	17
Instrument panel	18

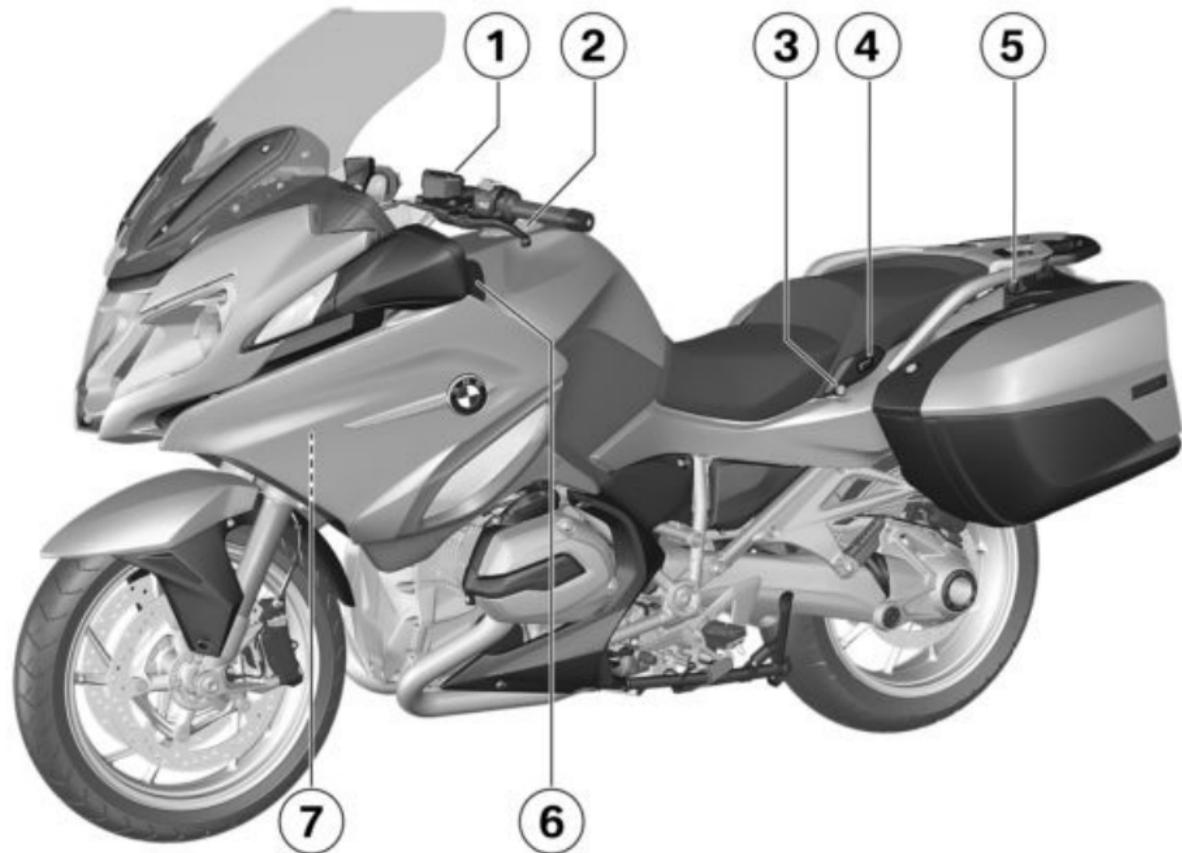

General view, left side

- 1 Clutch-fluid reservoir
( 130)
- 2 Fuel filler neck ( 105)
- 3 Seat lock ( 90)
- 4 – with seat heating^{OE}
Rear-seat heating ( 78)
- 5 2nd socket
- 6 Stowage compartment, left
( 81)
- 7 Payload table
Table of tyre pressures

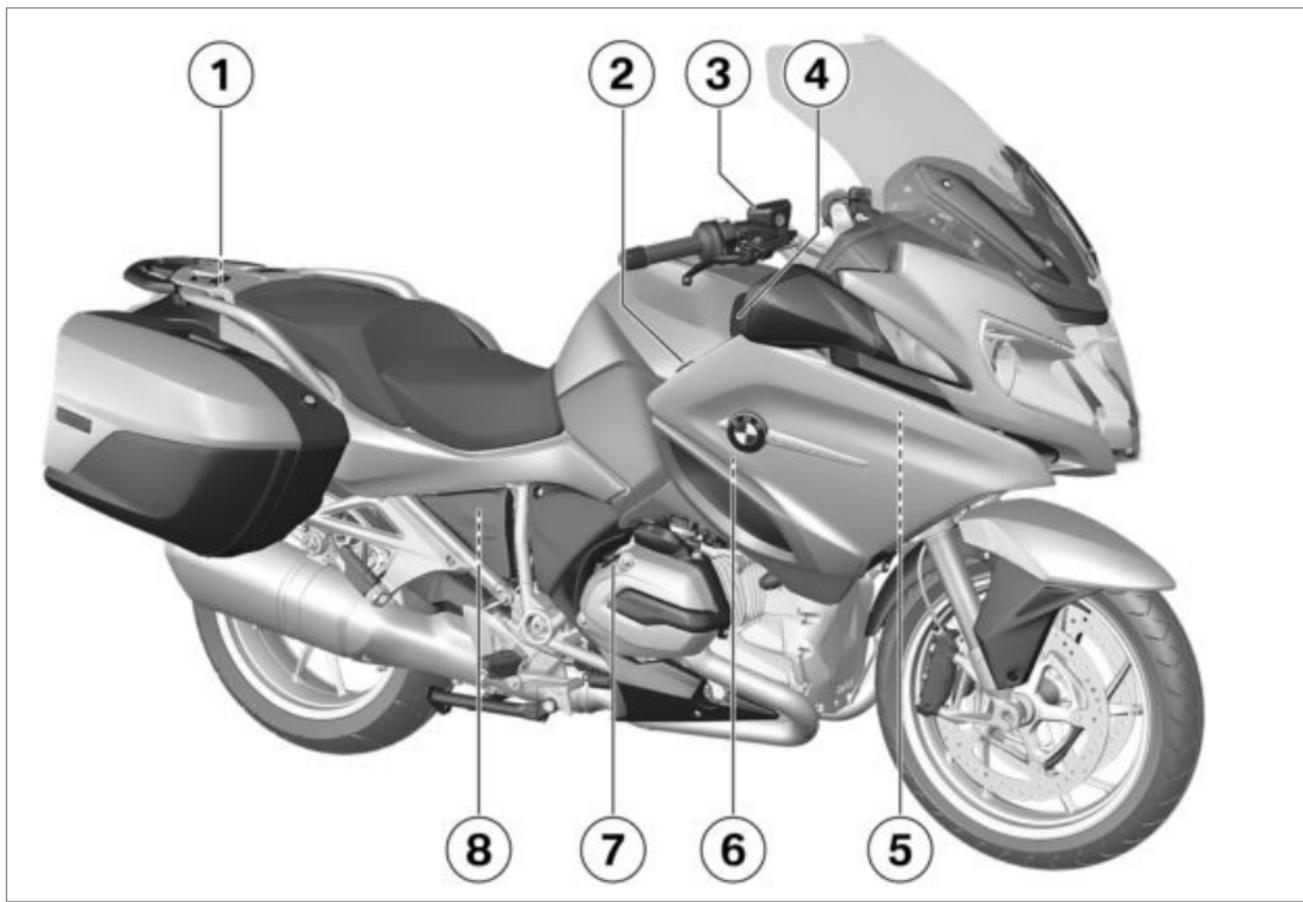



General view, right side

- 1 Rider's Manual
- 2 Power socket (►►► 156)
- 3 Brake-fluid reservoir, front
(►►► 126)
- 4 – with audio system^{OE}
Stowage compartment,
right (►►► 81)
- 5 VIN (on steering-head
bearing)
Type plate (on steering-
head bearing)
- 6 Coolant level indicator (be-
hind side panel) (►►► 128)
- 7 Oil filler neck (►►► 123)
- 8 Rear brake-fluid reser-
voir (behind side panel)
(►►► 127)

Underneath the seat

- 1 Adjusting the driver seat height (➡ 91)
- 2 Standard toolkit (➡ 122)
- 3 Tool for adjusting spring preload (➡ 71)
- 4 Fuses (➡ 153)

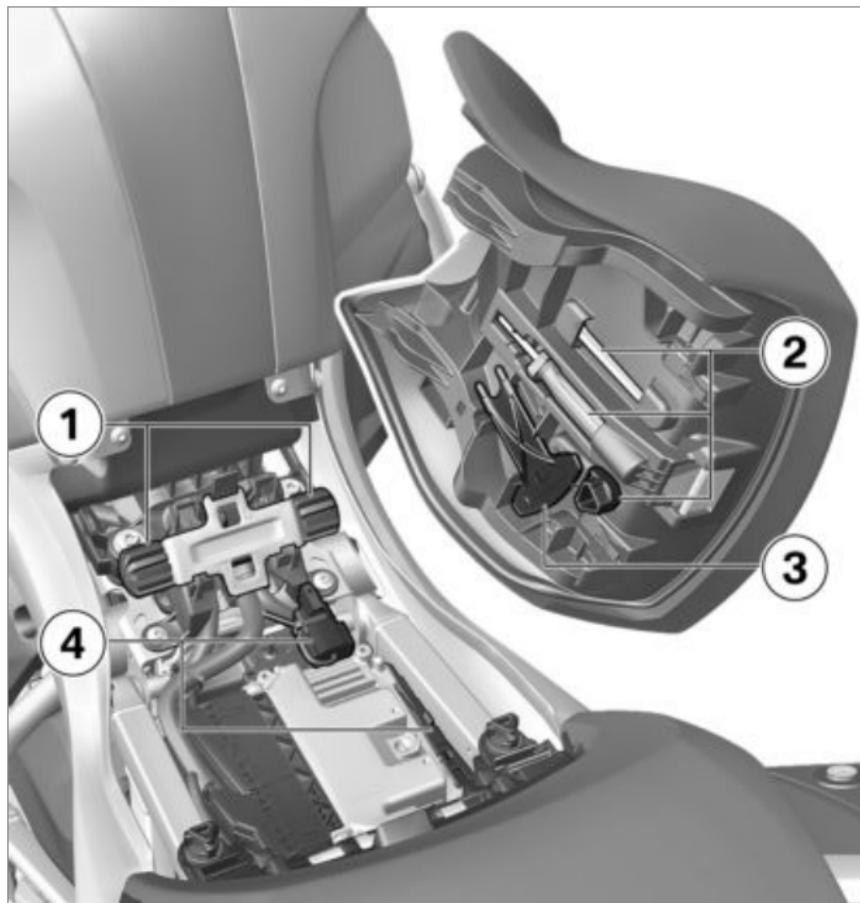


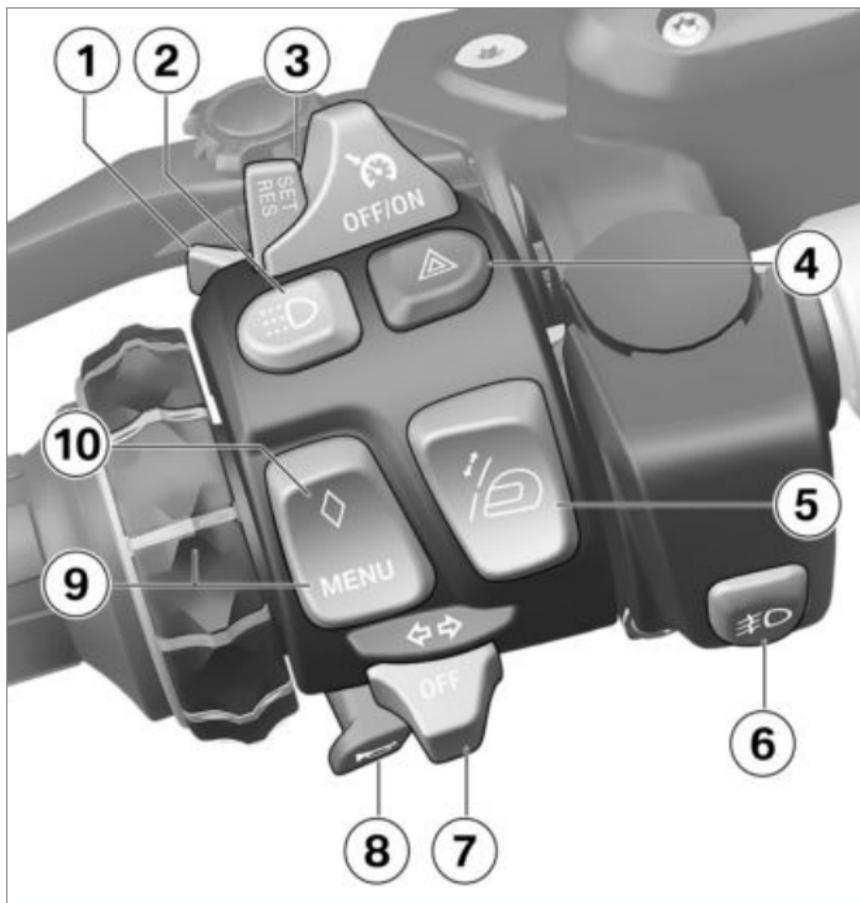

Multifunction switch, left

- 1 High-beam headlight and headlight flasher (►► 63)
- 2 – with daytime running light^{OE}
- Daytime riding light (►► 64)
- 3 – with cruise control^{OE}
- Cruise-control system (►► 69)
- 4 Hazard warning flashers (►► 67)
- 5 Windscreen adjustment (►► 80)
- 6 – with LED auxiliary headlights^{OA}
- Auxiliary headlights (►► 64)
- 7 Turn indicators (►► 66)
- 8 Horn

- 9** Multi-Controller and MENU key
Multifunction display (▶▶▶▶ 55)
ASC (▶▶▶▶ 67)
– with Dynamic ESA^{OE}
D-ESA (▶▶▶▶ 73)
– with audio system^{OE}
Audio system (see the appropriate operating instructions)
- 10** Favourite menu (▶▶▶▶ 58).

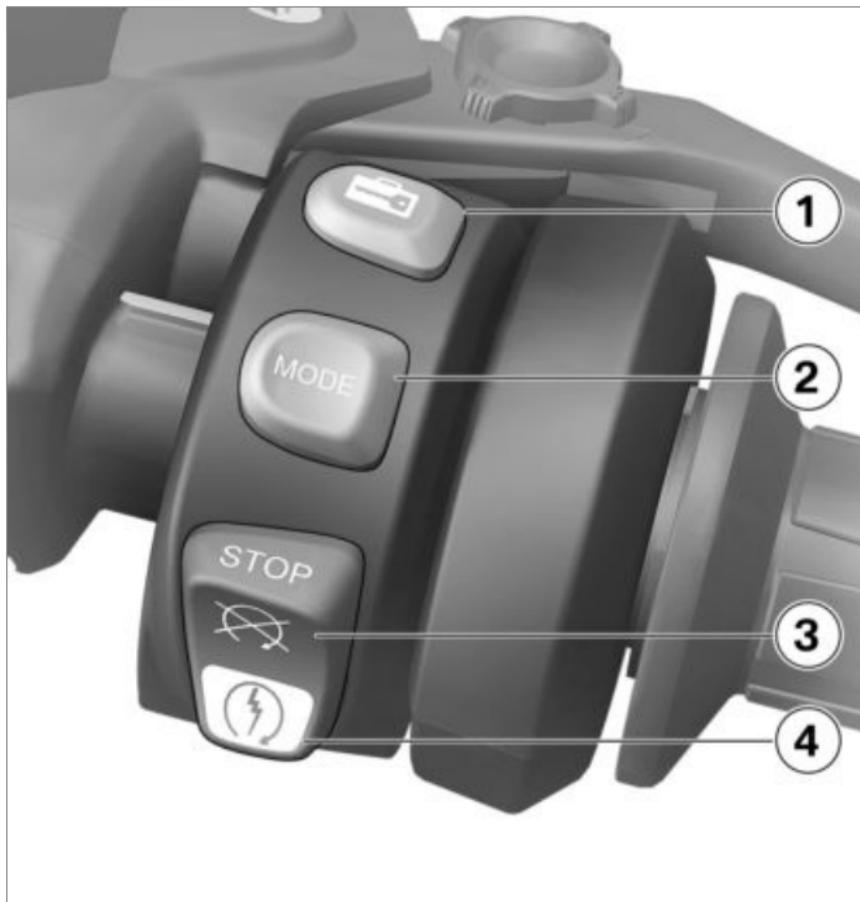


Multifunction switch, right

- 1 – with central locking system^{OE}
Central locking (→ 82)
- 2 Riding mode (→ 68)
- 3 Emergency off switch (kill switch) (→ 62)
- 4 Start engine (→ 98)

Instrument panel

- 1 Speedometer
- 2 Warning and telltale lights (►► 22)
- 3 – with navigation system^{OA}
– with preparation for navigation system^{OE}
Navigation system (►► 157)
- 4 Ambient-light brightness sensor (for adapting the brightness of the instrument lighting)
- 5 Rev. counter
- 6 – with navigation system^{OA}
– with preparation for navigation system^{OE}
Release for navigation slot (►► 157)
- 7 Multifunction display (►► 24)
- 8 Trip meter (►► 61)

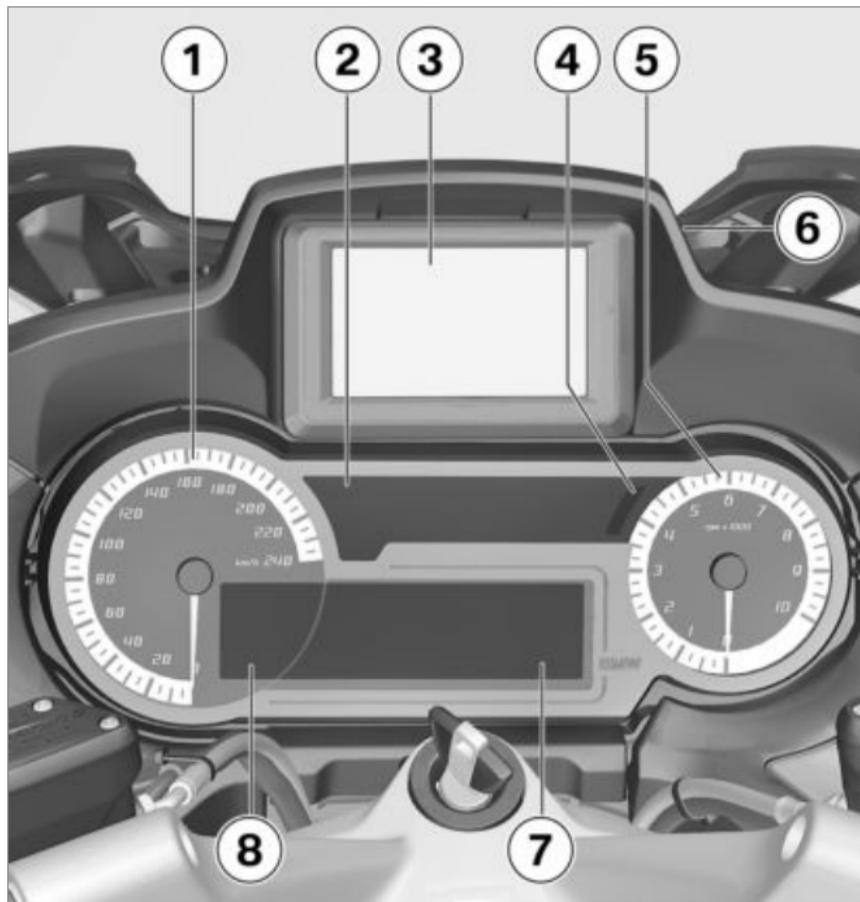



NOTICE


The brightness of the warning lights and telltale lights, the display and the instrument needle and gauge lighting is adapted automatically to suit ambient brightness.◀

Status indicators

Warning and telltale lights.....	22
Multifunction display	24
Meaning of symbols	25
Warnings	26
Ambient temperature	41
Range	42
Oil level	42
Service-due indicator	42
Tyre pressures.....	43

Warning and telltale lights


- 1 ABS (➡ 37)
- 2 ASC (➡ 38)
- 3 Turn indicators, left
- 4 Fuel reserve (➡ 41)
- 5 – with daytime running light^{OE}
Daytime riding light (➡ 64)
- 6 High-beam headlight
- 7 Turn indicators, right
- 8 Engine electronics
- 9 DWA (➡ 87)
– with Keyless Ride^{OE}
Telltale light for the radio-operated key (➡ 49)
- 10 – with LED auxiliary headlights^{OA}
Auxiliary headlights (➡ 64)
- 11 – with cruise control^{OE}
Cruise-control system (➡ 69)

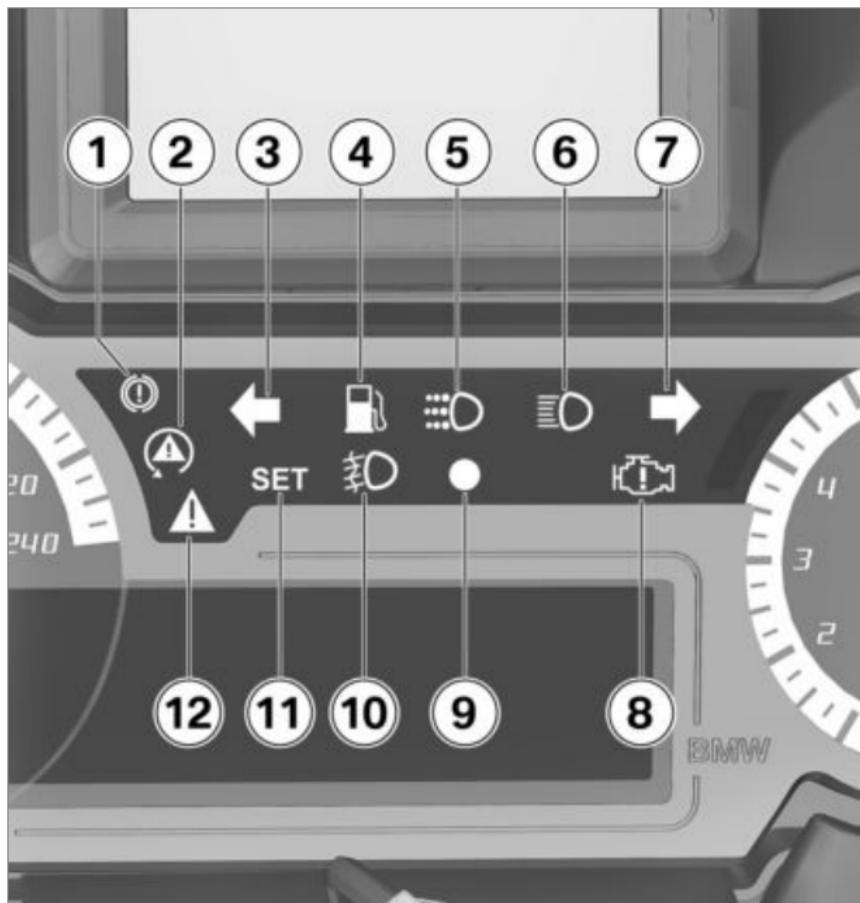

- 12** General warning light, in combination with warning symbols on the display (→ 26)


Multifunction display

- 1 Trip meter (➡ 61)
- 2 Warning symbols (➡ 26)
- 3 Menu area (➡ 55)
- 4 Audio system
- 4 – with daytime running light^{OE}
- 4 Automatic daytime riding light (➡ 65)
- 5 – with seat heating^{OE}
- 5 Seat heating (➡ 78)
- 5 Heated handlebar grips (➡ 77)
- 5 – with Dynamic ESA^{OE}
- 5 D-ESA settings
- 6 On-board computer (➡ 59)
- 6 – with tyre pressure monitoring (RDC)^{OE}
- 6 Tyre pressure
- 7 Clock (➡ 59)
- 8 Odometer
- 9 Riding mode (➡ 68)
- 10 – with Hill Start Control^{OE}
- 10 Hill Start Control (➡ 76)

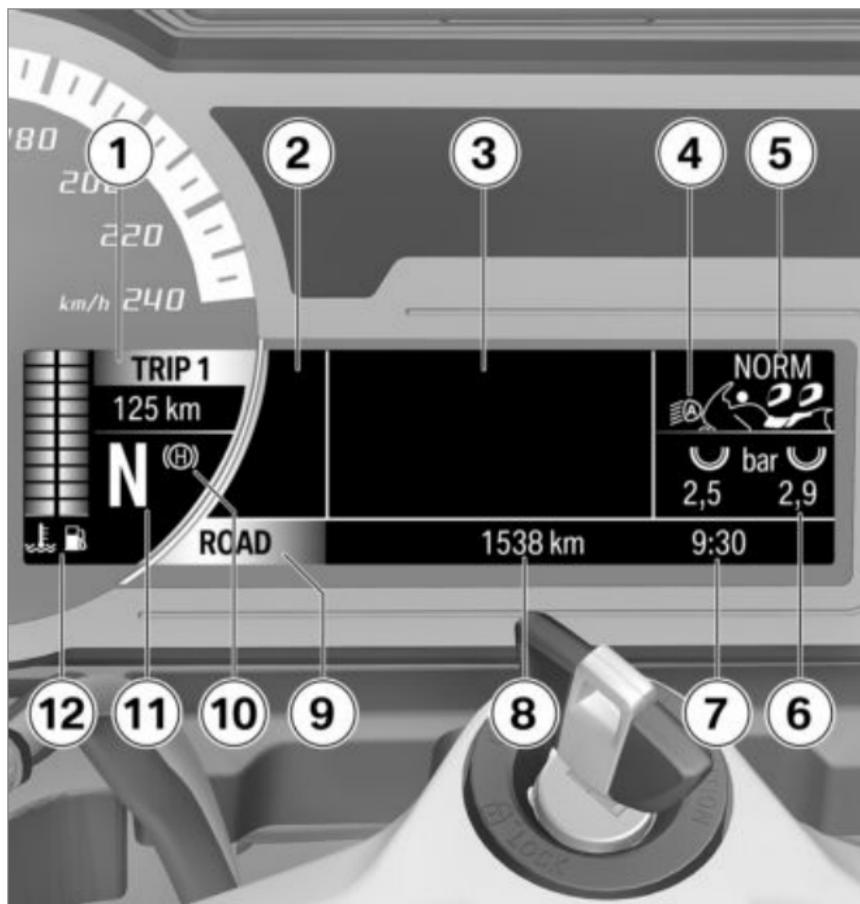

- 11 Gear indicator; "N" indicates neutral
- 12 Coolant temperature
Fuel level

Meaning of symbols

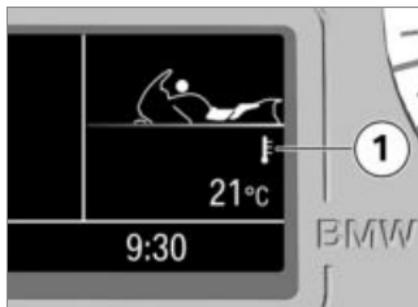

Meanings of the symbols at position **1**:

-  Average fuel consumption since last reset (➡ 60)
-  Current consumption
-  Range with fuel now on board (➡ 42)

 Average speed since last reset (➡ 60)

 Ambient temperature (➡ 41)

– with tyre pressure monitoring (RDC)^{OE}

 Tyre pressures (➡ 43)


 Stopwatch (➡ 60)

 Travel times (➡ 60)

 Date (display mode depends on the time format selected) (➡ 59)



Oil level (→ 42)



On-board voltage




1 Heated handlebar grips ON

– with seat heating^{OE}

2 Front-seat heating ON

3 Rear-seat heating ON

– with Dynamic ESA^{OE}

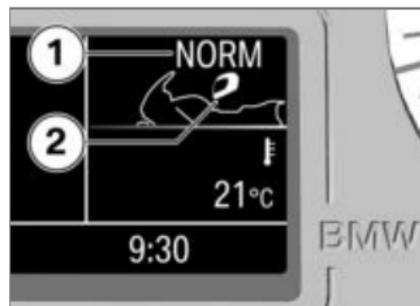

1 Damping

2 Vehicle load

Warnings

Mode of presentation

Warnings are indicated by the corresponding warning lights.



Warnings for which there is no dedicated warning light are indicated by 'General' warning light **1** showing in combination with a warning symbol such as, for example, **2** appearing in the multifunction display. The 'general' warning light shows yellow or red, depending on the urgency of the warning.

Up to four warning symbols can be displayed at any given time. The status of the 'General' warning light matches the most urgent warning.

The possible warnings are listed on the next pages.

Warnings, overview

Warning and telltale lights

Warning symbols in the display

			Meaning
		 appears on the display	Outside temperature warning (→ 32)
 lights up yellow	 appears on the display		EWS active (→ 32)
 lights up yellow	 appears on the display		Radio-operated key out of range (→ 32)
 lights up yellow			Replace the battery of the radio-operated key (→ 33)
 lights up red		Temperature reading turns red	Coolant temperature too high (→ 33)
	 appears on the display		Engine-oil level too low (→ 33)
 lights up			Engine fault (→ 34)
 flashes			Severe engine fault (→ 34)

Warning and telltale lights

Warning symbols in the display

Meaning

 lights up yellow	 appears on the display	Front light failure (→ 34)
 lights up yellow	 appears on the display	Rear light failure (→ 35)
 lights up yellow	 appears on the display	Light failure (→ 35)
	 appears on the display	DWA battery weak (→ 35)
 lights up yellow	 appears on the display	DWA battery flat (→ 35)
	 appears on the display	On-board system voltage low (→ 36)
 lights up yellow	 appears on the display	On-board system voltage critical (→ 36)
 lights up red	 appears on the display	Battery charge voltage insufficient (→ 36)

Warning and telltale lights

Warning symbols in the display

Warning and telltale lights		Warning symbols in the display	Meaning
	flashes		ABS self-diagnosis not completed (→ 37)
	lights up		ABS fault (→ 37)
	quick-flashes		ASC intervention (→ 37)
	slow-flashes		ASC self-diagnosis not completed (→ 38)
	lights up		ASC switched off (→ 38)
	lights up		ASC fault (→ 38)
	lights up yellow	 appears on the display	ESA fault (→ 38)
	flashes red	 + tyre pressure in red	Tyre pressure outside permitted tolerance (→ 38)

Warning and telltale lights

Warning symbols in the display

Meaning

		+ "--" or "-- --" appears on the display	Signal transmission disrupted (➡ 39)
 lights up yellow		+ "--" or "-- --" appears on the display	Sensor defective or system error (➡ 40)
 lights up yellow		appears on the display	Battery of tyre-pressure sensor weak (➡ 40)
		appears on the display	Central locking locked (➡ 41)
 briefly shows yellow		appears on the display	Service overdue (➡ 41)
 lights up		Fuel-level reading turns yellow	Fuel down to reserve (➡ 41)

Outside temperature warning



appears on the display.

Possible cause:

	The air temperature measured at the vehicle is lower than:
approx. 3 °C	



WARNING

Risk of black ice forming at temperatures above 3 °C, even though no ambient-temperature warning is issued.

Risk of accident due to icy surface.

- Always take extra care when temperatures are low; remember that there is particular danger of black ice

forming on bridges and where the road is in shade. ◀

- Ride carefully and think well ahead.

EWS active



lights up yellow.



appears on the display.

Possible cause:

The key being used is not authorised for starting, or communication between key and engine electronics is disrupted.

- Remove all other vehicle keys from the same ring as the ignition key.
- Have the defective key replaced, preferably by an authorised BMW Motorrad dealer.

Radio-operated key out of range

– with Keyless Ride^{OE}



lights up yellow.



appears on the display.

Possible cause:

Communication between R/C key and engine electronics is disrupted.

- Check the battery in the radio-operated key.
- with Keyless Ride^{OE}
- Replacing battery of radio-operated key (►► 54).
- Use the emergency key or the radio-operated key with the empty battery to continue your journey.

- with Keyless Ride^{OE}
- Battery of the radio-operated key is empty, emergency key is not available (➡ 52).
- Loss of the radio-operated key, emergency key is available (➡ 52).
- Remain calm if the warning symbol appears while you are riding. You can continue your journey, the engine will not switch off.
- Have the defective radio-operated key replaced by an authorised BMW Motorrad dealer.

Replace the battery of the radio-operated key



lights up yellow.



The battery symbol appears on the display.

Possible cause:

- The integral battery in the radio-operated key has lost a significant proportion of its original capacity. There is no assurance of how long the R/C key can remain operational.
- with Keyless Ride^{OE}
- Replacing battery of radio-operated key (➡ 54).

Coolant temperature too high



lights up red.

The temperature reading turns red.



ATTENTION

Riding with overheated engine.

Engine damage

- Compliance with the information set out below is essential. ◀

Possible cause:

The coolant temperature is too high.

- If possible, ride in the part-load range to cool down the engine.
- If the coolant temperature is frequently too high, have the fault rectified as soon as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Engine-oil level too low



appears on the display.

Possible cause:

The electronic oil-level sensor has registered an excessively low oil level. The next time you stop for fuel:

- Checking engine oil level (➡ 123).

If the oil level is too low:

- Topping up the engine oil (▮▮▮▮▶ 123).

Engine fault



lights up.

Possible cause:

The engine control unit has diagnosed a fault.



WARNING

Unusual ride characteristics when engine running in emergency-operation mode.

Risk of accident

- Adapt your style of riding accordingly.
- Avoid accelerating sharply and overtaking.◀
- If you continue to ride be prepared for unusual engine behaviour (low power, poor throttle response, abrupt stalling, etc.).

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Severe engine fault



flashes.

Possible cause:

The engine control unit has diagnosed a severe fault.



WARNING

Engine damage when running in emergency-operation mode.

Risk of accident

- Adapt your style of riding accordingly: ride slowly, avoid sharp accelerating and overtaking.
- If possible, have the vehicle brought in and the fault rectified by a specialist

workshop, preferably an authorised BMW Motorrad dealer.◀

- If you continue to ride be prepared for unusual engine behaviour (low power, poor throttle response, abrupt stalling, etc.).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Front light failure



lights up yellow.



appears on the display.

Possible cause:

Low-beam headlight, high-beam headlight, parking light or front flashing turn indicator defective.

The low-beam headlight or one of the LED turn indicators must be replaced.

- Consult a specialist workshop, preferably an authorised BMW Motorrad dealer.
- Replacing bulb for high-beam headlight (➡ 142).

Rear light failure



lights up yellow.



appears on the display.

Possible cause:

Rear light, brake light or rear flashing turn indicator defective. The LED rear light must be replaced.

- Consult a specialist workshop, preferably an authorised BMW Motorrad dealer.

Light failure



lights up yellow.



Bulb symbol with two arrows appears on the display.

Possible cause:

A combination of light failures has occurred.

- Consult a specialist workshop, preferably an authorised BMW Motorrad dealer.

DWA battery weak

– with alarm system (DWA)^{OE}



appears on the display.



NOTICE

This error message shows briefly only after the Pre-Ride-Check completes. ◀

Possible cause:

The integral battery in the anti-theft alarm (DWA) has lost a significant proportion of its original capacity. There is no assurance of how long the DWA anti-theft alarm can remain operational if the vehicle's battery is disconnected.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

DWA battery flat

– with alarm system (DWA)^{OE}



lights up yellow.



appears on the display.



NOTICE

This error message shows briefly only after the Pre-Ride-Check completes. ◀

Possible cause:

The integral battery in the anti-theft alarm (DWA) has lost its entire original capacity. There is no assurance that the DWA anti-theft alarm will be operational if the vehicle's battery is disconnected.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

On-board system voltage low



appears on the display. Generator power is only just sufficient to supply all consumers and charge the battery.

Possible cause:

Too many consumers switched on. On-board system voltage tends to drop particularly at low engine rpm and when the engine is idling.

- When riding at low engine rpm switch off all consumers that are not necessary for road safety (e.g. heated body warmer or auxiliary headlights).

On-board system voltage critical



lights up yellow.



appears on the display.

Generator power is no longer sufficient to supply all consumers and charge the battery. In order to ensure that the engine can be started and the motorcycle ridden, the on-board electronics switch off the electricity supply to the on-board sockets and the auxiliary headlights. In extreme cases the seat heating and the grip heating might also be shut down.

Possible cause:

Too many consumers switched on. On-board system voltage tends to drop particularly at low engine rpm and when the engine is idling.

- When riding at low engine rpm switch off all consumers that are not necessary for road safety (e.g. heated body warmer or auxiliary headlights).

Battery charge voltage insufficient



lights up red.



appears on the display.



WARNING

Non-availability of various systems such as lights, engine or ABS on account of discharged battery.

Risk of accident

- Do not continue your journey. ◀

Battery is not being charged. If you continue to ride the vehicle the on-board electronics will drain the battery.

Possible cause:

Alternator or alternator drive faulty or fuse for alternator regulator has blown.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

ABS self-diagnosis not completed



flashes.

Possible cause:



ABS self-diagnosis not completed

The ABS function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed for the wheel speed sensors to be checked: 5 km/h)

- Pull away slowly. Bear in mind that the ABS function is not available until self-diagnosis has completed.

ABS fault



lights up.

Possible cause:

The ABS control unit has detected a fault. The ABS function is not available.

- You can continue to ride the vehicle, but make due provi-

sion for the fact that the ABS function is not available. Bear in mind the more detailed information on situations that can lead to an ABS fault (►► 116).

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

ASC intervention



quick-flashes.

The ASC has detected a degree of instability at the rear wheel and has intervened to reduce torque. The warning light flashes for longer than ASC intervention lasts. This affords the rider visual feedback on control intervention even after the critical situation has been dealt with.

ASC self-diagnosis not completed



slow-flashes.

Possible cause:



ASC self-diagnosis not completed

The ASC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed for the wheel sensors to be checked: min 5 km/h)

- Pull away slowly. Bear in mind that the ASC function is not available until self-diagnosis has completed.

ASC switched off



ASC warning light flashes.

Possible cause:

The rider has switched off the ASC system.

- Switch on ASC.

ASC fault



ASC warning light flashes.

Possible cause:

The ASC control unit has detected a fault. The ASC function is not available.

- You can continue to ride. Bear in mind that the ASC function is not available. Bear in mind the more detailed information on situations that can lead to an ASC fault (►► 118).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

ESA fault



lights up yellow.



appears on the display.

Possible cause:

The ESA control unit has detected a fault. In this condition, the motorcycle has too much damping and is uncomfortable to drive, especially on roads in poor condition.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Tyre pressure outside permitted tolerance

– with tyre pressure monitoring (RDC)^{OE}



flashes red.



+ the critical tyre pressure shows red.

Possible cause:

Measured tyre pressure is outside permitted tolerance.

- Check the tyre for damage and to ascertain whether the vehicle can be ridden with the tyre in its present condition.

If the vehicle can be ridden with the tyre in its present condition:

- Correct the tyre pressure at the earliest possible opportunity.



NOTICE

Before you adjust tyre pressure, read the information on temperature compensation and adjusting pressure in the section entitled "Engineering details". ◀

- Have the tyre checked for damage by a specialist

workshop, preferably an authorised BMW Motorrad dealer.

If you are unsure whether the vehicle can be ridden with the tyre in its present condition:

- Do not continue your journey.
- Notify the breakdown service.

Signal transmission disrupted

– with tyre pressure monitoring (RDC)^{OE}



+ "---" or "-- ---" appears on the display.

Possible cause:

The vehicle did not reach the minimum required speed (▶▶ 119).



RDC sensor is not active

min 30 km/h (The RDC sensor does not transmit its signal to the vehicle until a certain minimum speed has been reached.)

- Increase speed above this threshold and observe the RDC readings. Assume that a permanent fault has not occurred unless the 'General' warning light comes on to accompany the symptoms. Under these circumstances:
- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Possible cause:

Wireless communication with the RDC sensors has been disrupted. Possible causes include radio-communication systems operat-

ing in the vicinity and interfering with the link between the RDC control unit and the sensors.

- Move to another location and observe the RDC readings. Assume that a permanent fault has not occurred unless the 'General' warning light comes on to accompany the symptoms. Under these circumstances:
- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Sensor defective or system error

– with tyre pressure monitoring (RDC)^{OE}



lights up yellow.



+ "--" or "-- --" appears on the display.

Possible cause:

Motorcycle is fitted with wheels not equipped with RDC sensors.

- Fit wheels and tyres equipped with RDC sensors.

Possible cause:

1 or 2 RDC sensors have failed or a system error has occurred.

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Possible cause:

A system error has occurred.

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Battery of tyre-pressure sensor weak

– with tyre pressure monitoring (RDC)^{OE}



lights up yellow.



appears on the display.



NOTICE

This error message shows briefly only after the Pre-Ride-Check completes. ◀

Possible cause:

The integral battery in the tyre-pressure sensor has lost a significant proportion of its original capacity. There is no assurance of how long the tyre pressure control system can remain operational.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

Central locking locked

– with central locking system^{OE}



The locked symbol appears on the display.

All locks in the central locking system are locked.

Service overdue



appears on the display.



General warning light briefly shows yellow after the Pre-Ride-Check.

Possible cause:

A necessary service has not been carried out.

- Have servicing carried out as quickly as possible by a specialist workshop, preferably

an authorised BMW Motorrad dealer.

Fuel down to reserve



lights up.

Fuel-level reading turns yellow.



WARNING

Irregular engine operation or engine shutdown due to lack of fuel.

Risk of accident. Damage to catalytic converter.

- Do not run the fuel tank dry. ◀

Possible cause:

The fuel tank contains no more than the reserve quantity of fuel.



Reserve fuel

approx. 4 l

- Refuelling (➡ 105).

Ambient temperature



When the motorcycle is at a standstill the heat of the engine can falsify the ambient-temperature reading. If the effect of the engine's heat becomes excessive, "—" temporarily appears on the display.



If ambient temperature drops below the threshold this warning appears, drawing your attention to the risk of black ice forming. The display automatically switches from any other mode to the temperature reading when the temperature drops below this threshold for the first time.



Threshold for ambient temperature

approx. 3 °C

Range



The range readout indicates how far you can ride with the fuel remaining in the tank. The figure for average consumption used to calculate range is not shown and might not be the same as the average-consumption reading that appears on the display.

You must put at least five litres of fuel into the fuel tank for the new level to be registered correctly. If the sensor cannot register the new level the range readout cannot be updated.

When the motorcycle is propped on its side stand the slight angle of inclination means that the sensor cannot register the fuel level correctly. This is the reason why the range is calculated only when the side stand is in the retracted position.



NOTICE

The calculated range is only an approximate figure. Consequently, BMW Motorrad recommends that you should not try to use the full range before refuelling. ◀

Oil level



The oil-level indicator gives you an indication of the engine oil level.

The preconditions for the oil level check are as follows:

- Engine at operating temperature.
- Engine idling for at least ten seconds.
- Side stand retracted.
- Make sure the motorcycle is upright.

The readings mean:

OK: Oil level is correct.

CHECK !: Check the oil level the next time you stop for fuel.

– – -: Oil level cannot be measured (conditions as stated above not satisfied).

Service-due indicator




If a service is due, for a brief period after the Pre-Ride-Check the service symbol appears on the display and the service-due date shows instead of the odometer reading.



If the service is overdue the 'General' warning light briefly shows yellow and the service symbol lights up and remains ON.



If the countdown to the next service is less than one month, service-due date **1** appears on the display.

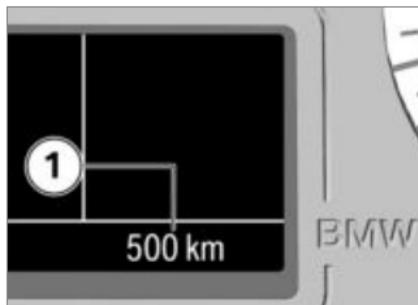

If the vehicle covers long distances in the course of the year, under certain circumstances it might be necessary to have it serviced at a date in advance of the forecast due date. If the countdown distance to the early service is within the defined displayable range, this countdown distance **1** appears on the display.


	Maximum countdown distance to next service:
	1000 km

NOTICE

If the service-due indicator appears more than a month before the service date, the current date has to be corrected. This situation can occur if the battery was disconnected.◀

Tyre pressures

– with tyre pressure monitoring (RDC)^{OE}

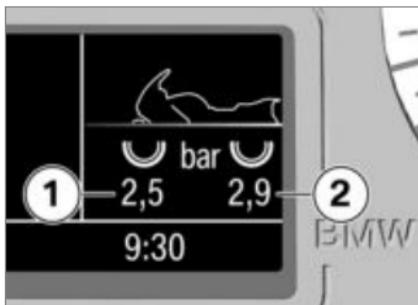

The tyre-pressure readings in the multifunction display are temperature-compensated and are always referenced to the following tyre-air temperature:

20 °C

The front tyre pressure is on the left **1**; the reading on the right **2** is the rear tyre pressure. Immediately after the ignition is switched on " -- --" is displayed.



RDC sensor is not active

min 30 km/h (The RDC sensor does not transmit its signal to the vehicle until a certain minimum speed has been reached.)

If the pressure in a tyre drops to a critical level the corresponding status indicator shows red.



The tyre warning symbol also appears on the display.



The "General" warning light flashes red.

The detailed description of BMW Motorrad RDC starts on page (📖 119).

Operation

Ignition.....	47	Spring preload	71
Ignition with Keyless Ride.....	49	Damping.....	72
Multifunction display	55	Electronic Suspension Adjust- ment.....	73
On-board computer.....	59	Clutch	75
Trip meter	61	Brakes	75
Emergency off switch (kill switch).....	62	Hill Start Control	76
Headlight	62	Tyres	77
Lights.....	63	Heating	77
Daytime riding light	64	Adjusting instrument panel.....	80
Turn indicators.....	66	Mirrors	80
Hazard warning flashers.....	67	Windscreen	80
ASC	67	Stowage compartment	81
Riding mode	68	Central locking.....	82
Cruise-control system	69	DWA.....	86

Front seat.....	90
Rear seat	91

Ignition

Keys

You receive 2 ignition keys.
Consult the information on the electronic immobiliser (EWS) (▶▶ 48) if a key is lost or mislaid.

One-key system

- Ignition switch/steering lock
- Cases locks
- Stowage-compartment lock
- Tank filler cap
- Seat lock
- Stowage compartment
- with topcase^{OA}
- Topcase
- with audio system^{OE}
- Audio compartment

Lock the handlebars




ATTENTION

Handlebars turned in wrong direction when motorcycle propped on side stand.


Risk of damage to parts if vehicle topples.

- On level ground, always turn the handlebars to the left to set the steering lock.
- In all other cases it is the lie of the ground that determines the direction in which the handlebars should be turned.◀
- Turn the handlebars to the full left or right lock position.

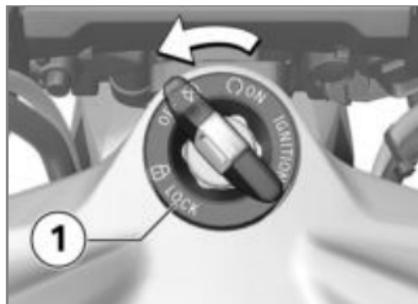

- Turn the key to position **1**, while moving the handlebars slightly.
 - » Ignition, lights and all function circuits switched off.
 - » Handlebars are locked.
 - » Key can be removed.

Switching on ignition

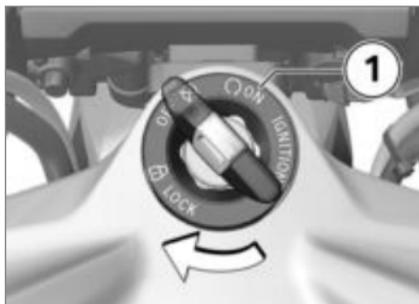

- Insert the key in the ignition switch and turn to position **1**.
 - » Side lights and all function circuits are switched on.
 - » Pre-Ride-Check is performed (▣▣▣▶ 99)
 - » ABS self-diagnosis is performed (▣▣▣▶ 100)
 - » ASC self-diagnosis is performed (▣▣▣▶ 101)

Switching off ignition



- Turn the ignition key to position **1**.
 - » When the ignition is switched off, the instrument cluster remains switched on for a short time and displays any existing fault messages.
 - » Handlebars not locked.
 - » Electrically powered accessories remain operational for a limited period of time.
 - » The battery can be recharged via the socket.
 - » Key can be removed.

- with daytime running light^{OE}
 - The daytime running light goes out soon after the ignition is switched off.<
- with LED auxiliary headlights^{OA}
 - The LED auxiliary headlights go out soon after the ignition is switched off.<

Electronic immobiliser EWS

The electronic design of the motorcycle allows it to access data stored in the ignition key by means of a ring antenna located in the ignition switch/steering lock. The engine control unit will not permit the engine to be started unless the key is identified as “authorised”.



NOTICE

A spare key attached to the same ring as the ignition key used to start the engine could

"irritate" the electronics, in which case the enabling signal for starting is not issued. The warning with the key symbol appears in the multifunction display.

Always keep the spare key separately from the ignition key. ◀

If you lose a key, you can have it barred by your authorised BMW Motorrad dealer.

If you wish to do this, you will need to bring all other keys for the motorcycle with you. The engine cannot be started by a barred key, but a key that has been barred can subsequently be reactivated.

You can obtain extra keys only through an authorised BMW Motorrad dealer. The keys are part of an integrated security system, so the dealer is under an obligation to check the

legitimacy of all applications for replacement/extra keys.

Ignition with Keyless Ride

– with Keyless Ride^{OE}

Keys



NOTICE

The telltale light for the radio-operated key flashes while the search for the radio-operated key is in progress.

The telltale light goes out as soon as the radio-operated key or the emergency key is found. The telltale light goes out briefly if the search times out without the radio-operated key or the emergency key being found. ◀

You receive one radio-operated key and one emergency key. Please consult the information on

the electronic immobiliser (EWS) if a key is lost or mislaid (► 48). Ignition, fuel filler cap and anti-theft alarm system all work with the radio-operated key. Seat lock, stowage compartment, top-case and cases can be locked and unlocked manually.



NOTICE

The vehicle cannot be started or the central locking system locked or unlocked if the radio-operated key is not within range (e.g. key inside one of the cases or the topcase).

If the key is taken out of range the ignition is switched off after approximately 1.5 minutes, but the central locking system is **not** locked.

It is advisable to keep the radio-operated key on your person (e.g. in a jacket pocket) and to have the emergency key with you as an alternative. ◀



Range of the Keyless Ride radio-operated key

approx. 1 m

Lock the handlebars

Precondition: Handlebars turned to the right or left full-lock position. Radio-operated key is within range.



ATTENTION

Handlebars turned in wrong direction when motorcycle propped on side stand.

Risk of damage to parts if vehicle topples.

- On level ground, always turn the handlebars to the left to set the steering lock.
- In all other cases it is the lie of the ground that determines the direction in which the handlebars should be turned.◀
- Press and hold down button **1**.
 - » The steering lock engages with an audible click.
 - » Ignition, lights and all function circuits switched off.
- Short-press button **1** to disengage the steering lock.

Switching on ignition

Precondition: Radio-operated key is within range.



- There are **two** ways of activating the ignition.

Version 1:

- Short-press button **1**.
 - » Side lights and all function circuits are switched on.
 - with daytime running light^{OE}
 - with Pro Headlight^{OE}
 - » Daytime riding light is switched on.◀
 - with LED auxiliary headlights^{OA}
 - » LED auxiliary headlights are switched on.◀
 - » Pre-Ride-Check is performed (▮▶ 99)

- » ABS self-diagnosis is performed (▣▣▣▣ 100)
- » ASC self-diagnosis is performed (▣▣▣▣ 101)

Version 2:

- Steering lock is engaged; press and hold down button **1**.
- » The steering lock disengages.
- » Parking lights and all function circuits switched on.
- » Pre-Ride-Check is performed (▣▣▣▣ 99)
- » ABS self-diagnosis is performed (▣▣▣▣ 100)
- » ASC self-diagnosis is performed (▣▣▣▣ 101)

Switching off ignition

Precondition: Radio-operated key is within range.



- There are **two** ways of deactivating the ignition.

Version 1:

- Short-press button **1**.
- » Light is switched off.
- » Handlebars (steering lock) are not locked.

Version 2:

- Turn the handlebars to the full left or right lock position.
- Press and hold down button **1**.
- » Light is switched off.
- » The steering lock engages.

Electronic immobiliser EWS

The on-board electronics access the data saved in the radio-operated key via a ring aerial in the R/C ignition lock. The ignition is not enabled for starting until the engine control unit has recognised the radio-operated key as "authorised" for your motorcycle.



NOTICE

A spare vehicle key attached to the same ring as the radio-operated key used to start the engine could "irritate" the electronics, in which case the enabling signal for starting is not issued. The warning with the key symbol appears in the multifunction display. Always keep the spare key separately from the radio-operated key.◀

If you mislay a radio-operated key you can have the key in question barred by your authorised BMW Motorrad dealer. In order to have a key barred you must bring along all the other keys belonging to the motorcycle.


The engine cannot be started by a barred radio-operated key, but a radio-operated key that has been barred can subsequently be reactivated.

You can obtain emergency/extra keys only through an authorised BMW Motorrad dealer. The radio-operated keys are part of an integrated security system, so the dealer is under an obligation to check the legitimacy of all applications for replacement/extra keys.

Loss of the radio-operated key, emergency key is available

Emergency key is available.

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Please consult the information on the electronic immobiliser (**EWS**) if a key is lost or mislaid.
- If you happen to lose or mislay the radio-operated key while on a journey, you can start the vehicle with the emergency key.

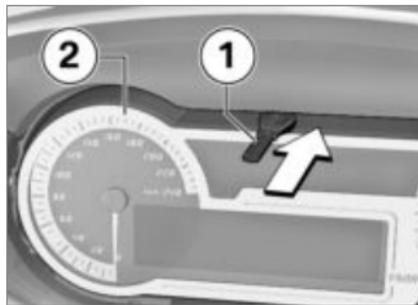

- Insert emergency key **1** **centred** into the gap above instrument panel **2** **arrow**.




Time during which the engine has to be started. The unlocking procedure has to be repeated if this time is allowed to expire.

30 s

- » Pre-Ride-Check is performed.
- Key has been recognised.
- Engine can be started.
- Start engine (▶▶ 98).


Battery of the radio-operated key is empty, emergency key is not available

- Make sure the ground is level and firm and place the motorcycle on its stand.

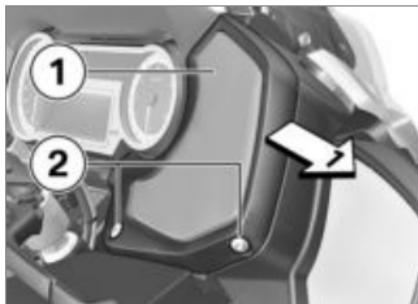


- Remove screws **2**.
- Ease speaker cover **1** to the right to remove.

– with audio system^{OE}

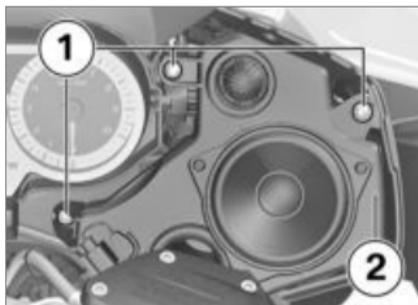

- Remove screws **1**.


- Carefully remove speaker unit **2**, noting the plug.

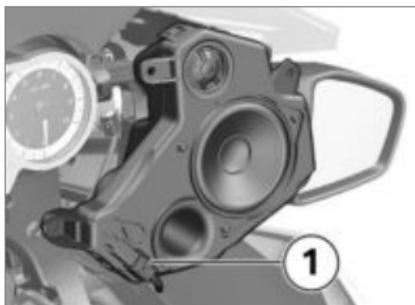

- Disconnect plug **1**.<



- Flip open the bitted key.
- Hold the radio-operated key by bitted key **1**.

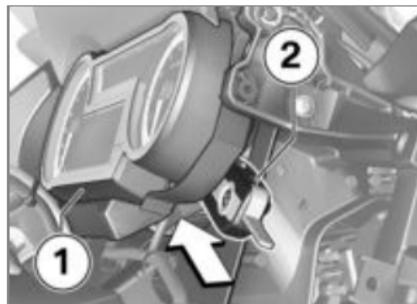


- Hold radio-operated key **be-
hind** instrument panel **1 ar-
row**, level with the warning and
telltale lights.

 Time during which the engine has to be started. The unlocking procedure has to be repeated if this time is allowed to expire.


30 s

- » Pre-Ride-Check is performed.
- Key has been recognised.
- Engine can be started.
- Start engine (→ 98).


– with audio system^{OE}

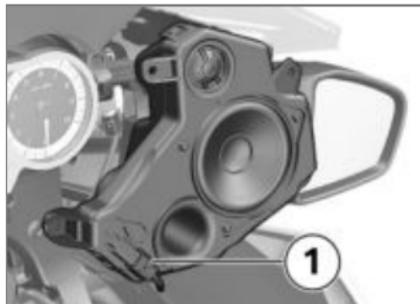

- Connect plug **1**.

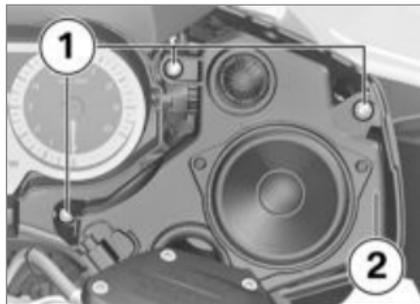

- Seat speaker unit **2** in the mount.
- Install screws **1**.

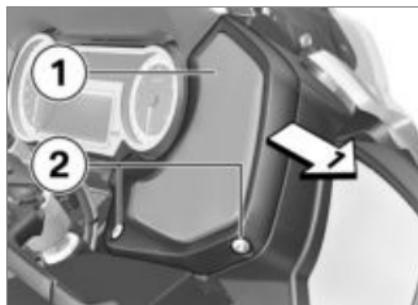

- Hold speaker cover **1** in position and install screws **2**.


Replacing battery of radio-operated key

If the radio-operated key does not react when you short-press or long-press a button:

- The integral battery in the R/C key has lost a significant proportion of its original capacity.
- » Change the battery.



The battery symbol appears on the display.

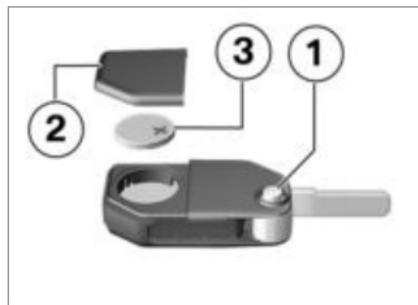

- Press button **1**.
- » Bitted key flips out.
- Push up battery cover **2**.
- Remove battery **3**.
- Dispose of the old battery in accordance with all applicable laws and regulations; do not attempt to dispose of batteries as domestic waste.



ATTENTION

Batteries unsuitable or not inserted not in compliance with correct procedure.

Component damage

- Use a battery compliant with the manufacturer's specifications.
- When inserting the battery, always make sure polarity is correct. ◀
- Insert the new battery with the positive terminal up.



Battery type


for Keyless Ride-radio-operated key

CR 2032

- Install seal **1** and battery cover **2**.
- » Red LED on the instrument panel flashes.
- » The remote control is again ready for use.


Multifunction display

Selecting menu

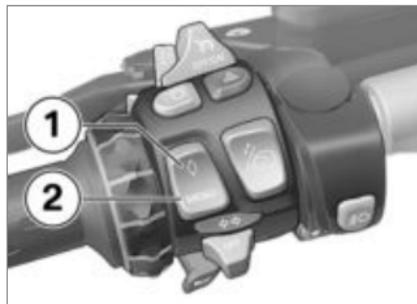

Press button **2** to step through the sequence of menus, starting with the Dynamic ESA menu. Each time you press button **2** you call up the next menu in the sequence; the number of menus depends on the options fitted to the motorcycle. You also have the option of pressing button **1** for direct access to a favourite menu of your choice.

With the exception of the Audio section, you cannot access the Settings menu unless the motorcycle is at a complete standstill.

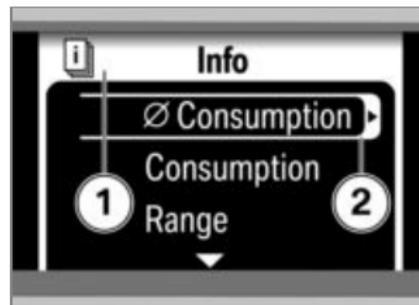


The menu you selected appears at position **1**. The submenu you selected **2** has a border.


NOTICE

See the separate Quick Reference Guide for an overview of all menus. ◀

Selecting menu item

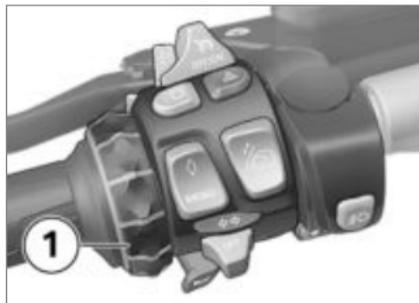

Use Multi-Controller **1** to move the cursor in a menu.

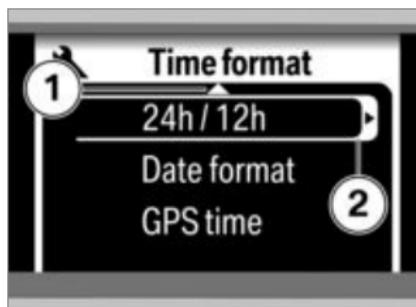


An arrow **1** at the top or bottom of the display indicates that there are other items in this menu that you can view by turning the Multi-Controller in the corresponding direction. If arrow **2** appears in the cursor, you can call up a submenu by pressing the Multi-Controller to the right (for information on the different meaning in relation to average values and list selections, see (▶▶ 56)).

Setting parameters



Direct selection

If you move the cursor to a menu item that requires no other settings, your selection goes active right away.

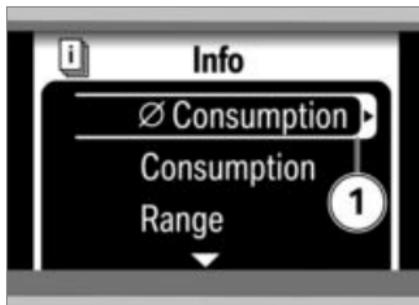

Resetting values


You can reset average values marked with an arrow **1** by long-pressing the Multi-Controller to the right.



Selecting from a list


A circle **1** beside each selectable item means that the items are part of a selection list. A circle with a dot indicates the item that is currently selected.

If you want to change the selection move the cursor to some other item in the list and press the Multi-Controller to the right to either activate or deactivate the parameter you selected.

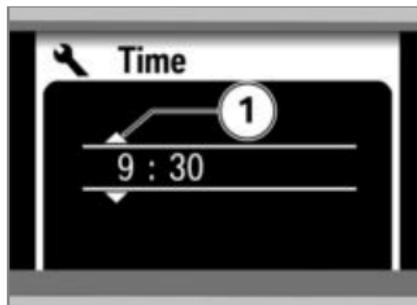

Setting numerical values


If there are one or more numerical values between the arrows **1**, you can increase the values by turning the Multi-Controller up or reduce the values by turning it down. You can toggle between the values by pressing the Multi-Controller to the right or left.

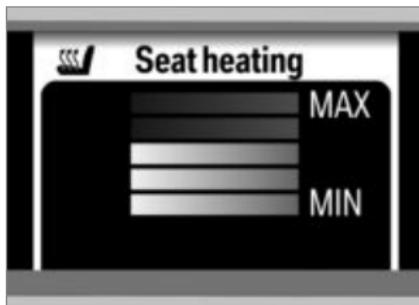


Setting relative values

A bar indicator enables you to set a value in a range between two limits. Turn the Multi-Controller up to increase the setting or down to reduce the setting.

Exiting menu

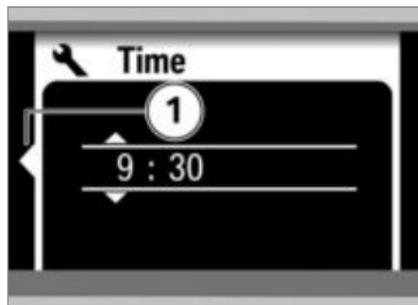

Arrow **1** appears when you are in a submenu.

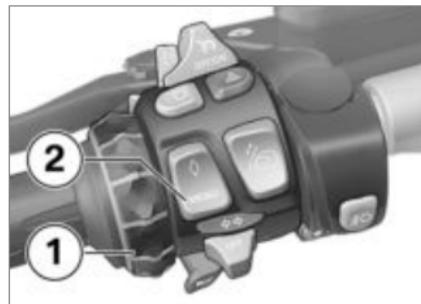

Press Multi-Controller **1** to the left to return to the next highest menu; press MENU button **2** to return to the main menu.

If you want to hide the menus, press Multi-Controller **1** to the left in a main menu.

Selecting favourite menu

- Select the main menu of your choice.



- Press and hold down button **1**.
 The lozenge appears to the right of the selected menu.

» The menu you have selected will subsequently be called up whenever you press button **1**.

Adapting mode of presentation

- Switch on the ignition.
- Call up the **Settings** menu and select **User**.

The settings you can choose are as follows:

- **Language:** Display language (German, English, Span-

ish, Italian, French, Dutch, Portuguese)

- **Time format - 12 h / 24 h:** Clock in 12-hour format (12 h) or in 24-hour format (24 h)
- **Time format - Date format:** Date in day . month . year format (dd . mm . yy) or in month / day / year format (mm / dd / YY)
- **Time format - GPS time:** Accept GPS time and GPS date from the built-in navigation system (On), (Off)
- **Brightness:** Brightness of the display and the instruments
- **Start logo:** Show start logo after the ignition is switched on (On), (Off)
- **Fact. settings:** Restore factory defaults (when **Reset!** appears on the display press the Multi-Con-


troller to the right and hold in this position)

- **Background:** Image on the display when the radio is off: Empty: No image, Logo: Logo (RT), Speedo: Digital speedometer reading.
- Use the Multi-Controller to configure the desired settings.

On-board computer

Select display

- Call up the **Info** menu and select the item of information of your choice.

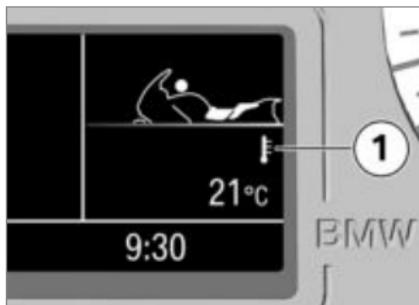

The following items of information can be displayed in panel **1**:

- ØConsump.: Average fuel consumption
- Consump.: Current fuel consumption
- Range: Range with fuel remaining in fuel tank
- ØSpeed: Average speed
- Temperature: Ambient temperature
- Tire pressure: Tyre pressures
- Stopwatch: Stopwatch
- Travel times: Travel times


- Date: Current date
- Oil level: Engine-oil level
- Elec. voltage: On-board voltage
- Off: No reading

Resetting the average values

- Call up the Info menu and select the average value you want to reset.
- Push the Multi-Controller to the right and hold it in this position until the average value is reset.

Operate stopwatch


- Call up the Info menu and select Stopwatch.

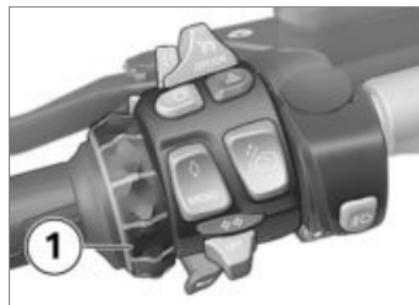

- With the stopwatch stopped, push Multi-Controller **1** to the right to start the stopwatch.
 - » The stopwatch continues timing even if you select some other reading or switch off the ignition.
- When the stopwatch is running, push Multi-Controller **1** to the right to stop the stopwatch.
- Push Multi-Controller **1** to the right and hold it in this position to reset the stopwatch.

Measuring travel times

- Call up the Info menu and select Travel times.

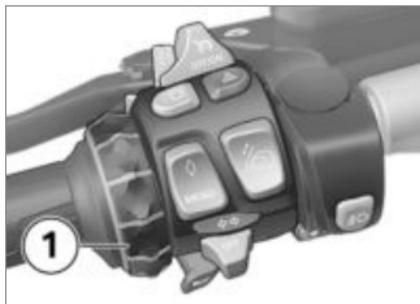

- Push Multi-Controller **1** to the right and hold it in this position to reset the travel time.

» Timing continues even if you select some other reading or switch off the ignition.

 Time during which the motorcycle was on the move since the last reset.

 Time during which the motorcycle was at a standstill since the last reset.

Trip meter

Selecting the tripmeter

- Switch on the ignition.



- Use Multi-Controller **1** to select the Trip menu and then select tripmeter **2** of your choice.

The following counters can be displayed:

- Tripmeter 1 (Trip 1)
- Tripmeter 2 (Trip 2)
- Automatic tripmeter (Trip Auto.), resets automatically eight hours after ignition OFF.

Resetting tripmeter

- Switch on the ignition.
- Select the desired tripmeter.



- Push Multi-Controller **1** to the right and hold it in this position until tripmeter **2** is reset.

Emergency off switch (kill switch)



- 1 Emergency off switch (kill switch)




WARNING

Operation of the kill switch while riding.

Risk of fall due to rear wheel locking.

- Do not operate the kill switch when riding. ◀

The emergency off switch is a kill switch for switching off the engine quickly and easily.

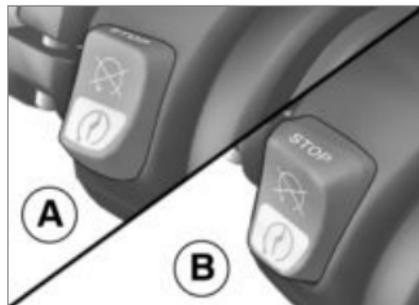

- A Engine switched off
B Normal operating position (run)

Headlight

Headlight beam throw and spring preload

Headlight beam throw is generally kept constant when spring preload is adjusted to suit load. Spring preload adjustment might not suffice only if the motorcycle

is very heavily loaded. Under these circumstances, headlight beam throw has to be adjusted to suit the weight carried by the motorcycle.




NOTICE

If there are doubts about the correct headlight beam throw, have the setting checked by a specialist workshop, preferably an authorised BMW Motorrad dealer. ◀

Adjusting headlight beam throw

If, for a high load, the adjustment of the spring pre-load is no longer sufficient not to dazzle oncoming traffic:

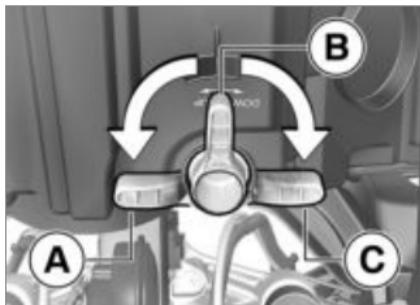

- The headlight beam-throw is adjusted via an engage pivot lever.
- **A** Setting for light load (one-up)
- **B** Position for riding one-up with luggage
- **C** Setting for high load (two-up)

Lights

Side light

The side lights switch on automatically when the ignition is switched on.

NOTICE

The side lights place a strain on the battery. Do not switch the ignition on for longer than absolutely necessary. ◀

Low-beam headlight

The low-beam headlight switches on automatically when you start the engine.

High-beam headlight and headlight flasher




- Push switch **1** forward to switch on the high-beam headlight.
- Pull switch **1** back to operate the headlight flasher.

NOTICE

The high-beam headlight can also be switched on when the engine is not running. ◀

Parking lights

- Switch off the ignition.

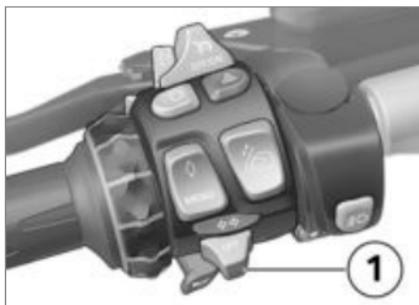

- Immediately after switching off the ignition, push button **1** to the left and hold it in this position until the parking lights come on.
- Switch the ignition on and off again to switch off the parking lights.

Operating LED auxiliary headlights

– with LED auxiliary headlights^{OA}

NOTICE

The auxiliary headlights have approval as fog lights and their use

is permissible in bad weather conditions only. Always comply with the road traffic regulations in force in the country in which the vehicle is used.◀



- Press button **1** to switch on the LED auxiliary headlights.



The telltale light shows.



If this warning symbol appears it tells you that the on-board system voltage is low. If applicable, the auxiliary headlights might have been temporarily switched off.

- Press button **1** again to switch off the LED auxiliary headlights.

Daytime riding light

– with daytime running light^{OE}

Manual daytime running light

Precondition: automatic daytime running light is switched off.

WARNING

Activation of daytime riding light in the dark.

Poorer vision and oncoming traffic dazzled.

- Do not use the daytime running light when it is dark.◀

NOTICE

By comparison with the low-beam headlight, the daytime running light makes the vehicle

- Select Day run lights from the menu and set Auto. DRL to On.

 The symbol for the automatic daytime running light shows in the display.


- » If the ambient brightness decreases below a certain value, the low beam headlight is automatically switched on (e. B. in a tunnel). If a sufficient ambient brightness is detected, the daytime running light is switched on again. If the daytime running light is active, the daytime running light symbol is displayed in the multifunction display.

Manual operation of the light when the automatic system is switched on

- If you press the button for the daytime riding light the daytime riding light is switched off and the low-beam headlight and front side lights are switched on (e. g. when you ride into a tunnel, and the response of the automatic daytime riding light to the change in ambient brightness is delayed). The auxiliary headlight switches on again when the daytime riding light is switched off.
- If you press the button again the daytime riding light is re-activated, in other words the daytime riding light is switched on again when ambient light is bright enough.

Turn indicators Operating the turn indicators

- Switch on the ignition.

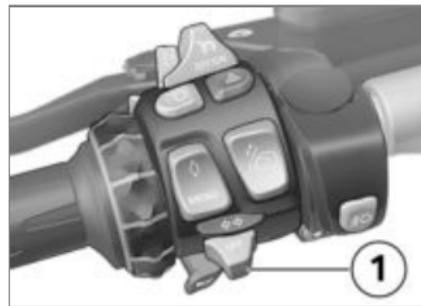

- Push button **1** to the left to switch on the left turn indicators.
- Push button **1** to the right to switch on the right turn indicators.
- Operate centre button **1** to cancel the turn indicators.



Turn-indicator cancellation

The turn indicators are cancelled automatically after the defined time and distance.

Hazard warning flashers

Operating hazard warning flashers

- Switching on ignition (▮▮▮▮ 48).



NOTICE

The hazard warning flashers place a strain on the battery. Do not use the hazard warning flashers for longer than absolutely necessary. ◀



- Press button **1** to switch on the hazard warning flashers.
 - » Ignition can be switched off.
- To switch off the hazard warning flashers, switch on the ignition if necessary and press button **1** again.

ASC


Switching ASC function off and on

- Switch on the ignition.
- Call up the *Settings* menu and select *ASC*.



NOTICE

This menu cannot be called up while the motorcycle is on the move. ◀

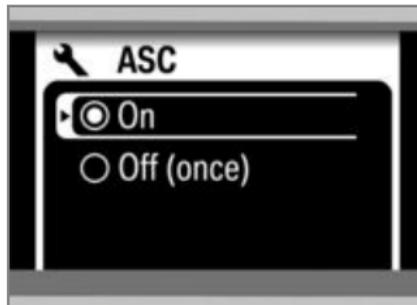

- Select *Off (once)* to switch off ASC once until the next time the ignition is switched on.



The ASC warning light shows if the ASC has been switched off.

- Select *On* to switch on the ASC. Alternatively: Switch the ignition off and then on.



ASC warning light goes out; if self-diagnosis has not completed the ASC warning light starts flashing.

Riding mode

Using the riding modes

BMW Motorrad has developed three operational scenarios for your motorcycle from which you can select the scenario suitable for your situation:

- Riding on a rain-wet road surface
- Riding on a dry road surface

- with Pro riding modes^{OE}
- Dynamic riding on a dry road surface

The interplay of engine torque, throttle response, ABS control and ASC control is optimised for each of these three scenarios.

– with Dynamic ESA^{OE}
The suspension setting also adapts to the selected scenario.

Setting riding mode

- Switching on ignition (➡ 48).



- Press button **1**.



NOTICE

See the section entitled "Engineering details" for more information on the various ride modes that can be selected.◀



The selection arrow **2** and the active riding mode **1** are displayed.



- Press button **1** as often as necessary until the required riding

mode is indicated next to the selection arrow.

The following ride modes can be selected:

- RAIN: For riding on a rain-wet road surface.
- ROAD: For riding on a dry road surface.

– with Pro riding modes^{OE}

» The following riding mode can also be selected:

– DYNA: For dynamic riding on a dry road surface.<

» With the motorcycle at a standstill, the selected mode is activated after approximately two seconds.

» The newly selected riding mode is activated as you ride only if the throttle twistgrip is returned to the idle position.

» Following activation of the new riding mode the symbols for coolant temperature and fuel level reappear in the display.

» The mode selected in this way is retained with the engine-characteristic, ABS, ASC and Dynamic ESA adaptation settings even after the ignition has been switched off.

Cruise-control system

– with cruise control^{OE}

Switching on cruise control



- Slide switch **1** to the right.
- » Button **2** is enabled for operation.

Saving road speed



- Briefly push button **1** forward.

 Adjustment range for cruise control (gear-dependent)

10...210 km/h

SET Telltale light for cruise control shows.

» The motorcycle maintains your current cruising speed and the setting is saved.

Accelerating



- Briefly push button **1** forward.
 - » Speed is increased by approx. 2 km/h each time you push the button.
- Push button **1** forward and hold it in this position.
 - » The motorcycle accelerates steplessly.
 - » The current speed is maintained and saved if button **1** is not pushed again.

Decelerating



- Briefly push button **1** back.



Reducing speed

Speed is reduced each time you push the button.


2 km/h

- Push button **1** back and hold it in this position.
 - » The motorcycle decelerates steplessly.
 - » The current speed is maintained and saved if button **1** is not pushed again.

Deactivate cruise control

- Brake, pull the clutch lever or turn the throttle twistgrip (close the throttle by turning the twistgrip back past the idle position) to deactivate the cruise-control system.
 - » Telltale light for cruise control goes out.

Resuming former cruising speed

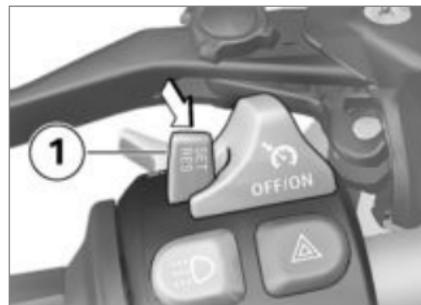


- Briefly push button **1** back to return to the speed saved beforehand.

NOTICE

Opening the throttle does not deactivate the cruise-control system. If you release the twistgrip the motorcycle will decelerate only to the cruising speed saved in memory, even though you might have intended slowing to a lower speed.◀

SET Telltale light for cruise control shows.

Switching off cruise control

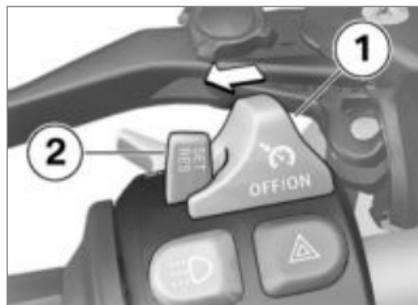

- Slide switch **1** to the left.
 - » The system is deactivated.
 - » Button **2** is disabled.

Spring preload Adjustment

It is essential to set spring preload of the rear suspension to suit the load carried by the motorcycle. Increase spring preload when the vehicle is heavily loaded and reduce spring preload accordingly when the vehicle is lightly loaded.


Adjusting spring preload for rear wheel

WARNING

Adjusting spring preload while riding.


Risk of accident

- Do not attempt to adjust spring preload unless the motorcycle is at a standstill.◀
- Make sure the ground is level and firm and place the motorcycle on its stand.

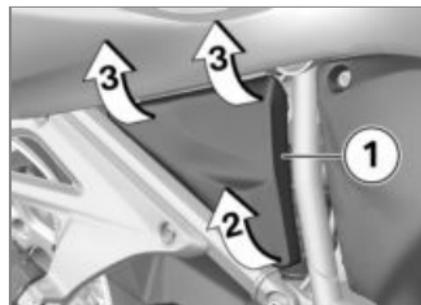

- Ease out bottom of cover **1** at position **2**.

- In order not to damage the cover or the mounts, disengage the cover at positions **3**.

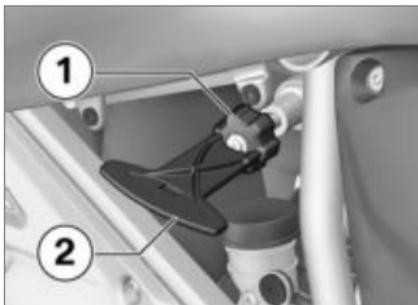

WARNING

Spring preload setting and spring-strut damping setting not matched.

Impaired handling.

- Adjust spring-strut damping to suit spring preload. ◀
- If you want to increase spring preload, use tool **2** (on-board toolkit) to turn knob **1** clockwise.

- If you want to reduce spring preload, use tool **2** to turn knob **1** counter-clockwise.



Basic setting of spring preload, rear

– without Dynamic ESA^{OE}

Turn the knob as far as it will go counter-clockwise. (One-up riding without luggage)

Turn the knob as far as it will go counter-clockwise, then back it off 10 turns in the clockwise direction. (One-up riding with luggage)

Turn the knob as far as it will go clockwise. (Two-up riding and luggage)◀



- Seat the cover in mount **2** and press it into mounts **1**.


Damping Adjustment

Damping must be adapted to suit the surface on which the motorcycle is ridden and to suit spring preload.

- An uneven surface requires softer damping than a smooth surface.
- An increase in spring preload requires firmer damping, a reduction in spring preload requires softer damping.

Adjusting the damping characteristic for rear wheel

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Set the damping from the left-hand vehicle side.

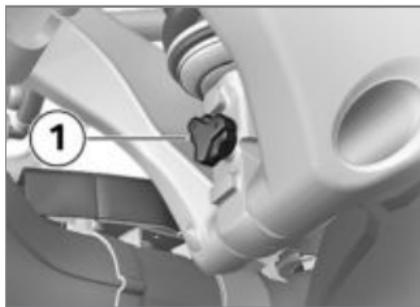

- If you want to increase damping, turn adjusting screw **1** clockwise.
- If you want to reduce damping, turn adjusting screw **1** counter-clockwise.

 Basic setting of rear-suspension damping characteristic

– without Dynamic ESA^{OE}

Turn the knob as far as it will go in the clockwise direction, then back it off 6 clicks in the counter-clockwise direction (One-up riding without luggage)

Turn the knob as far as it will go in the clockwise direction, then back it off 4 clicks in the counter-clockwise direction (One-up with luggage)

Turn the knob as far as it will go in the clockwise direction, then back it off 2 clicks in the counter-clockwise direction (Two-up with luggage)<1

Electronic Suspension Adjustment

– with Dynamic ESA^{OE}

Possible settings

Dynamic ESA enables you to adjust your motorcycle's suspension to suit the load and the road conditions.

Via ride height sensors, Dynamic ESA detects the movements in the chassis and suspension and responds to the same by adjusting the damper valves. The chassis and suspension will thus be adapted to the characteristics of the terrain.

You can set the damping to a harder (HARD) or softer (SOFT) setting than the basic setting (NORMAL).

– with Pro riding modes^{OE}

The suspension setting depends on the riding mode selected.

The damping defined by the riding mode can be changed by the rider.


Adjusting the chassis and suspension

- Start the engine.

NOTICE

You can adjust the damping characteristic while the motorcycle is on the move.◀

- Call up the ESA menu.

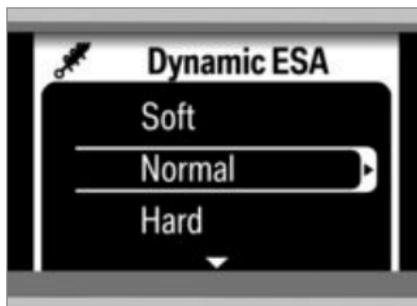


The possible settings for the damping characteristic appear on the display.

- **Soft**: Comfortable damping characteristic
- **Normal**: Normal damping characteristic
- **Hard**: Sporty damping characteristic
- Select the damping characteristic you want or move the cursor down to set the vehicle load.

NOTICE

The load cannot be set while the motorcycle is in motion.◀

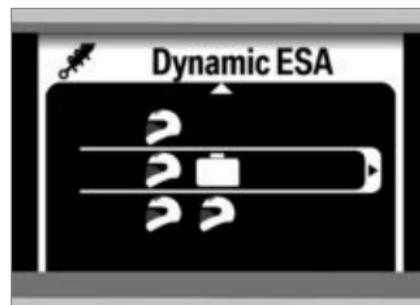

The possible settings for vehicle load appear on the display.

-  One-up
-  One-up with luggage
-  Two-up (with luggage)

- Select the vehicle load variant you want.

» The suspension adjusts to suit the new setting and the Dynamic ESA reading changes accordingly. The symbols for vehicle load and damping characteristic are greyed while adjustment is in progress.

Clutch


Adjusting the clutch lever



Adjusting the clutch lever while riding.

Risk of accident

- Do not attempt to adjust the clutch lever unless the motorcycle is at a standstill.◀

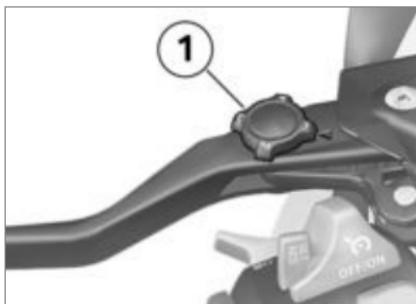

- Turn knob **1** to the desired position.



The adjuster is easier to turn if you push the clutch lever forward.◀

- » Four settings are possible:
 - Position 1: Smallest span between handlebar grip and clutch lever.
 - Position 4: Largest span between handlebar grip and clutch lever.

Brakes


Adjusting the front brake lever



Adjusting the brake lever while riding.

Risk of accident

- Do not attempt to adjust the brake lever unless the motorcycle is at a standstill.◀

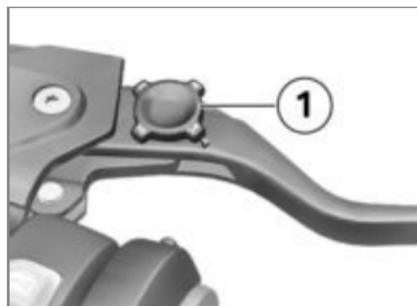

- Turn knob **1** to the desired position.

NOTICE

The adjuster is easier to turn if you push the brake lever forward.◀

- » Four settings are possible:
- Position 1: Smallest span between handlebar grip and brake lever.
- Position 4: Largest span between handlebar grip and brake lever.

Hill Start Control

– with Hill Start Control^{OE}

Hill Start Control Operation

ATTENTION

Switching off engine or ignition, extending the side stand, timeout (approx. 20

minutes) or if a fault develops.

Brake failure of the pullaway assistant.


- It is essential to apply the brakes manually to hold the vehicle.◀

NOTICE

Hill Start Control is purely a comfort system to facilitate holding the machine and pulling way on uphill gradients and should not be confused with a parking brake.◀

NOTICE

See the section entitled "Engineering details" for more information on Hill Start Control.◀

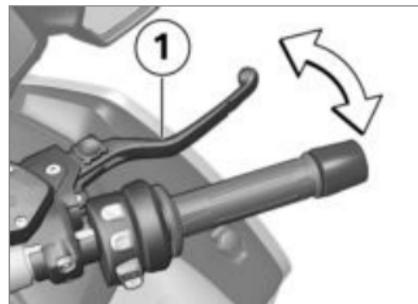

- Firmly pull and then release handbrake lever **1**.

 Telltale light for Hill Start Control appears in the display.

- » Hill Start Control is activated.
- Pull handbrake lever **1** again to switch off Hill Start Control.

NOTICE

Hill Start Control is deactivated automatically when the motorcycle pulls away.◀

- The 'General' warning light and the telltale light show briefly

in the display and the telltale light for Hill Start Control goes out when the brakes are fully released.

- » Hill Start Control is switched off.

Tyres

Checking tyre pressure

WARNING

Incorrect tyre pressure.

Impairment of the motorcycle's handling characteristics. Shorter useful tyre life.

- Always check that the tyre pressures are correct. ◀

WARNING

Tendency of valve inserts installed vertically top open by themselves at high riding speeds.

Sudden loss of tyre pressure.

- Install valve caps fitted with rubber sealing rings and tighten firmly. ◀
- Make sure the ground is level and firm and place the motorcycle on its stand.
- Check tyre pressures against the data below.

 Tyre pressure, front
2.5 bar (tyre cold)
 Tyre pressure, rear
2.9 bar (tyre cold)

If tyre pressure is too low:

- Correct tyre pressure.

Heating


Operating the heated handlebar grips

- Start the engine.

NOTICE


The heating in the heated handlebar grips can be activated only when the engine is running. ◀

- Call up the `Handle heat.` menu.

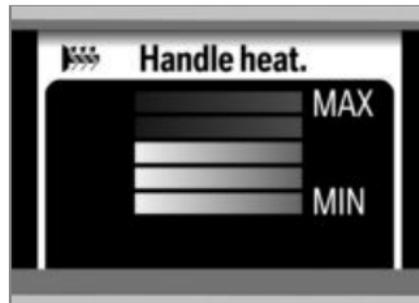

The grips have five-stage heating. Stage five is for heating the grips quickly: it is advisable to switch back to a lower stage as soon as the grips are warm.

- Select the heating stage you want.

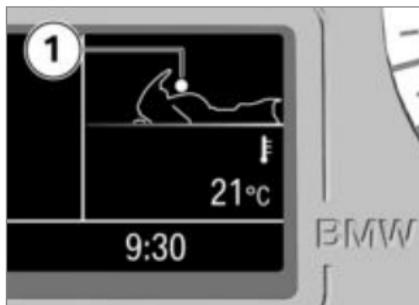

Symbol **1** appears on the display, indicating that the handlebar grip heating is ON.

Front-seat heating


– with seat heating^{OE}

- Start the engine.

NOTICE


Seat heating can be activated only when the engine is running.◀

- Call up the `Seat heating` menu.

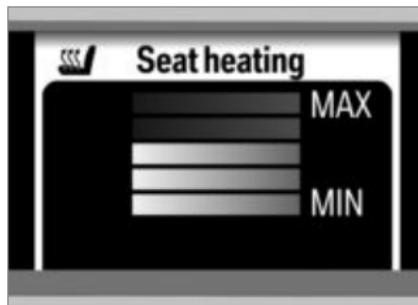

The front seat has five-stage heating. Stage five is for heating the seat quickly: it is advisable to switch back to a lower stage as soon as the seat is warm.

- Select the heating stage you want.

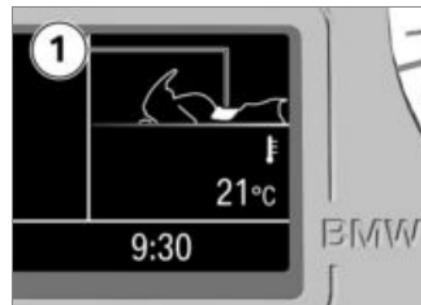

Symbol **1** appears on the display, indicating that the seat heating is ON.



If this warning symbol appears it tells you that the on-board system voltage is low. If applicable, the seat heating might have been temporarily switched off.


Rear-seat heating

– with seat heating^{OE}

- Start the engine.

NOTICE

Seat heating can be activated only when the engine is running. ◀

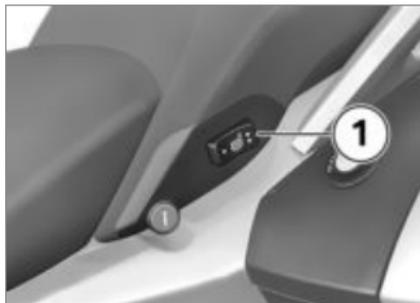

- Set switch **1** to the desired heating stage.



The rear seat has two-stage heating. Stage two is for heating the seat quickly: it is advisable to switch back to stage one as soon as the seat is warm.

- **2** Switch centred: Heating off.
- **3** One-dot section of switch pressed: 50 % heating power.
- **4** Two-dot section of switch pressed: 100 % heating power.



Symbol **1** appears on the display, indicating that the rear seat heating is ON.




If this warning symbol appears it tells you that the on-board system voltage is low. If applicable, the seat heating might have been temporarily switched off.

Adjusting instrument panel

Adjusting instrument panel

NOTICE

Do not attempt to adjust the position of the instrument panel unless the vehicle is at a standstill. ◀

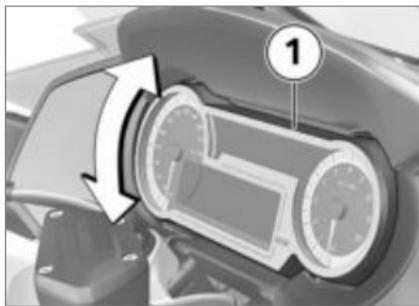

- Press instrument panel **1** firmly at top or bottom edge, as applicable, to move it to the desired position. Be sure to apply pressure midway along the edge in order to ensure that

movement is the same at both sides.

Mirrors

Adjusting mirrors



- Pivot the mirror to the correct position by pressing gently at the edge of the glass.

Windscreen

Adjusting windscreen

- Switch on the ignition.
 - » When you pull away the windscreen automatically returns to

the position it was in before the ignition was switched off.



- Press top section of button **1** to raise the windscreen.
- Press bottom section of button **1** to lower the windscreen.
- Switch off the ignition.
 - » The windscreen automatically moves to the bottom limit position.
 - » If the windscreen encounters resistance before it reaches its limit position the pressure-sensitive finger guard system goes active. The windscreen is stopped and raised slightly.

After a delay of a few seconds the windscreen again attempts to move to the bottom limit position.

There is no guarantee that the pressure-sensitive finger guard system will function correctly if a windscreen that does not have BMW Motorrad approval is installed.

- Under these circumstances: Before switching off the ignition always check that there is nothing to obstruct movement of the windscreen.

Stowage compartment Using left stowage compartment



- Use the ignition key to open or close lock **1** of the stowage compartment.
- To open the lid, push the unlocked lock barrel downwards.



ATTENTION

Particularly in summer, high temperatures inside the stowage compartments.

Damage to objects stowed away, particularly electronic devices

such as mobile phones and MP3 players.

- Consult the operating instructions of your electronic device and check for possible usage restrictions.◀
- In summer, do not place heat-sensitive objects in the stowage compartments.

Using right stowage compartment

– with audio system^{OE}



- Use the ignition key to open or close lock **1** of the stowage compartment.

- To open the lid, push the unlocked lock barrel downwards.



ATTENTION

Particularly in summer, high temperatures inside the stowage compartments.

Damage to objects stowed away, particularly electronic devices such as mobile phones and MP3 players.

- Consult the operating instructions of your electronic device and check for possible usage restrictions.◀
- In summer, do not place heat-sensitive objects in the stowage compartments.

Central locking

Lock

- with central locking system^{OE}



- Switch on the ignition and press button **1**.



NOTICE

Only vehicles without Keyless Ride are shipped accompanied by a separate remote control for the central locking system and the alarm system.◀

- Alternatively: Press button **2** on the remote control or the radio-operated key.
 - » The stowage compartment in the left side panel and the cases are locked.

- with audio system^{OE}
 - » The stowage compartment in the right side panel is locked.◀
- with topcase^{OA}
 - » The topcase is locked.◀
 - » These locks cannot subsequently be unlocked manually.



The locked symbol appears on the display.

- with alarm system (DWA)^{OE}
 - » The functions of the remote control for the anti-theft alarm are described in the corresponding section.◀

Unlocking

- with central locking system^{OE}



- with alarm system (DWA)^{OE}
 - » The functions of the remote control for the anti-theft alarm are described in the corresponding section.<

Emergency unlocking

- with central locking system^{OE}

If the central locking system refuses to unlock, you can open the cases, topcase and stowage compartments manually. The procedure is as follows:

- Removing cases (➡ 161).
- Open cases (➡ 160).

- Switch on the ignition and press button **1**.
- Alternatively: Press button **2** on the remote control or the radio-operated key.
 - » The stowage compartment in the left side panel and the cases are unlocked.
 - » The stowage compartment in the right side panel is unlocked.
- with topcase^{OA}
 - » The topcase is unlocked.<
 - » Once a lock has been locked manually it subsequently has to be unlocked manually as well.



- First turn the key in the topcase lock 45° past the LOCK position, then turn it to the dot position and press in the lock barrel.
 - » The release lever pops open.


Logon of remote controls

- with central locking system^{OE}
- with alarm system (DWA)^{OE}
- without Keyless Ride^{OE}

If a remote control has been mislaid and a replacement acquired or if you are going to use an additional remote control, you must

invariably log on all the remote controls in the set.


- Enable logon of the remote controls as follows:
- Switch on the ignition.

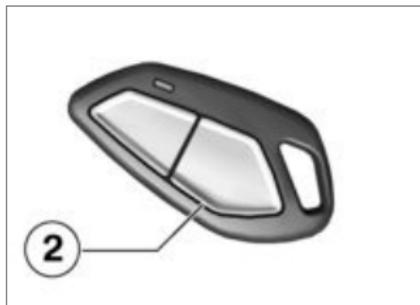

- Press button **2** on the remote control three times.
 - » One acoustic signal sounds.
- Within ten seconds, switch off the ignition.

You can now proceed to log on all the remote controls.

- Step through the following procedure with each remote control in turn:

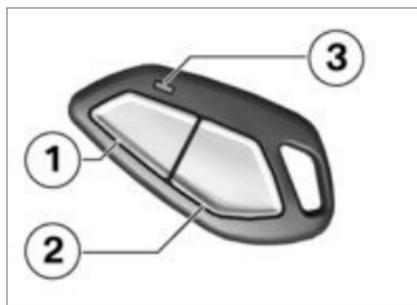

- Press and hold down buttons **1** and **2** until LED **3** stops flashing.
 - » LED **3** flashes for approx. 10 seconds.
- Release buttons **1** and **2**.
 - » LED **3** lights up.
- Press button **1** or button **2**.
 - » One acoustic signal sounds, LED **3** goes out.

To complete logon:

- Switch off the ignition.
 - » Three acoustic signals sound.
 - » Logon is also ended in the following situations:

- 4 remote control units have been logged on.
- No button pressed within approximately 30 seconds of logon on the first remote control.


Synchronise the remote controls

- with central locking system^{OE}
- with alarm system (DWA)^{OE}
- without Keyless Ride^{OE}

If the central locking system stops responding to the signals from a remote control, the unit in question has to be synchronised. This can happen, for example, if the buttons on the remote control were pressed too frequently while the remote control was out of range of the anti-theft alarm.

- The procedure for synchronising the remote controls is as follows:

- Switch on the ignition.

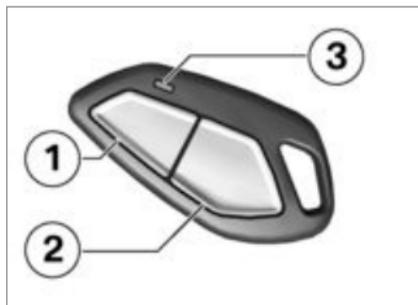


- Press and hold down buttons **1** and **2** until LED **3** stops flashing.
 - » LED **3** flashes for about ten seconds.
- Release buttons **1** and **2**.
 - » LED **3** lights up.
- Press button **1** or button **2**.
 - » LED **3** goes out.

Replacing battery of remote control

- with central locking system^{OE}
- with alarm system (DWA)^{OE}
- without Keyless Ride^{OE}

If you press a button on the remote control and the LED does not show or lights up only briefly:

- Replace the battery of remote control.

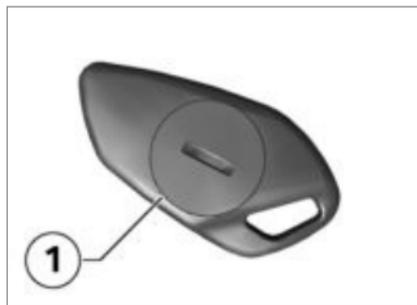

- Open battery-compartment cover **1**.
- Dispose of the old battery in accordance with all applicable laws and regulations; do not

attempt to dispose of batteries as domestic waste.



ATTENTION

Batteries unsuitable or not inserted not in compliance with correct procedure.

Component damage

- Use a battery compliant with the manufacturer's specifications.
- When inserting the battery, always make sure polarity is correct. ◀
- Insert the new battery with the positive terminal up.




Battery type

for remote control of central locking

CR 1632

- » The LED on the remote control lights up; the remote control has to be synchronised.

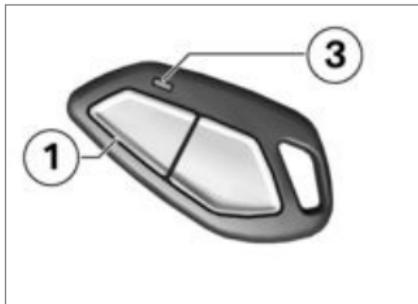

- Press button **1** twice.
- » LED **3** flashes for a few seconds.
- » The remote control is again ready for use.

DWA

Activation without remote control or radio-operated key

- If applicable, switch on automatic activation of the DWA

anti-theft alarm after ignition OFF.


- with alarm system (DWA)^{OE}
 - DWA Adapting (→ 89).
 - Switch off the ignition.
- » Activation takes 30 seconds to complete.
- » Turn indicators flash twice.
- » Confirmation tone sounds twice (if programmed).
- » Anti-theft alarm (DWA) is switched on.

Activation with remote control or radio-operated key

NOTICE

Only vehicles without Keyless Ride are shipped accompanied by a separate remote control for the central locking system and the alarm system.◀

- Switch off the ignition.

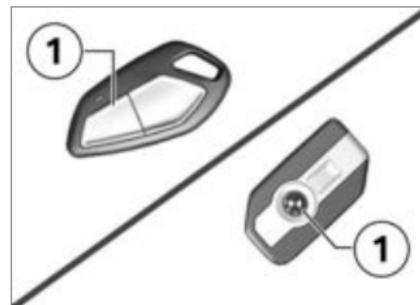


- Press button **1** on the remote control or the radio-operated key twice.

NOTICE

See also the other functions of the remote control for the central locking system.◀

- » Activation takes 30 seconds to complete.
- » Turn indicators flash twice.
- » Confirmation tone sounds twice (if programmed).
- » Anti-theft alarm (DWA) is active.

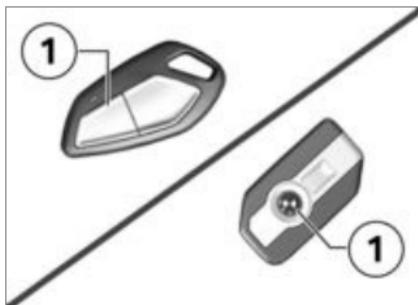

- To deactivate the motion sensor (for example if you are about to transport the motorcycle on a train and the swaying movement of the moving train could trip the alarm), press button **1** on the remote control or the radio-operated key again during the activation phase.
 - » Turn indicators flash three times.
 - » Confirmation tone sounds three times (if programmed).
 - » Motion sensor is deactivated.


Alarm

- An alarm can be triggered by
- the motion sensor
 - an attempt to use an unauthorised key to switch on the ignition
 - disconnection of the DWA anti-theft alarm from the motorcycle's battery (DWA internal battery in the anti-theft alarm provides power - alarm tone only, the turn indicators do not flash)

All functions are sustained even if the internal battery of the DWA anti-theft alarm system is flat; the only difference is that an alarm cannot be triggered if the system is disconnected from the motorcycle's battery.

An alarm lasts for approximately 26 seconds. While an alarm is in progress an alarm tone sounds and the turn indicators flash. The

type of alarm tone can be set by an authorised BMW Motorrad dealer.

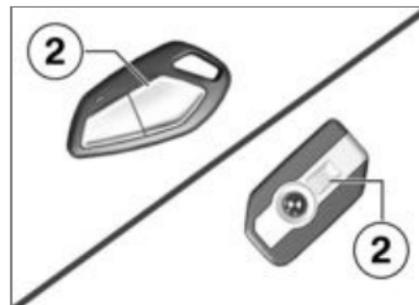

You can cancel an alarm at any time without deactivating the anti-theft alarm by pressing button **2** on the remote control or the radio-operated key.

If an alarm was triggered while the motorcycle was unattended, the rider is notified accordingly by an alarm tone sounding once when the ignition is switched on. The anti-theft alarm telltale light

then signals the reason for the alarm for one minute.

The meanings of the flash codes are as follows:


- Flashes 1x: Motion sensor 1
- Flashes 2x: Motion sensor 2
- Flashes 3x: Ignition switched on with unauthorised key
- Flashes 4x: Disconnection of the DWA anti-theft alarm from the motorcycle's battery
- Flashes 5x: Motion sensor 3

Deactivation without remote control or radio-operated key

- Kill switch in operating position (run).
- Switch on the ignition.
 - » Turn indicators flash once.
 - » Confirmation tone sounds once (if programmed).
 - » Anti-theft alarm (DWA) is deactivated.
- To deactivate the motion sensor (for example if you

are about to transport the motorcycle on a train and the swaying movement of the moving train could trip the alarm), call up the Settings menu before switching off the ignition.


- Select **Vehicle - Alarm syst. - Sensor**.

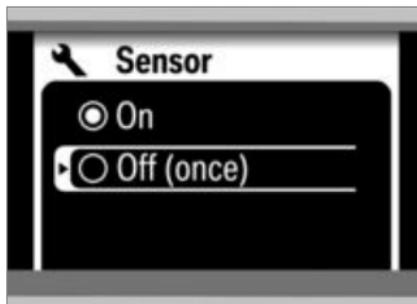

- Select **Off (once)** to switch off the motion sensor this once.
- Switch off the ignition.
 - » Activation takes 30 seconds to complete.

- » Turn indicators flash three times.
- » Confirmation tone sounds three times (if programmed).
- » The anti-theft alarm (DWA) is active, the motion sensor is deactivated.

Deactivation with remote control or radio-operated key

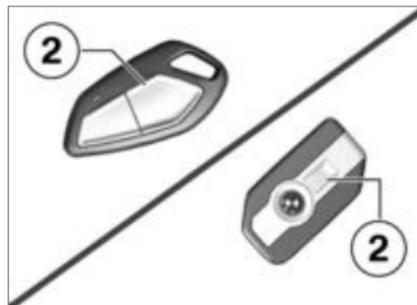

- Press button **2** on the remote control or the radio-operated key once.

NOTICE

See also the other functions of the remote control for the central locking system. ◀


NOTICE

If the alarm function is deactivated by the remote control and the ignition is not subsequently switched on, the alarm function automatically goes active again after 30 seconds if "Activation after ignition OFF" is programmed. ◀

- » Turn indicators flash once.
- » Confirmation tone sounds once (if programmed).
- » Anti-theft alarm (DWA) is deactivated.

DWA Adapting

- with alarm system (DWA)^{OE}
- Call up the Settings menu and select **Vehicle - Alarm syst..**

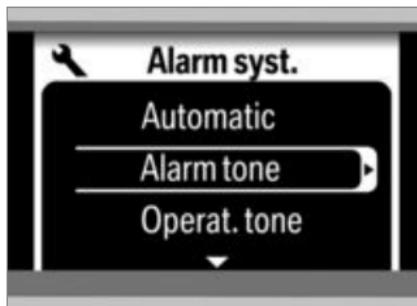


The following settings are available:

- **Automatic - On:** Anti-theft alarm is activated automatically when the ignition is switched off.
- **Automatic - Off:** Anti-theft alarm has to be activated with the remote control when the ignition is switched off.

- **Alarm tone:** Type of alarm tone.
- **Operat. tone - On:** Turn indicators flash and one tone sounds as confirmation when the alarm is switched on or off.
- **Operat. tone - Off:** Turn indicators flash as only confirmation when anti-theft alarm is switched on or off.
- Configure the desired settings using the Multi-Controller.

Front seat

Removing front seat

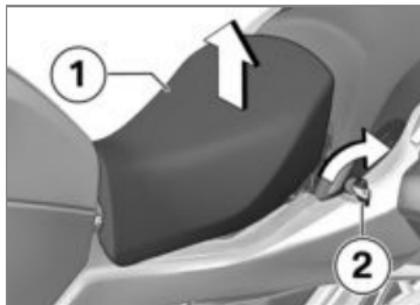

- Turn ignition key **2** clockwise.
- Slightly raise front seat **1** at the back.




- Work front seat **1** to the rear to disengage it from seat retainer bridge **3** and remove.
- with seat heating^{OE}
- Disconnect plug **2** for the seat heating.<
 - Remove the front seat and place it, upholstered side down, on a clean, dry surface.

Installing front seat

– with seat heating^{OE}



- Connect plug **1** of the seat heating.<

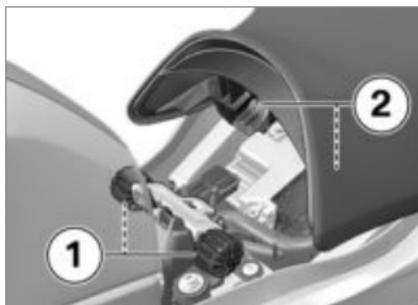


- Position the front seat with mounts **2** in rubber buffers **1** on left and right.
- Lower the rear of the front seat and engage the seat in the latching mechanism.

Adjusting front-seat height

- Removing front seat (➡ 90).




- Push latch **1** forward and remove adjusting plate **2**.

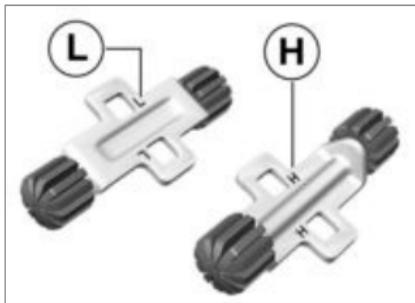

- Turn the adjusting plate to position **L** for the lower seat height.

- Turn the adjusting plate to position **H** for the higher seat height.

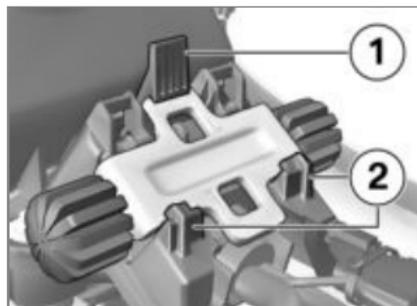

- Insert the adjusting plate in the desired position into mounts **2** and then push it into latch **1**.
- Installing front seat (➡ 90).

Rear seat


Removing rear seat

- Switch off the ignition.
- Removing front seat (➡ 90).



- Remove screws **1**.
- Pull the rear seat slightly forward and lift the seat slightly.


– with seat heating^{OE}

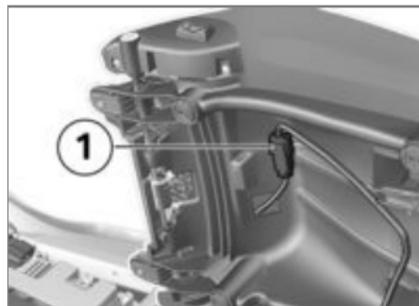

- Disconnect plug **1** of the seat heating and remove the rear seat.<
- Place the seat, upholstered side down, on a clean surface.

Install the rear seat


– with seat heating^{OE}

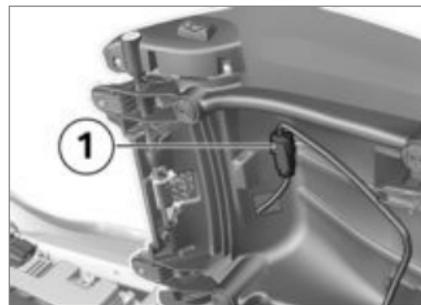

- Connect plug **1** of the seat heating.<



- Lay the rear seat on mounts **1**.

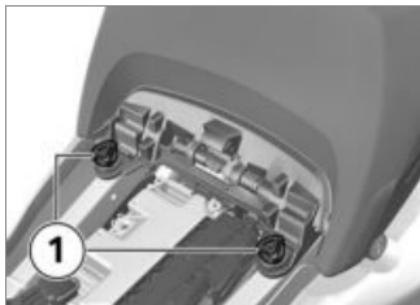

- Install screws **1**.

Riding

Safety instructions	96
Checklist.....	98
Starting	98
Running in	101
Shifting gear	102
Brakes	103
Parking your motorcycle	104
Refuelling	105
Securing motorcycle for transportation	108

Safety instructions

Rider's equipment

Do not ride without the correct clothing! Always wear:

- Helmet
- Motorcycling jacket and trousers
- Gloves
- Boots

This applies even to short journeys, and to every season of the year. Your authorised BMW Motorrad dealer will be glad to advise you on the correct clothing for every purpose.

Loading



WARNING

Handling adversely affected by overloading and imbalanced loads.

Risk of falling

- Do not exceed the permissible gross weight and be sure to comply with the instructions on loading. ◀
- Adjusting spring preload setting and damping to the total weight.
- Ensure that the case volumes on the left and right are equal.
- Make sure that the weight is uniformly distributed between right and left.
- Pack heavy items at the bottom and toward the inboard side.
- Note the maximum permissible payload and the speed limit for riding with cases fitted, as stated on the label inside the case (see also the section entitled "Accessories").
- Note the maximum permissible payload and the speed limit for riding with topcase fitted, as stated on the label inside

the case (see also the section entitled "Accessories").

– with tank rucksack^{OA}

- Note the maximum permissible payload of the tank rucksack.

	Payload of tank rucksack
max 5 kg◀	

Speed

If you ride at high speed, always bear in mind that various boundary conditions can adversely affect the handling of your motorcycle:

- Settings of the spring-strut and shock-absorber system
- Imbalanced load
- Loose clothing
- Insufficient tyre pressure
- Poor tyre tread
- Etc.

Maximum permissible speed with winter tyres



Top speed of the motorcycle higher than the permissible maximum rated speed of the tyres.

Risk of accident due to tyre damage at high speed.

- Comply with the tyre-specific speed restrictions.◀

Always bear the maximum permissible speed of the tyres in mind when riding a motorcycle fitted with winter tyres.

Affix a label stating the maximum permissible speed to the instrument panel in the rider's field of vision.

Risk of poisoning

Exhaust fumes contain carbon monoxide, which is colourless and odourless but highly toxic.



Exhaust gases adversely affecting health.

Risk of asphyxiation

- Do not inhale exhaust fumes.
- Do not run the engine in an enclosed space.◀

Risk of burn injury



Engine and exhaust system become very hot when the vehicle is in use.

Risk of burn injury

- When you park the vehicle make sure that no-one and no objects can come into contact with the hot engine and exhaust system.◀

Catalytic converter

If misfiring causes unburned fuel to enter the catalytic converter, there is a danger of overheating and damage.

For this reason, observe the following points:

- Do not run the fuel tank dry
- Do not attempt to start or run the engine with a spark-plug cap disconnected
- Stop the engine immediately if it misfires
- Use only unleaded fuel
- Comply with all specified maintenance intervals.



Unburned fuel in catalytic converter.

Damage to catalytic converter.

- Note the points listed for protection of the catalytic converter.◀

Risk of overheating



ATTENTION

Engine running for prolonged period with vehicle at standstill.

Overheating due to insufficient cooling. In extreme cases, the motorcycle could catch fire.

- Do not allow the engine to idle unnecessarily.
- Ride away immediately after starting the engine.◀

Tampering



ATTENTION

Tampering with the motorcycle (e.g. engine management ECU, throttle valves, clutch).

Damage to the affected parts, failure of safety-relevant functions. Damage due to tampering is not covered by the warranty.

- Do not tamper with the vehicle in any way that could result in tuned performance.◀

Checklist

- At regular intervals, use the checklist below to check your motorcycle.

Always before riding off:

- Operation of the brake system
- Operation of the lights and signalling equipment
- Checking clutch function (▣▣▣ 130).
- Checking tyre tread depth (▣▣▣ 130).
- Cases correctly installed and luggage secured

Every 3rd refuelling stop:

- without Dynamic ESA^{OE}
- Adjusting spring preload for rear wheel (▣▣▣ 71).◀

- without Dynamic ESA^{OE}
- Adjusting the damping characteristic for rear wheel (▣▣▣ 73).◀

- with Dynamic ESA^{OE}
- Adjusting the chassis and suspension (▣▣▣ 74).◀

- Checking engine oil level (▣▣▣ 123).
- Checking front brake pad thickness (▣▣▣ 124).
- Check the rear brake pad thickness (▣▣▣ 125).
- Checking brake-fluid level, front brakes (▣▣▣ 126).
- Checking the brake-fluid level, rear brakes (▣▣▣ 127).
- Check coolant level (▣▣▣ 128).

Starting

Start engine

- Switch on the ignition.
- » Pre-Ride-Check is performed (▣▣▣ 99)

- » ABS self-diagnosis is performed (▣▣▣▣ 100)
- » ASC self-diagnosis is performed (▣▣▣▣ 101)
- Select neutral or, if a gear is engaged, pull the clutch lever.

NOTICE

You cannot start the motorcycle with the side stand extended and a gear engaged. The engine will switch itself off if you start it with the gearbox in neutral and then engage a gear before retracting the side stand.◀

- When starting a cold engine at low ambient temperatures: disengage the clutch and turn the twistgrip slightly to open the throttle.



- Press starter button **1**.

NOTICE

The start attempt is automatically interrupted if battery voltage is too low. Recharge the battery before you start the engine, or use jump leads and a donor battery to start.

See the subsection on jump starting in "Maintenance" for more details.◀

- » The engine starts.
- » If the engine refuses to start, consult the troubleshooting

chart in the section entitled "Technical data". (▣▣▣▣ 174)

Pre-Ride-Check

The instrument panel runs a test of the 'General' warning light when the ignition is switched on: this is the Pre-Ride-Check.

Phase 1

 lights up yellow.

- » Needles of the instruments move once from their start-of-scale to end-of-scale positions.

Phase 2

 lights up red.

Phase 3

- » 'General' warning light goes out and display switches to operational information.

If the 'General' warning light does not show:



WARNING

Faulty "General" warning light.

No indication of malfunctions.

- Check that the 'General' warning light comes on, and that it shows red and yellow. ◀
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

ABS self-diagnosis

BMW Motorrad Integral ABS performs self-diagnosis to ensure its operability. Self-diagnosis starts automatically when you switch on the ignition.

Phase 1

» Test of the diagnosis-compatible system components with the vehicle at a standstill.



flashes.

Phase 2

» Test of the wheel sensors as the vehicle pulls away from rest.



flashes.

ABS self-diagnosis completed

» The ABS warning light goes out.



ABS self-diagnosis not completed

The ABS function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed for the wheel speed sensors to be checked: 5 km/h)

If an indicator showing an ABS fault appears when ABS self-diagnosis completes:

- You can continue to ride. Bear in mind that neither the ABS function nor the integral braking function is available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

ASC self-diagnosis

BMW Motorrad ASC performs self-diagnosis to ensure its operability. Self-diagnosis is performed automatically when you switch on the ignition.

Phase 1

» Test of the diagnosable system components with the vehicle at a standstill.



slow-flashes.

Phase 2

» Test of the diagnosis-compatible system components while the motorcycle is on the move.



slow-flashes.

ASC self-diagnosis completed

» The ASC warning light goes out.

- Check all the warning and tell-tale lights.



ASC self-diagnosis not completed

The ASC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed for the wheel sensors to be checked: min 5 km/h)

If an indicator showing an ASC fault appears when ASC self-diagnosis completes:

- You can continue to ride. Bear in mind that the ASC function is not available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Running in Engine

- Until the first running-in check, vary the throttle opening and engine-speed range frequently; avoid riding at constant engine rpm for prolonged periods.
- Try to do most of your riding during this initial period on twisting, fairly hilly roads, avoiding high-speed main roads and highways if possible.
- Comply with the rpm limits for running in.



Running-in speeds

<5000 min⁻¹ (Odometer reading 0...1000 km)

no full throttle (Odometer reading 0...1000 km)



First running-in check

500...1200 km

Brake pads

New brake pads have to bed down before they can achieve their optimum friction levels. You can compensate for this initial reduction in braking efficiency by exerting greater pressure on the levers.



WARNING

New brake pads.

Longer stopping distance. Risk of accident.

- Apply the brakes in good time.◀

Tyres

New tyres have a smooth surface. This must be roughened by riding in a restrained manner at various heel angles until the tyres are run in. This running in procedure is essential if the tyres are to achieve maximum grip.



WARNING

New tyres losing grip on wet roads and at extreme bank angles.

Risk of accident

- Ride carefully and avoid extremely sharp inclines.◀

Shifting gear

– with Pro shift assistant^{OE}

Shift assistant Pro

The shift assistant assists upshifts and downshifts without the rider having to pull the clutch or close the throttle. This is not an

automatic-shift system. The rider is the most important part of the system and decides when to shift gears.




NOTICE

See the section entitled "Engineering details" for more information on the Pro shift assistant.◀



NOTICE

Whenever the Pro shift assistant shifts gears, cruise control is automatically disengaged for safety reasons.◀

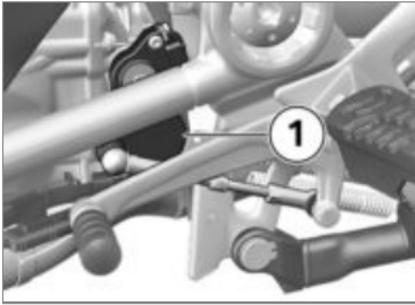

- You select the gear in the usual way by means of the foot-operated shift lever.
- » Sensor **1** on the selector shaft registers the shift request and triggers shift assistance.
- » When riding at a steady speed in a low gear at high engine rpm, an attempt to shift gear without pulling the clutch can cause a severe load-change reaction. BMW Motorrad recommends disengaging the clutch for shifts in these circumstances. It is advisable to avoid using the shift assistant at engine speeds close to the

limits at which the governor cuts in to limit engine rpm.

- » Shift assistance is not available in the following situations:
 - with the clutch lever pulled
 - shift lever not in its initial position
 - upshifts with the throttle valve closed (coasting) and when slowing.
- After a gearshift, the shift lever has to be fully released before another gearshift with the shift assistant can take place.

Brakes

How can stopping distance be minimised?

Each time the brakes are applied, a load distribution shift takes place with the load shifting forward from the rear to the front wheel. The sharper the motorcycle decelerates, the more load is shifted to the front wheel. The

higher the wheel load, the more braking force can be transmitted without the wheel locking. To optimise stopping distance, apply the front brakes rapidly and keep on increasing the force you apply to the brake lever. This makes the best possible use of the dynamic increase in load at the front wheel. Remember to pull the clutch at the same time. In the extreme braking situations that are trained so frequently, braking force is applied as rapidly as possible and with the rider's full force applied to the brake levers; under these circumstances, the dynamic shift in load distribution cannot keep pace with the increase in deceleration and the tyres cannot transmit the full braking force to the surface of the road.

BMW Motorrad Integral ABS prevents the front wheel from locking up.

Descending mountain passes



WARNING

Braking only with the rear brake on mountain descents.

Brake fade. Destruction of the brakes due to overheating.

- Use both front and rear brakes, and make use of the engine's braking effect as well.◀

Wet and dirty brakes

Wetness and dirt on the brake discs and the brake pads diminish braking efficiency.

Delayed braking action or poor braking efficiency must be reckoned with in the following situations:

- Riding in the rain or through puddles of water.
- After the vehicle has been washed.

- Riding on salted or gritted roads.
- After work has been carried on the brakes, due to traces of oil or grease.
- Riding on dirt-covered surfaces or off-road.



WARNING

Moisture and dirt.

Diminished braking effect.

- Apply the brakes lightly while riding to remove wetness and dirt, or dismount and clean the brakes.
- Think ahead and brake in good time until full braking efficiency is restored.◀

Parking your motorcycle

Side stand

- Switch off the engine.



ATTENTION

Poor ground underneath the stand.

Risk of damage to parts if vehicle topples.

- Always check that the ground under the stand is level and firm.◀



ATTENTION

Additional weight placing strain on the side stand.

Risk of damage to parts if vehicle topples.

- Do not sit or lean on the vehicle while it is propped on the side stand.◀

- Extend the side stand and prop the motorcycle on the stand.
- If the camber of the roadway permits, turn the handlebars all the way to the left.
- On a gradient, the motorcycle should always face uphill; select 1st gear.

Centre stand

- Switch off the engine.



ATTENTION

Poor ground underneath the stand.

Risk of damage to parts if vehicle topples.

- Always check that the ground under the stand is level and firm. ◀



ATTENTION

Centre stand retracts due to severe movements.

Risk of damage to parts if vehicle topples.

- Do not lean or sit on the vehicle with the centre stand extended. ◀
- Extend the centre stand and lift the motorcycle onto the stand.
- On a gradient, the motorcycle should always face uphill; select 1st gear.

Refuelling

Fuel grade

For optimum fuel consumption, fuel should be sulphur-free or with the lowest sulphur content possible.



ATTENTION

Leaded fuel.

Damage to catalytic converter.

- Do not attempt to run the vehicle on leaded fuel or fuel with metallic additives, e.g. manganese or iron. ◀

- You can run the engine on fuel with a maximum ethanol content of 10 %, i.e. E10.



Recommended fuel grade

Super unleaded (max. 10 % ethanol, E10)
95 ROZ/RON
89 AKI

Refuelling



WARNING

Fuel is highly flammable.

Risk of fire and explosion.

- Do not smoke. Never bring a naked flame near the fuel tank. ◀



WARNING

Escape of fuel due to heat-induced expansion if fuel tank is overfilled.

Risk of falling

- Do not overfill the fuel tank.◀




ATTENTION

Fuel attacks plastic surfaces.

Surfaces become unsightly or dull.

- Clean plastic parts immediately after contact with fuel.◀
- Make sure the ground is level and firm and place the motorcycle on its centre stand.

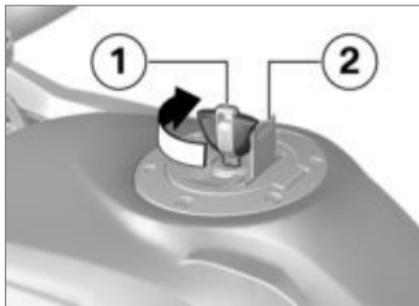

- Open the protective cap **2**.
- Use ignition key **1** to unlock fuel filler cap by turning it

clockwise, and flip the cap open.



- Do not fill the tank past the bottom edge of the filler neck.



NOTICE

If filling occurs after the fuel level has gone below the reserve limit, the amount filled must be greater than the reserve amount for the new fuel level to be recognised and the warning light to switch off.◀



NOTICE

The “usable fuel capacity” specified in the technical data is the quantity that the fuel tank could hold if it had been run dry and the engine had cut out due to a lack of fuel.◀



Usable fuel capacity

approx. 25 l



Reserve fuel

approx. 4 l

- Press the fuel tank cap down firmly to close.
- Remove the ignition key and close the protective cap.

- » The telltale light for the radio-operated key flashes while the search for the radio-operated key is in progress.
- Again slowly pull up tab **1** of the fuel filler cap.
- » Fuel filler cap unlocks.
- Fully open the fuel filler cap.



- Refuel with fuel of the grade stated above; do not fill the tank past the bottom edge of the filler neck.

**NOTICE**

If filling occurs after the fuel level has gone below the reserve limit,

the amount filled must be greater than the reserve amount for the new fuel level to be recognised and the warning light to switch off. ◀

**NOTICE**

The “usable fuel capacity” specified in the technical data is the quantity that the fuel tank could hold if it had been run dry and the engine had cut out due to a lack of fuel. ◀



Usable fuel capacity

approx. 25 l



Reserve fuel

approx. 4 l

- Press down firmly on the filler cap of the fuel tank.

- » The fuel filler cap engages with an audible click.
- » The fuel filler cap locks automatically when the waiting time expires.
- » The engaged fuel filler cap locks immediately when you secure the steering lock or switch on the ignition.

Securing motorcycle for transportation

- Make sure that all components that might come into contact with straps used to secure the motorcycle are adequately protected against scratching. Use adhesive tape or soft cloths, for example, for this purpose.




ATTENTION

Vehicle topples to side when being lifted on to stand.

Risk of damage to parts if vehicle topples.

- Secure the vehicle to prevent it toppling, preferably with the assistance of a second person.◀
- Push the motorcycle onto the transportation flat and hold it in position: do not place it on the side stand or centre stand.

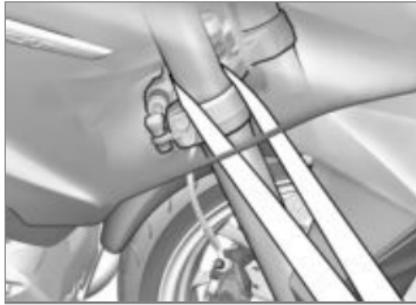


ATTENTION

Trapping of components.

Component damage

- Do not trap components such as brake lines or cable legs.◀
- Pass the straps on left and right through the fork bridge and strap the motorcycle down.

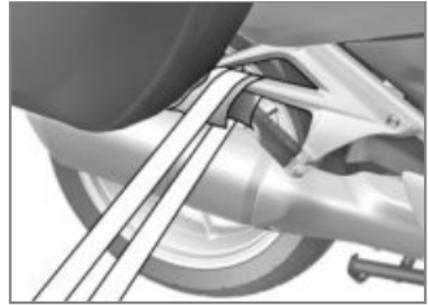

- At the rear, secure the straps to the rear footrests on both sides and tighten the straps.
- Tension all the straps uniformly to hold the vehicle securely.

Engineering details

Riding mode	112
Shift assistant Pro	113
Hill Start Control	114
BMW Motorrad Integral ABS	114
BMW Motorrad ASC.....	117
RDC	119
ESA	120

Riding mode

Riding mode selection

Three riding modes enable the motorcycle's characteristics to adapt to the prevailing weather conditions, the road and traffic, and the rider's style of riding:

- RAIN
- ROAD
- with Pro riding modes^{OE}
- DYNAMIC

Each of these modes produces perceptible differences in the way the motorcycle behaves. ASC can be switched off in each mode; the explanations below invariably refer to conditions with the system switched ON. The mode last selected is automatically reactivated after the ignition has been switched off and then on again.

Broadly speaking: The more dynamic the selected mode, the more ASC assistance is reduced. Consequently, you must always bear the following in mind with regard to your selection of a ride mode: the more dynamic the setting, the greater the challenge to your riding skill.

Throttle response:

- in the RAIN mode: Restrained
- in the ROAD mode: Direct
- with Pro riding modes^{OE}
- in the DYNAMIC mode: Dynamic

RAIN mode

The ASC system intervenes early enough to prevent the rear wheel from spinning. On road surfaces with high to medium grip (dry and wet asphalt to dry cobblestones) the motorcycle remains very stable; movements of the tail are clearly perceptible only on

slippery road surfaces (wet bitumen or wet cobblestones).

ROAD mode

ASC system intervention is later than in RAIN mode. On road surfaces with high to medium grip (dry and wet asphalt to dry cobblestones) the motorcycle remains stable. Slight rear-wheel drift is perceptible. Movements of the tail are clearly perceptible on slippery road surfaces (wet bitumen or wet cobblestones).

- with Pro riding modes^{OE}

DYNAMIC mode

The DYNAMIC mode is the sportiest mode.

ASC system intervention is even later, which means that even on dry asphalt drifting is possible under sharp acceleration when cornering.

- with Dynamic ESA^{OE}

Dynamic ESA

- In the RAIN, ROAD and DYNAMIC modes, the damping variants HARD, NORMAL and SOFT can be selected.

Basic setting for:

- RAIN: SOFT
- ROAD: NORMAL
- with Pro riding modes^{OE}
- DYNAMIC: HARD

Changing the riding modes

A mode change involving functions in the engine management system and the ASC system is possible only when drive torque is not applied to the rear wheel.

In order to achieve this state,

- the motorcycle must be at a standstill with the ignition switched on,

or

- the throttle twistgrip must be in the fully closed position.

Shift assistant Pro

- with Pro shift assistant^{OE}

Your vehicle is equipped with a shift assistant, a system originally developed for racing and now adapted for the touring sector. It permits upshifts and downshifts without declutching or closing the throttle in virtually all load and rpm ranges.

Advantages

- 70-80 % of all gearshifts on a trip can be done without using the clutch.
- Less relative movement between rider and passenger because the shift pauses are shorter.
- It is not necessary to close the throttle valve when shifting under acceleration.

- When braking and downshifting (throttle valve closed), engine speed is adjusted by blipping the throttle.
- Shift time is shorter than a gearshift with clutch actuation.

In order for the system to identify a request for a gearshift, the rider has to move the shift lever from its idle position in the desired direction against the force of the spring through a certain "over-travel" at ordinary speed or rapidly and keep the shift lever in this position until the gearshift is completed. It is not necessary to increase the force applied to the gearshift lever while shifting is in progress. Once the gearshift has completed the shift lever has to be fully released before another gearshift with the Pro shift assistant can take place. When shifting gears with the shift assistant, the rider has to keep load state

(throttle twistgrip position) constant before and during the gearshift. A change in the position of the throttle twistgrip during a gearshift can cause the function to abort and/or lead to a missed shift. The shift assistant provides no assistance for the gearshift if the rider declutches.

Downshifting

- Downshifting is assisted until maximum rpm for the target gear to be selected is reached. This prevents overrevving.



Maximum engine speed

max 9000 min⁻¹

Upshifting

- The shift assistant provides no assistance if engine speed

drops below idle during an upshift.



Idle speed

1150 min⁻¹ (Engine at regular operating temperature)

Hill Start Control

- with Hill Start Control^{OE}

Hill Start Control is a pullaway assistant that operates on the partially integrated ABS system to prevent the vehicle from rolling back on a gradient without the rider having to keep pressure applied to the brake lever. When Hill Start Control is activated pressure is built up in the rear brake system to keep the machine at a standstill on a gradient. The holding pressure built up in the brake system depends on the steepness of the gradient.

BMW Motorrad Integral ABS

Partially integral brakes

Your motorcycle is equipped with partially integral brakes. Both front and rear brakes are applied when you pull the handbrake lever. The footbrake lever acts only on the rear brake.

When actively intervening in the braking process, BMW Motorrad Integral ABS adapts braking-force distribution between front and rear brakes to suit the load on the motorcycle ABS.



ATTENTION

The integral function means that it is not possible to make the rear wheel spin with the front brake applied (Burn Out).

Damage to rear brake and clutch.

- Do not attempt Burn Out. ◀

How does Integral ABS work?

The amount of braking force that can be transferred to the road depends on factors that include the coefficient of friction of the road surface. Loose stones, ice and snow or a wet road all have much lower coefficients of friction than a clean and dry asphalt surface. The lower the coefficient of friction, the longer the braking distance.

If the rider increases braking pressure to the extent that braking force exceeds the maximum transferable limit, the wheels start to lock and the vehicle loses its directional stability; a fall is imminent. Before this situation can occur, ABS intervenes and adapts braking pressure to the maximum transferable braking force. The wheels continue to turn and the driving stability is

retained irrespective of the road condition.

What are the effects of surface irregularities?

Humps and surface irregularities can cause the wheels to lose contact temporarily with the road surface; if this happens the braking force that can be transmitted to the road can drop to zero. If the brakes are applied under these circumstances the ABS has to reduce braking force to ensure that directional stability is maintained when the wheels regain contact with the road surface. At this instant the BMW Motorrad Integral ABS must assume an extremely low coefficient of friction, so that the wheels will continue to rotate under all imaginable circumstances, because this is the precondition for ensuring directional stability. As soon as it registers the ac-

tual circumstances, the system reacts instantly and adjusts braking force accordingly to achieve optimum braking.

What feedback does the rider receive from the Integral ABS?

If the ABS has to reduce braking force on account of the circumstances described above, vibration is perceptible through the handbrake lever.

When the handbrake lever is pulled, brake pressure is also built up at the rear wheel by the integral function. If the brake pedal is depressed after the handbrake lever is pulled, the brake pressure built up beforehand is perceptible as counter-pressure sooner than is the case when the brake pedal is depressed either before or at the same time as the brake lever is pulled.

Rear wheel lift

Under very severe and sudden deceleration, however, under certain circumstances it is possible that the BMW Motorrad Integral ABS will be unable to prevent the rear wheel from lifting clear of the ground. If this happens the outcome can be a highside situation in which the motorcycle can flip over.



WARNING

Rear wheel lift due to severe braking.

Risk of falling

- When you brake sharply, bear in mind that ABS control cannot always be relied on to prevent the rear wheel from lifting clear of the ground.◀

What is the design baseline for Integral ABS?

Within the limits imposed by physics, the BMW Motorrad Integral ABS ensures directional stability on any surface. The system is not optimised for special requirements that apply under extreme competitive situations off-road or on the track. The driving behaviour should be adapted to actual driving skills and the road conditions.

Special situations

The speeds of the front and rear wheels are compared as one means of detecting a wheel's incipient tendency to lock. If the system registers implausible values for a lengthy period the ABS function is deactivated for safety reasons and an ABS fault message is issued. Self-diagnosis has to complete before fault messages can be issued.

In addition to problems with the BMW Motorrad Integral ABS, exceptional riding conditions can lead to a fault message being issued.

- Heating up with the motorcycle on the centre stand or an auxiliary stand, engine idling or with a gear engaged.
- Rear wheel locked by the engine brake for a lengthy period, for example while descending on a loose or slippery surface.

If a fault message is issued on account of exceptional riding conditions, you can reactivate the ABS function by switching the ignition off and on again.

What significance devolves on regular maintenance?

WARNING

Brake system not regularly serviced.

Risk of accident

- In order to ensure that the ABS is always maintained in optimum condition, it is essential for you to comply strictly with the specified inspection intervals.◀

Reserves for safety

The potentially shorter braking distances which BMW Motorrad Integral ABS permits must not be used as an excuse for careless riding. ABS is primarily a means of ensuring a safety margin in genuine emergencies.

WARNING

Braking when cornering.

Risk of accident despite ABS.

- Invariably, the rider bears responsibility for assessing road and traffic conditions and adopting his or her style of riding accordingly.
- Do not take risks that would negate the additional margin of safety offered by this system.◀

BMW Motorrad ASC

How does ASC work?

The BMW Motorrad ASC system compares the speed of rotation of the front wheel and the rear wheel. The differential is used to compute slip as a measure of the reserves of stability available at the rear wheel. If slip exceeds a certain limit, the engine control intervenes and adapts the engine torque accordingly.

What is the design baseline for ASC?

BMW Motorrad ASC is designed as an assistant system for the rider and for use on public roads. The extent to which the rider affects ASC control can be considerable (weight shifts when cornering, items of luggage loose on the motorcycle), especially when style of riding takes rider and machine close to the limits imposed by physics.

The system is not optimised for special requirements that apply under extreme competitive situations off-road or on the track. The BMW Motorrad ASC can be deactivated in these cases.

WARNING

Risky riding.

Risk of accident despite ASC.

- Invariably, it remains the rider's responsibility to adapt riding style to riding conditions.
- Do not take risks that would negate the additional safety offered by this system. ◀

Special situations

In accordance with the laws of physics, the ability to accelerate is restricted more and more as the angle of heel increases. Consequently, there can be a perceptible lag in acceleration out of very tight bends.

The speeds of the front and rear wheels are compared as one means of detecting the rear wheel's incipient tendency to spin or slip sideways. If the system registers implausible values for a lengthy period the ASC function is deactivated for safety reasons and an ASC fault message is issued. Self-diagnosis

has to complete before fault messages can be issued. The following exceptional riding conditions can lead to an automatic shutdown of the BMW Motorrad ASC:

- Riding for a lengthy period with the front wheel lifted off the ground (Wheelie) with ASC deactivated.
- Rear wheel rotating with the vehicle held stationary by applying the front brake (Burn Out).
- Heating up with the motorcycle on the centre stand or an auxiliary stand, engine idling or with a gear engaged.

Accelerating the motorcycle to a defined minimum speed after switching the ignition off and then on again reactivates the ASC.



Minimum speed for activation of ASC

min 10 km/h

If the front wheel lifts clear of the ground under severe acceleration, the ASC reduces engine torque until the front wheel regains contact with the ground. Under these circumstances, BMW Motorrad recommends rolling the throttle slightly closed so as to restore stability with the least possible delay.

When riding on a slippery surface, never snap the throttle twistgrip fully closed without pulling the clutch at the same time. Engine braking torque can cause the rear wheel to lock, with a corresponding loss of stability. The BMW Motorrad ASC is unable to control a situation of this nature.

RDC

- with tyre pressure monitoring (RDC)^{OE}

Function

A sensor integrated into each tyre measures the air temperature and the air pressure inside the tyre and transmits this information to the control unit. Each sensor has a centrifugal-force tripswitch that does not enable transmission of the measured values until the motorcycle has accelerated to a defined minimum speed for the first time.



Minimum speed for transmission of the RDC measured values:

min 10 km/h

The display shows -- for each tyre until the tyre-pressure signal is received for the first time. The sensors continue to transmit the

measured-value signals for some time after the vehicle comes to a stop.



Time for transmission of measured values after vehicle comes to a stop:

min 15 min

An error message is issued if wheels without sensors are fitted to a vehicle equipped with an RDC control unit.

Tyre-pressure ranges

The RDC control unit differentiates between three tyre-pressure ranges, all of which are parameterised for the motorcycle:

- Tyre pressure within permitted tolerance.
- Tyre pressure close to limit of permitted tolerance.
- Tyre pressure outside permitted tolerance.

Temperature compensation

Tyre pressure is a temperature-sensitive variable: pressure increases as tyre-air temperature rises and decreases as tyre-air temperature drops. Tyre-air temperature depends on ambient temperature as well as on the style of riding and the duration of the ride.



The tyre-pressure readings in the multifunction display are temperature-compensated and are always referenced to the following tyre-air temperature:

20 °C

The air lines available to the public in petrol stations and motorway service areas have gauges that do not compensate for temperature; the reading shown by a gauge of this nature is the temperature-dependent tyre-

air pressure. In most instances, therefore, these gauge readings will not tally with the pressures shown by the multifunction display.

Pressure adaptation

Compare the RDC value on the multifunction display with the value in the table on the inside cover of the Rider's Manual. Then use the air line at a service station to compensate for the difference between the RDC reading and the value in the table.

 Example
According to the Rider's Manual, the tyre pressure should be:
2.5 bar

 Example
The multifunction display shows the following reading:
2.3 bar
So pressure is low by:
0.2 bar
The gauge on the air line shows:
2.4 bar
You must now increase tyre pressure until the value is:
2.6 bar

ESA

– with Dynamic ESA^{OE}

Possible settings

Dynamic ESA enables you to adjust your motorcycle's suspension to suit the load and the road conditions.

Via ride height sensors, Dynamic ESA detects the movements in the chassis and suspension and responds to the same by adjusting the damper valves. The chassis and suspension will thus be adapted to the characteristics of the terrain.

You can set the damping to a harder (HARD) or softer (SOFT) setting than the basic setting (NORMAL).

– with Pro riding modes^{OE}

The suspension setting depends on the riding mode selected. The damping defined by the riding mode can be changed by the rider.

Maintenance

General instructions.....	122
Toolkit	122
Engine oil	123
Brake system	124
Coolant	128
Clutch	130
Rims and tyres.....	130
Wheels	131
Silencer.....	137
Front-wheel stand	139
Lighting.....	140
Jump-starting.....	147
Battery.....	149
Fuses	153

General instructions

The "Maintenance" chapter describes straightforward procedures for checking and replacing certain wear parts.


Special tightening torques are listed as applicable. The tightening torques for the threaded fasteners on your vehicle are listed in the section entitled "Technical data".

Further information on maintenance and repair work is available from your BMW Motorrad authorised dealer in the form of a DVD.

Some of the work requires special tools and a thorough knowledge of the technology involved. If you are in doubt, consult a specialist workshop, preferably your authorised BMW Motorrad dealer.

Toolkit


Standard toolkit

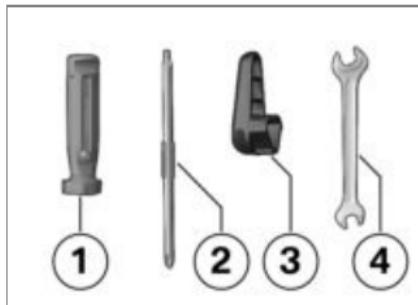

- 1** Screwdriver handle
- 2** Reversible screwdriver blade
Phillips PH1 and Torx T25
 - Removing front seat (➡ 90).
 - Removing and installing body panels.
- 3** Tool for oil cap
 - Topping up the engine oil (➡ 123).
 - Removing rear seat (➡ 91).

- 3** – Install the rear seat (➡ 92).
- 4** Open-ended spanner
Width across flats 8/10

Service toolkit

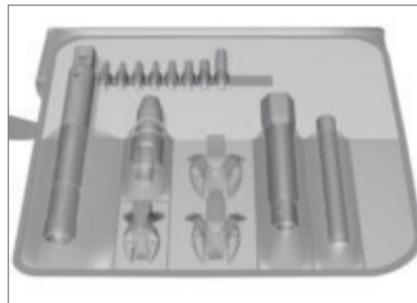

BMW Motorrad has assembled a service toolkit that is ideal for carrying out extended service work (e.g. removing and installing wheels) on this motorcycle. You can obtain the tools set from your authorised BMW Motorrad dealer.

Engine oil

Checking engine oil level

ATTENTION


The oil level varies with the temperature of the oil. The higher the temperature, the higher the level of oil in the sump.

Misinterpretation of the oil level

- Check the oil level only after a lengthy ride or when the engine is at operating temperature. ◀
- Switch off the engine when it is at operating temperature.
- Make sure the ground is level and firm and place the motorcycle on its centre stand.
- Wait five minutes for the oil to drain into the oil pan.



- Check the oil level in oil-level indicator **1**.

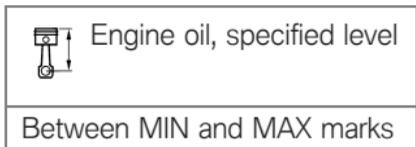

If the oil level is below the MIN mark:

- Topping up the engine oil (➡ 123).

If the oil level is above the MAX mark:

- Have the oil level corrected by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Topping up the engine oil

- Make sure the ground is level and firm and place the motorcycle on its stand.



- Wipe the area around the oil filler neck clean.
- Use oil filler cap tool **1** to remove cap **2** from the oil filler neck.
- Engage oil filler cap tool **1** in cap **2** of the oil filler neck and turn the tool counter-clockwise to remove the cap.
- Checking engine oil level (▶▶▶ 123).



ATTENTION

Not enough or too much engine oil.

Engine damage

- Always make sure that the oil level is correct. ◀
- Top up the engine oil to the specified level.



Engine oil, quantity for topping up

max 0.95 l (Difference between MIN and MAX)

- Checking engine oil level (▶▶▶ 123).
- Install cap **2** of the oil filler neck.

Brake system

Checking function of brakes

- Pull the front brake lever.
 - » The pressure point must be clearly perceptible.
- Press the footbrake lever.
 - » The pressure point must be clearly perceptible.

If pressure points are not clearly perceptible:



ATTENTION


Work on brake system not in compliance with correct procedure.

Risk to operational reliability of the brake system.

- Have all work on the brake system undertaken by trained and qualified specialists. ◀
- Have the brakes checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Checking front brake pad thickness

- Make sure the ground is level and firm and place the motorcycle on its stand.

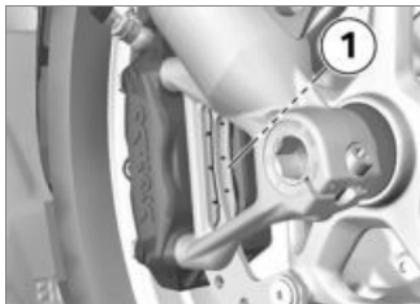

- Visually inspect the left and right brake pads to ascertain their thickness. Viewing direction: between wheel and front suspension toward brake pads **1**.



 Brake-pad wear limit, front

1.0 mm (Friction pad only, without backing plate. The wear indicators (grooves) must be clearly visible.)

If the wear indicating marks are no longer clearly visible:

 **WARNING**


Brake-pad thickness less than permissible minimum.

Diminished braking effect. Damage to the brakes.

- In order to ensure the dependability of the brake system, do not permit the brake pads to wear past the minimum permissible thickness. ◀
- Have the brake pads replaced by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Check the rear brake pad thickness

- Make sure the ground is level and firm and place the motorcycle on its stand.

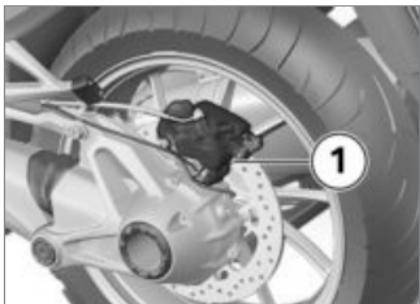

- Visually inspect the brake pads to ascertain their thickness. Viewing direction: between spray guard and rear wheel toward brake pads **1**.



Brake-pad wear limit,
rear

1.0 mm (Friction pad only,
without backing plate.)

If the wear limit has been reached:



WARNING

Brake-pad thickness less than permissible minimum.

Diminished braking effect. Damage to the brakes.

- In order to ensure the dependability of the brake system, do not permit the brake pads to

wear past the minimum permissible thickness. ◀

- Have the brake pads replaced by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Checking brake-fluid level, front brakes



WARNING

Not enough brake fluid in brake fluid reservoir.

Considerably reduced braking power due to air in the brake system.


- Check the brake-fluid level at regular intervals. ◀
- Make sure the ground is level and firm and place the motorcycle on its centre stand.
- Move the handlebars to the straight-ahead position.



- Check the brake fluid level in front reservoir **1**.

NOTICE

Wear of the brake pads causes the brake fluid level in the reservoir to sink. ◀



Brake fluid, DOT4

It is impermissible for the brake fluid level to drop below the MIN mark. (Brake-fluid reservoir horizontal, motorcycle upright)

If the brake fluid level drops below the permitted level:

- Have the defect rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Checking the brake-fluid level, rear brakes

WARNING

Not enough brake fluid in brake fluid reservoir.

Considerably reduced braking power due to air in the brake system.

- Check the brake-fluid level at regular intervals. ◀
- Make sure the ground is level and firm and place the motorcycle on its centre stand.



- Check the brake fluid level in rear reservoir **1**.



NOTICE

Wear of the brake pads causes the brake fluid level in the reservoir to sink. ◀



Brake fluid level, rear

Brake fluid, DOT4

It is impermissible for the brake fluid level to drop below the MIN mark. (Brake-fluid reservoir horizontal, motorcycle upright)


If the brake fluid level drops below the permitted level:

- Have the defect rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Coolant

Check coolant level

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Allow the engine to cool down.

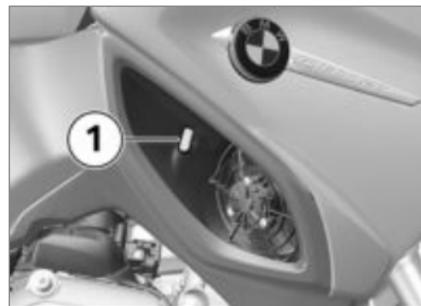

- Check the coolant level in expansion tank **1**.




Specified coolant level

between MIN and MAX marks on the expansion tank (engine cold)


If the coolant drops below the permitted level:

- Have the defect rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Top up coolant

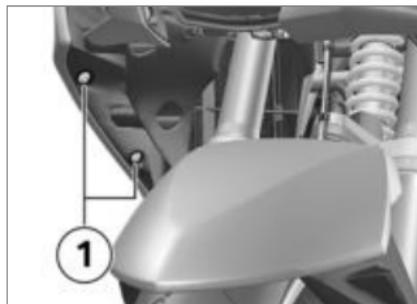

- Remove screws **1**.

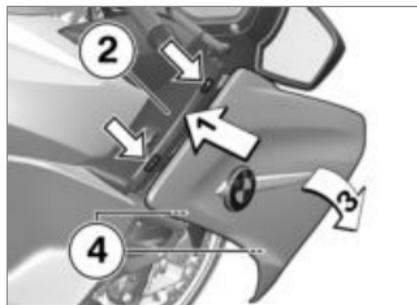


- Ease side panel **3** out at the front.
» Lugs **4** are disengaged from the grommets.


- Work side panel **1** up and clear of side trim **2** and remove, noting the lugs **arrows**.



- Open cap **1** of the coolant expansion tank and top up the coolant to the specified level.
- Check coolant level (→ 128).
- Close the cap of the coolant expansion tank.

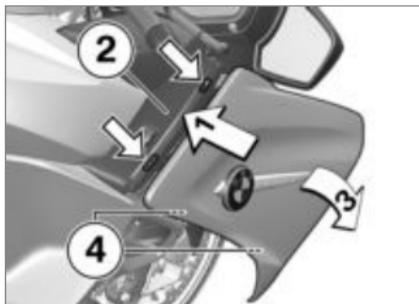

- Hold side panel **1** ready with the lugs in position at side trim **2**.
- Pivot side panel **3** inward.
 - » Lugs **4** are pressed into the grommets.

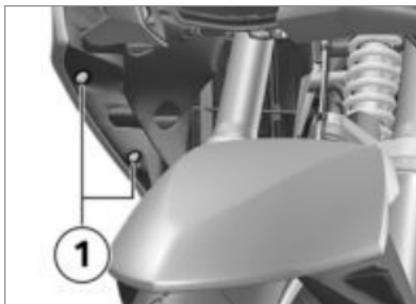

- Install screws **1**.

Clutch

Checking clutch function

- Pull the clutch lever.
 - » The pressure point must be clearly perceptible.

If the pressure point is not clearly perceptible:

- Have the clutch checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Rims and tyres

Checking rims

- Make sure the ground is level and firm and place the motor-cycle on its stand.
- Visually inspect the rims for defects.
- Have any damaged rims inspected by a specialist workshop and replaced if necessary, preferably by an authorised BMW Motorrad dealer.

Checking tyre tread depth



WARNING

Riding with badly worn tyres

Risk of accident due to impaired handling

- If applicable, have the tyres changed in good time before they wear to the minimum tread depth permitted by law. ◀

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Measure the tyre tread depth in the main tread grooves with wear marks.



NOTICE

Wear indicators are built into the main profile grooves on each tyre. The tyre is worn out when the tyre tread has worn down to the level of the marks. The locations of the marks are indicated on the edge of the tyre, e.g. by the letters TI, TWI or by an arrow. ◀

If the tyre tread is worn to minimum:

- Replace tyre or tyres, as applicable.

Wheels

Tyre recommendation

For each size of tyre, BMW Motorrad tests and classifies as roadworthy certain makes. BMW Motorrad cannot assess the suitability or provide any guarantee of road safety for other tyres.

BMW Motorrad recommends using only tyres tested by BMW Motorrad.

Detailed information is available from your authorised BMW Motorrad dealer or in the internet at

www.bmw-motorrad.com.

Effect of wheel size on chassis and suspension control systems

Wheel size is very important as a parameter for the frame and suspension control systems ABS and ASC. In particu-

lar, the diameter and the width of a vehicle's wheels are programmed into the control unit and are fundamental to all calculations. Any change in these influencing variables, caused for example by a switch to wheels other than those installed ex-works, can have serious effects on the performance of the control systems.


The sensor rings are essential for correct road-speed calculation, and they too must match the motorcycle's control systems and consequently cannot be changed.

If you decide that you would like to fit non-standard wheels to your motorcycle, it is very important to consult a specialist workshop beforehand, preferably an authorised BMW Motorrad dealer. In some cases, the data programmed into the control

units can be changed to suit the new wheel sizes.

RDC adhesive label

- with tyre pressure monitoring (RDC)^{OE}

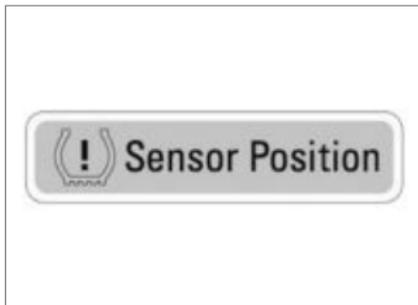

ATTENTION

Tyre removal not in compliance with correct procedure.


Damage to RDC sensors.

- Be sure to explain to the specialist workshop or authorised BMW Motorrad dealer that the wheel is fitted with an RDC sensor. ◀

If the motorcycle is equipped with RDC, each wheel rim bears an adhesive label indicating the position of the RDC sensor. When a tyre is being changed, special care must be taken not to damage the RDC sensor. Be sure to draw the attention of the authorised BMW Motorrad dealer or specialist workshop to the fact that the wheel is fitted with an RDC sensor.

Removing front wheel

- Make sure the ground is level and firm and place the motorcycle on its centre stand.

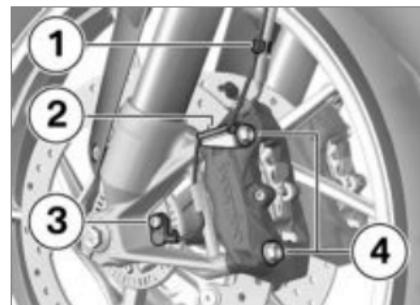


- Disengage the ABS sensor cable from retaining clips **1** and **2**.
- Remove screw **3** and remove the ABS sensor from its bore.
- Mask off the parts of the wheel rim that could be scratched in the process of removing the brake callipers.

ATTENTION

Brake pads pushed together with brake caliper removed.


It is not possible to slip the brake caliper over the brake disc.

- Do not operate the handbrake lever while a brake caliper has been removed.◀
- Remove securing screws **4** of the left and right brake calipers.

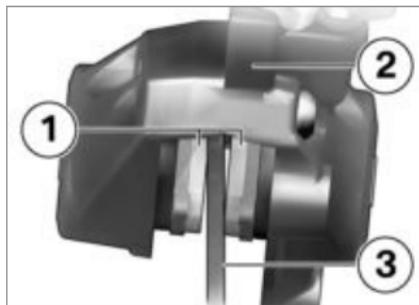


- Force the brake pads **1** slightly apart by rotational movement of the brake calliper **2** against brake disc **3**.
- Carefully pull the brake callipers back and out until clear of the brake discs.


- Lift the front of the motorcycle until the front wheel is clear of the ground, preferably using a BMW Motorrad front-wheel stand.
- Installing the front-wheel stand (▶▶ 139).

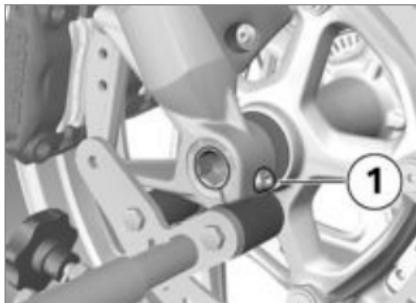


- Remove right-hand axle clamping screw **1**.

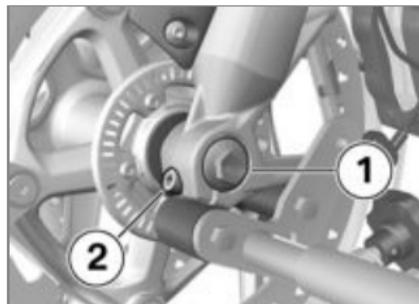

- Remove screw **1**.
- Remove left-hand axle clamping screw **2**.
- Press quick-release axle slightly toward the inside, so as to be better able to grip it on the right-hand side.

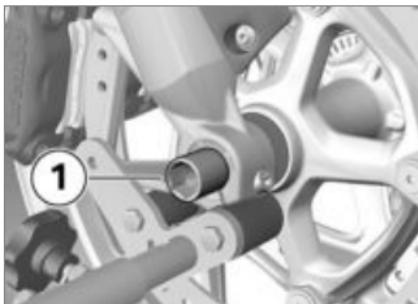

- Withdraw quick-release axle **1**, support the front wheel when doing this.
- Set down front wheel and roll forwards out of the front suspension.

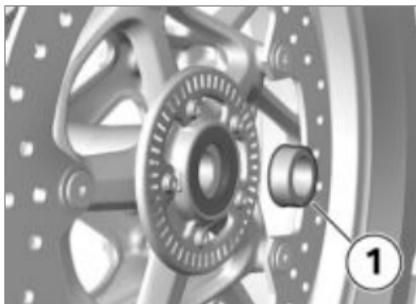

- Remove spacer bush **1** from the wheel hub.

Installing front wheel

WARNING

Use of a non-standard wheel.

Malfunctions in operation of ABS and ASC.


- See the information on the effect of wheel size on the ABS and ASC systems at the start of this chapter. ◀

ATTENTION

Tightening threaded fasteners to incorrect tightening torque.

Damage, or threaded fasteners work loose.

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer. ◀

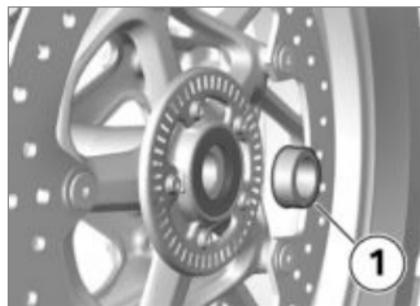


- Slip spacing bushing **1** into the wheel hub on the left-hand side.

ATTENTION

Front wheel installed wrong way round.


Risk of accident

- Note direction-of-rotation arrows on tyre or rim. ◀
- Roll the front wheel into position between the front forks.

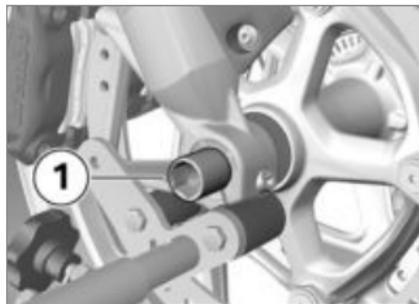

- Lift front wheel and fit quick-release axle **1**.
- Remove front-wheel stand and firmly compress front forks several times. Do not operate front brake lever.

- Installing the front-wheel stand (▶▶ 139).

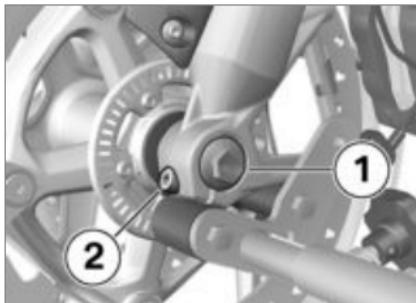

- Install screw **1** and tighten to specified torque. Counter-hold quick-release axle on the right-hand side.

 Quick-release axle in telescopic forks

30 Nm

- Tighten left-hand axle clamping screw **2** to the specified torque.

 Clamping screw for quick-release axle in telescopic fork

19 Nm




- Tighten right axle clamping screw **1** to the specified torque.

 Clamping screw for quick-release axle in telescopic fork

19 Nm

- Removing the front-wheel stand.

- Position left and right brake calipers on the brake discs.

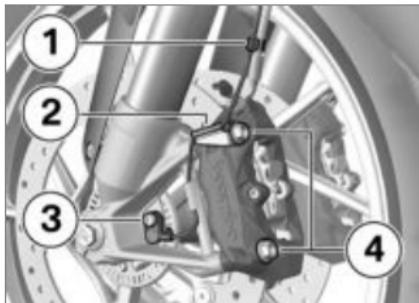

- Install securing screws **4** on left and right and tighten to specified tightening torque.



Brake caliper on telescopic fork

38 Nm

- Remove the adhesive tape from the wheel rim.



WARNING

Brake pads not contacting the brake disc.

Delayed braking effect.

- Before riding off, always check that the brakes bite as soon as the brake lever is pulled or the brake pedal depressed. ◀
- Operate the brake several times until the brake pads are bedded.
- Seat the ABS sensor line in retaining clips **1** and **2**.
- Insert the ABS sensor into its bore and install screw **3**.




Wheel-speed sensor to fork leg

Joining compound: Micro-encapsulated or medium-strength thread-locking compound

8 Nm

Removing rear wheel

- Silencer, swinging out (➡ 137).

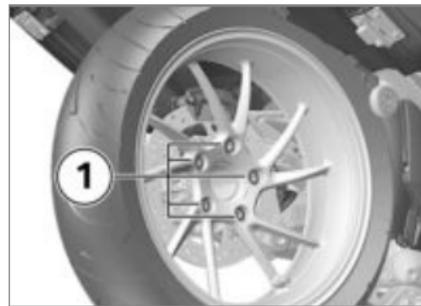

- Engage first gear.
- Remove studs **1** from the rear wheel, while supporting the wheel.
- Roll the rear wheel out toward the rear.

Installing the rear wheel



WARNING

Use of a non-standard wheel.

Malfunctions in operation of ABS and ASC.


- See the information on the effect of wheel size on the ABS and ASC systems at the start of this chapter. ◀

ATTENTION

Tightening threaded fasteners to incorrect tightening torque.

Damage, or threaded fasteners work loose.

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer. ◀
- Seat the rear wheel on the rear-wheel adapter.

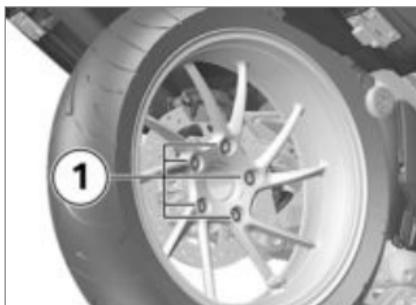

- Install wheel studs **1** and tighten to specified torque.

 Rear wheel to wheel flange

Tightening sequence: tighten in diagonally opposite sequence

60 Nm

- Securing silencer (▶▶▶ 138).

Silencer


Swinging silencer out

 CAUTION

Hot exhaust system.


Risk of burn injury

- Do not touch a hot exhaust system. ◀
- Make sure the ground is level and firm and place the motorcycle on its centre stand.
- Allow the silencer to cool.

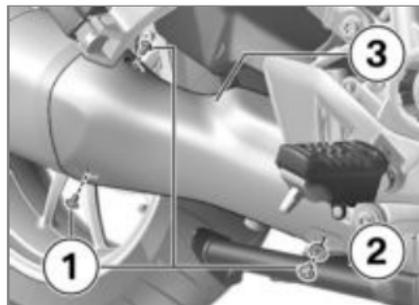

- Remove screws **1** with washer **2** on front screw.

- Remove silencer cover **3**.

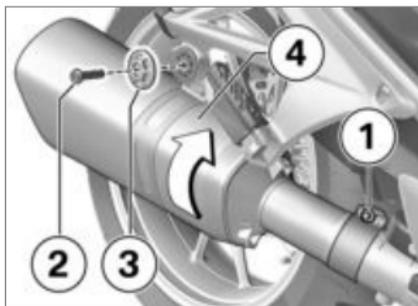

- Slacken screw **1** of the clamp.
- Remove screw **2** and locking washer **3**.
- Turn silencer **4** **clockwise** toward the outside.

Securing silencer




ATTENTION

Tightening threaded fasteners to incorrect tightening torque.

Damage, or threaded fasteners work loose.

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer. ◀

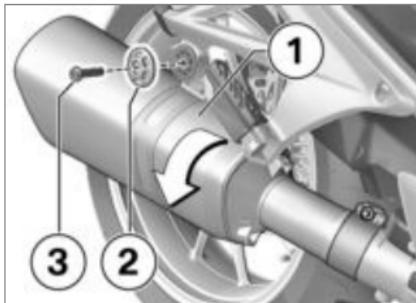


- Turn silencer **1** counter-clockwise until it is seated against the rear footrest bracket.
- Install washer **2** and screw **3**.



Silencer to footrest bracket

19 Nm

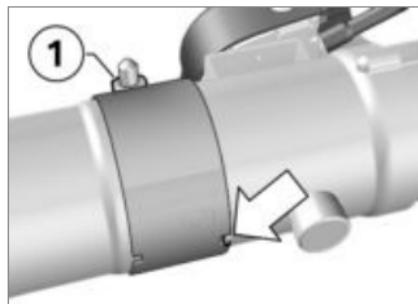


- Push clamp **1** as far forward as possible and position it with the recess engaging the projection (**arrow**).
- Tighten the clamp.



Clamp to silencer and exhaust manifold

22 Nm

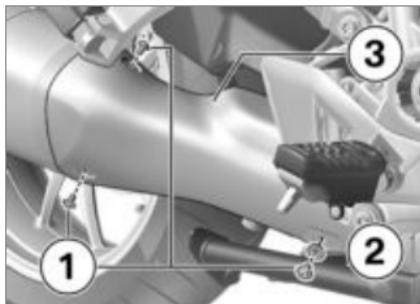

- Place silencer cover **3** in position.
- Install screws **1** with washer **2** on front screw.

Front-wheel stand

Installing the front-wheel stand




ATTENTION


Use of the BMW Motorrad front wheel stand without also accompanying use of centre stand or auxiliary stand.

Risk of damage to parts if vehicle topples.


- Place the motorcycle on its centre stand or another auxiliary stand before lifting the front wheel with the BMW Motorrad front-wheel stand. ◀
- Make sure the ground is level and firm and place the motorcycle on its centre stand.
- Use basic stand with front-wheel adapter. The basic stand and its accessory parts are available from your BMW Motorrad dealer.

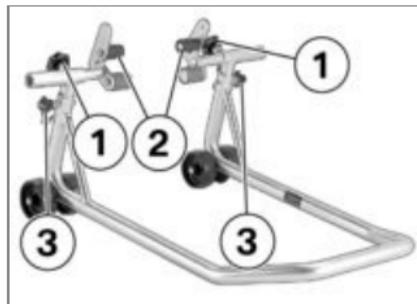

- Slacken securing screw **1**.
- Push the two adapters **2** apart until the front forks fit between them.
- Use locating pins **3** to set the front-wheel stand to the desired height.
- Centre the front-wheel stand relative to the front wheel and push it against the front axle.

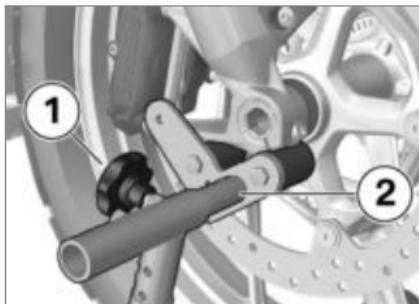

- Align the two adapters **2** so that the front forks are securely seated.
- Tighten securing screw **1**.

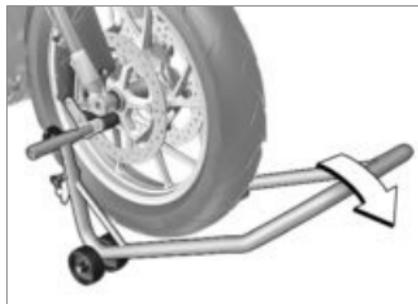

ATTENTION

Centre stand retracts if motorcycle lifted too high.

Risk of damage to parts if vehicle topples.

- When raising the vehicle, make sure that the centre stand remains on the ground.◀
- Apply uniform pressure to push the front-wheel stand down and raise the motorcycle.

Lighting

Replacing bulb for low-beam headlight



NOTICE

The positions of the plug, the spring wire retainer and the bulb might not be as illustrated below.◀


- Make sure the ground is level and firm and place the motorcycle on its stand.
- Switch off the ignition.




- Remove cover **1** by turning it counter-clockwise to replace the bulb for the low-beam headlight.




- Disconnect plug **1**.

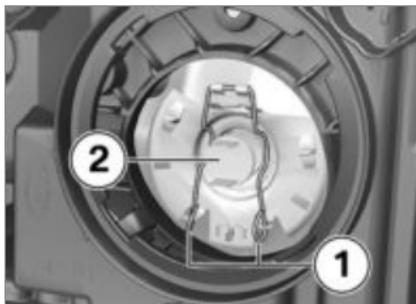

- Disengage spring clip **1** and swing it aside.
- Remove bulb **2**.
- Replace the defective bulb.

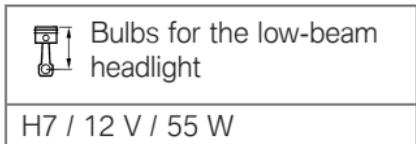

- Hold the bulb by the base only, in order to keep the glass free of foreign matter.

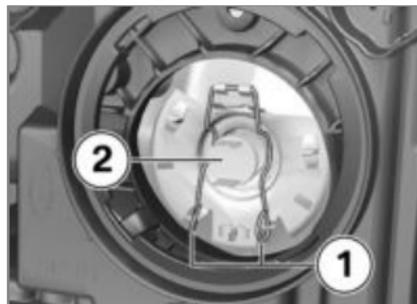

- Insert bulb **2**, making sure that the tab is correctly positioned.



The bulb might face in a direction other than that shown here. ◀

- Engage spring clip **1** in the catch.



- Connect plug **1**.



- Insert cover **1** and turn it clockwise to install.

Replacing bulb for high-beam headlight



NOTICE


The description below steps you through the procedure for replacing the left bulb. The procedure for working on the right side is the same. ◀

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Switch off the ignition.




- Remove screws **2**.

- Ease speaker cover **1** to the left to remove.

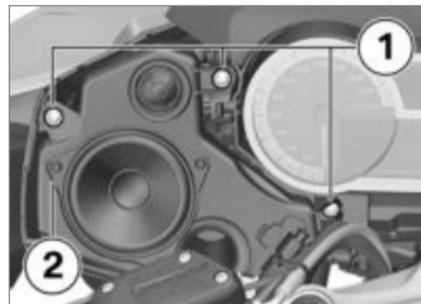

- Remove screws **1**.
- Carefully remove speaker unit **2**, noting the plug.

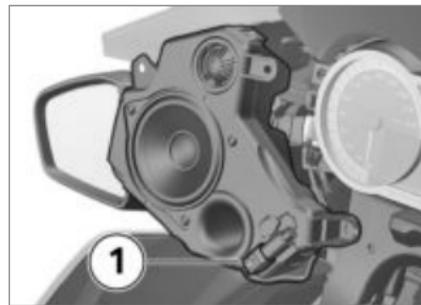

- Disconnect plug **1**.



- Pull the tab to remove cover **1**.



- Disconnect plug **1**.



- Release spring clip **1** at left and right and swing it open.
- Remove bulb **2**.
- Replace the defective bulb.

	Bulb for high-beam headlight
---	---------------------------------

H1 / 12 V / 55 W

- Hold the bulb by the base only, in order to keep the glass free of foreign matter.



- Install bulb **2**, making sure that the tab is correctly positioned.




NOTICE

The bulb might face in a direction other than that shown here. ◀

- Insert spring clip **1**.



- Connect plug **1**.

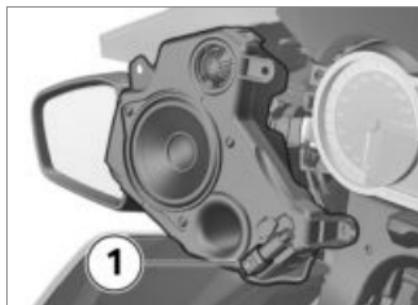


- Connect plug **1**.



- Hold speaker cover **1** in position and install screws **2**.



- Install cover **1**.

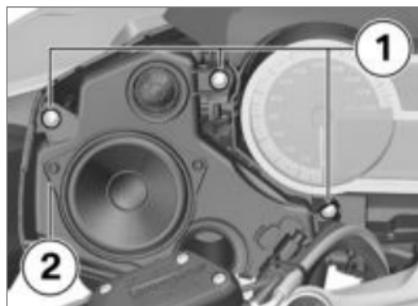

- Seat speaker unit **2** in the mount.
- Install screws **1**.

Replacing bulb for parking light

NOTICE


The description below steps you through the procedure for replacing the left bulb. The procedure for working on the right side is the same. ◀

- Make sure the ground is level and firm and place the motorcycle on its stand.

- Switch off the ignition.




- Remove screws **2**.
- Ease speaker cover **1** to the left to remove.

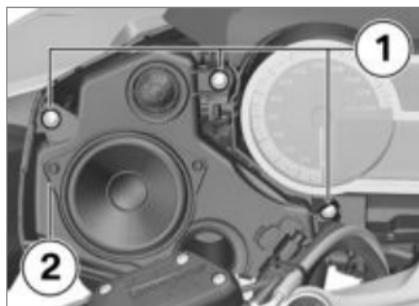

- Remove screws **1**.


- Carefully remove speaker unit **2**, noting the plug.

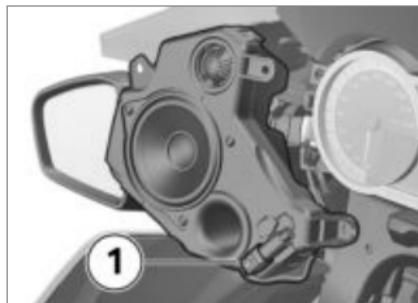

- Disconnect plug **1**.



- Remove cover **1** by turning it counter-clockwise.

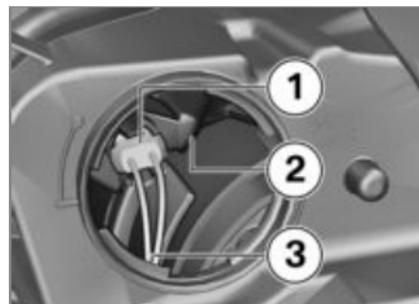

- Disengage socket **1** from headlight housing **2**, but do not under any circumstances pull cable **3**.



- Remove bulb **1** from the socket.

- Replace the defective bulb.

 Bulb for parking light

W5W / 12 V / 5 W


- with daytime running light^{OE}
- or
- with Pro Headlight^{OE}

Lighting rings, integrated into headlight◀

- Use a clean, dry cloth to hold the bulb in order to keep the glass free of foreign matter.




- Insert bulb **1** into the bulb socket.

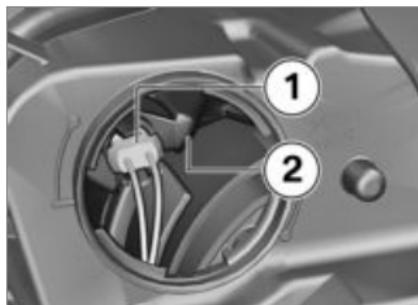


- Install bulb socket **1** in headlight housing **2**.



- Turn cover **1** clockwise to install.

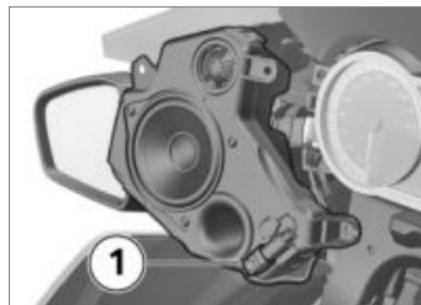

- Connect plug **1**.

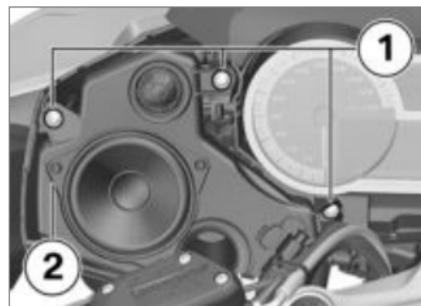

- Seat speaker unit **2** in the mount.
- Install screws **1**.



- Hold speaker cover **1** in position and install screws **2**.

Replacing LED rear light

The LED rear light can be replaced only as a complete unit.

- Consult a specialist workshop, preferably an authorised BMW Motorrad dealer.

Replacing LED turn indicators

- LED turn indicators can be replaced only as a complete unit. Consult a specialist workshop, preferably an authorised BMW Motorrad dealer.

Waveguide rings, replacing

- with daytime running light^{OE}
- with Pro Headlight^{OE}

- Waveguide rings are integrated into the headlight and can be replaced only together with the headlight. Consult a specialist workshop, preferably an authorised BMW Motorrad dealer.

Replacing LED auxiliary headlights

- with LED auxiliary headlights^{OA}

The LED auxiliary headlights can only be replaced as a unit; it is not possible to replace individual LEDs.

Consult a specialist workshop, preferably an authorised BMW Motorrad dealer.

Jump-starting



ATTENTION

Excessive current flowing when the motorcycle is jump-started

Wiring smoulders/ignites or damage to the on-board electronics

- If the motorcycle has to be jump-started connect the leads to the battery terminals; never attempt to jump-start the engine by connecting leads to the on-board socket. ◀



ATTENTION

Contact between crocodile clips of jump leads and vehicle.


Risk of short-circuit

- Use jump leads fitted with fully insulated crocodile clips at both ends. ◀

**ATTENTION****Jump-starting with a voltage greater than 12 V.**

Damage to the on-board electronics.

- Make sure that the battery of the donor vehicle has a voltage rating of 12 V.◀
- Make sure the ground is level and firm and place the motorcycle on its stand.
- Removing battery cover (▣▶ 150).
- When jump-starting the engine, do not disconnect the battery from the on-board electrical system.

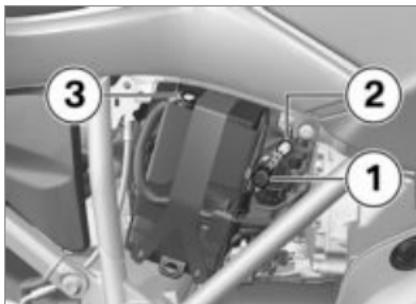

- Remove protective cap **1**.
- Use the red jumper cable to connect the positive terminal **2** of the discharged battery to the positive terminal of the donor battery.
- Then connect one end of the black jump lead to the negative terminal of the donor battery and the other end to negative terminal **3** of the discharged battery.
- Run the engine of the donor vehicle during jump-starting.
- Start the engine of the vehicle with the discharged battery in the usual way; if the en-

gine does not start, wait a few minutes before repeating the attempt in order to protect the starter motor and the donor battery.

- Allow both engines to idle for a few minutes before disconnecting the jump leads.
- Disconnect the jump lead from the negative terminals first, then disconnect the second lead from the positive terminals.

**NOTICE**

Do not use proprietary start-assist sprays or other products to start the engine.◀

- Install the protective cap.
- Fitting battery cover (▣▶ 152).

Battery

Maintenance instructions

Correct upkeep, recharging and storage will prolong the life of the battery and are essential if warranty claims are to be considered.

Compliance with the points below is important in order to maximise battery life:

- Keep the surface of the battery clean and dry
- Do not open the battery
- Do not top up with water
- Be sure to read and comply with the instructions for charging the battery on the following pages
- Do not turn the battery upside down.



ATTENTION

On-board electronics (e.g. clock) draining connected battery.

Battery is deep-discharged; this voids the guarantee.

- Connect a float charger to the battery if the motorcycle is to remain out of use for more than four weeks.◀



NOTICE

BMW Motorrad has developed a float charger specially designed for compatibility with the electronics of your motorcycle. Using this charger, you can keep the battery charged during long periods of disuse, without having to disconnect the battery from the motorcycle's on-board systems. You can obtain additional information from your authorised BMW Motorrad dealer.◀

Charge battery when connected



ATTENTION

Charging connected battery via the battery terminals.

Damage to the on-board electronics.

- Disconnect the battery at the battery terminals before charging.◀



ATTENTION

Charging a fully discharged battery via the on-board socket or the extra socket.

Damage to the on-board electronics.

- If a battery has discharged to the extent that it is completely flat (battery voltage less than 9 V, status-indicator lights and multifunction display remain off when the ignition is switched on) **it has to be disconnect-**

ted from the on-board circuits and re-charged with the charger connected directly to the battery posts. ◀

ATTENTION

Unsuitable battery chargers connected to an on-board socket.

Damage to charger and to frame and suspension electronics.

- Use suitable BMW chargers. The suitable charger is available from your authorised BMW Motorrad dealer. ◀
- Charge via the charging socket, with the battery connected to the motorcycle's on-board electrical system.

NOTICE

The motorcycle's on-board electronics know when the battery is fully charged. The on-board

socket is switched off when this happens. ◀

- Comply with the operating instructions of the charger.

NOTICE

If you are unable to charge the battery through the on-board socket, you may be using a charger that is not compatible with your motorcycle's electronics. If this happens, disconnect the battery from the on-board systems and connect the charger directly to the battery. ◀

Charging battery when disconnected


- Charge the battery using a suitable charger.
- Comply with the operating instructions of the charger.
- Once the battery is fully charged, disconnect the

charger's terminal clips from the battery terminals.

NOTICE


The battery has to be recharged at regular intervals in the course of a lengthy period of disuse. See the instructions for caring for your battery. Always fully recharge the battery before restoring it to use. ◀

Removing battery

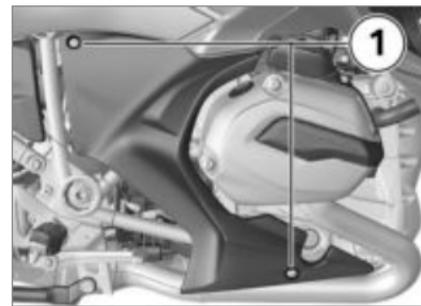

- Switch off the ignition.
- Remove screws **1**.
- Remove the battery cover.

- with alarm system (DWA)^{OE}
- If applicable, switch off the anti-theft alarm (DWA).<

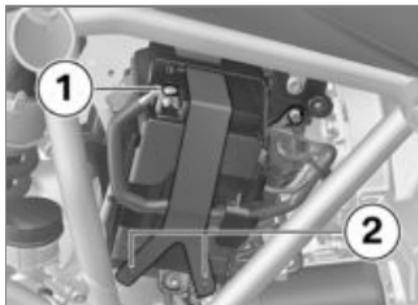

- Disconnect battery negative lead **1** and disengage rubber strap **2**.



- Pull retaining plate in position **1** outwards and remove in an upward direction.
- Slightly lift the battery and ease it clear of the holder until the battery positive terminal is accessible.



- Disconnect battery negative lead **1** and remove the battery.
» The battery is removed.

Installing battery



- Secure battery positive lead **1**.




NOTICE

If the 12 V battery is not correctly installed or if the polarity of the terminals is reversed (e.g. in an attempt to jump-start the vehicle), this can cause the fuse for the alternator regulator to blow. ◀


- Push battery into the mounting.




- First push the retaining plate under the battery at position **1** and then seat it in mounts **2**.

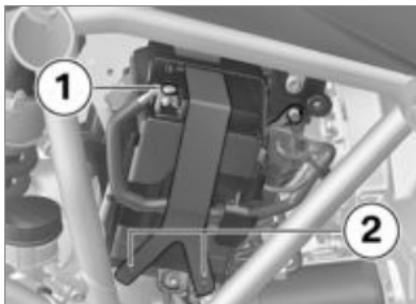

- Secure battery negative lead **1**.
- Secure the battery with rubber strap **2**.

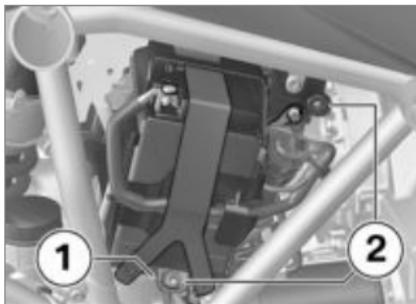


- Place battery cover into the mounting **1** and press into the mountings **2**.

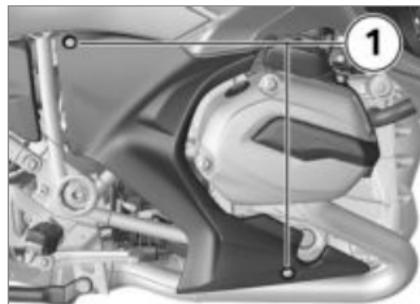

- Install screws **1**.
- Switch on the ignition.
- Set the time in *Settings* - *Time* and set the date in *Settings* - *Date*.

Fuses

Replace fuses

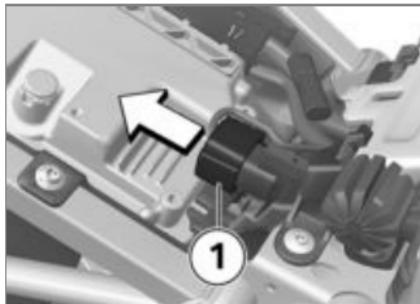

- Switch off the ignition.
- Removing front seat (►► 90).
- Disconnect plug **1**.

ATTENTION

Jumpering of blown fuses.

Risk of short-circuit and fire.


- Always replace a defective fuse with a new fuse of the same amperage.◀
- Consult the fuse assignment diagram and replace the defective fuse.

NOTICE

If fuse defects recur frequently have the electric circuits checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.◀

- Installing front seat (►► 90).


Fuse assignment

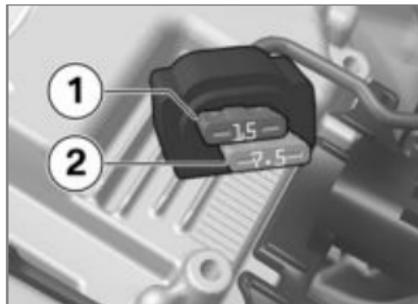

 Fuse box

15 A (Slot 1: Instrument cluster, alarm system (DWA), ignition lock, diagnostic socket, topcase light)

7.5 A (Slot 2: Multifunction switch left, tyre pressure control (RDC), audio system)

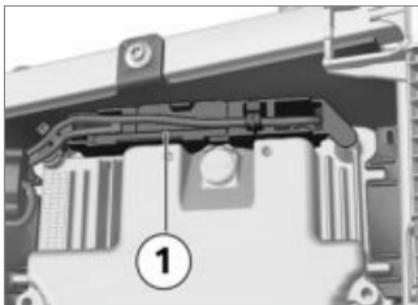

Fuse holder

50 A (Fuse 1: Voltage regulator)

Accessories

General instructions.....	156
Power sockets	156
Navigation system	157
Cases.....	160
Topcase	162

General instructions

CAUTION

Use of other-make products.

Safety risk

- BMW Motorrad cannot examine or test each product of outside origin to ensure that it can be used on or in connection with BMW vehicles without constituting a safety hazard. Country-specific official authorisation does not suffice as assurance. Tests conducted by these instances cannot make provision for all operating conditions experienced by BMW vehicles and, consequently, they are not sufficient in some circumstances.
- Use only parts and accessories approved by BMW for your vehicle. ◀

BMW has conducted extensive testing of the parts and ac-

cessory products to establish that they are safe, functional and suitable. Consequently, BMW accepts product liability. BMW accepts no liability whatsoever for parts and accessories that it has not approved.

Whenever you are planning modifications, comply with all the legal requirements. Make sure that the vehicle does not infringe the national road-vehicle construction and use regulations applicable in your country. Your BMW Motorrad dealer can offer expert advice on the choice of genuine BMW parts, accessories and other products. You can examine all the optional accessories from BMW Motorrad by visiting our website:

"www.bmw-motorrad.com".

Power sockets

Connection of electrical devices

- You can start using electrical devices connected to the motorcycle's sockets only when the ignition is switched on.

Cable routing

- The cables from the power sockets to the auxiliary devices must be routed in such a way that they do not impede the rider.
- The cable routing should not restrict the steering angle or obstruct handling.
- The cables must not be trapped.

Automatic shutdown

- The sockets will be automatically switched off during the start procedure.

- The power supply to the sockets is switched off a certain time after the ignition is switched off, in order to prevent overloading of the on-board electrics. Low-wattage electrical accessories might not be recognised by the vehicle's electronics. In such cases, power sockets are switched off very shortly after the ignition is turned off.



Automatic shutdown of the sockets after ignition OFF

max 15 min

- If the battery charge state is too low to maintain the motorcycle's start capability, the power sockets are switched off.
- The power sockets are also switched off when the maximum load capability as stated

in the technical data is exceeded.

Navigation system

Securing navigation device

- with navigation system^{OA}
- with preparation for navigation system^{OE}



ATTENTION

Dust and dirt on contacts of the Mount Cradle.

Damage to the contacts.


- Always reinstall the cover as soon as you finish your ride.◀



NOTICE

The latching system of the Mount Cradle is not designed to protect against theft.

Always remove the navigation system and stow it away safely as soon as you finish your ride.◀

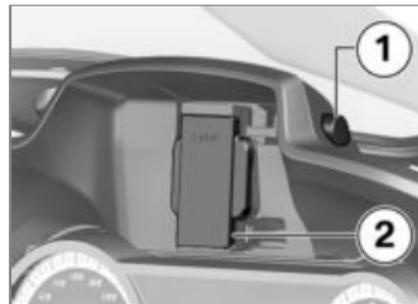

- Operate latch **1** and remove cover **2**.



- First seat navigation device **1** in the mount and then pivot it to the rear **2**.
- Press down on the top edge of the navigation device until it engages.




- Check that the navigation device is secure in the cradle. Latch **1** must be fully engaged. The latching mechanism must lie flat and be out of sight.

Removing navigation device

- with navigation system^{OA}
- with preparation for navigation system^{OE}




- Operate latch **1** and remove navigation device **2**.

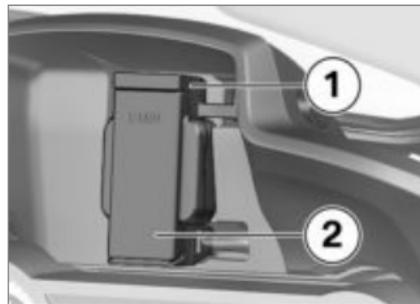

- Install cover **2**.
- Check that the cover is secure in the cradle. Top retaining cap **1** must be fully engaged.

Operating navigation system

- with preparation for navigation system^{OE}
- If applicable, switch on the ignition.
- Call up the **Navigation** menu.

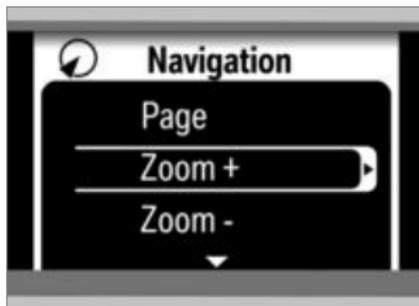

The options for using the navigation system appear on the display.

- **Page**: You can page from view to view; the choices are main menu, map and on-board computer.

- **Zoom +**: Performs functions marked with a plus sign (+) in the navigation system. In the map view, for instance, the view zooms in on the map detail.
- **Zoom -**: Performs functions marked with a plus sign (-) in the navigation system. In the map view, for instance, the view zooms out from the map detail.
- **Speak**: The last navigation announcement is spoken again. The announcement is spoken again even if automatic spoken announcement have been switched off in the settings of the navigation system.
- **Mute**: Automatic spoken announcements are toggled off and on.
- **Display Off**: The display of the navigation system is toggled off and on.

- Select the function you want and implement the function by pushing the Multi-Controller to the right.

Special functions

- with preparation for navigation system^{OE}

Integration of the BMW Motorrad Navigator V can result in deviations from the descriptions in the operating instructions for the Navigator.

Reserve fuel level warning

The settings for the fuel gauge enable you to define a distance that is covered per full tank of fuel. The motorcycle sends the figure for residual range possible with the fuel remaining in the fuel tank to the Navigator, so it is no longer necessary to enter this value.

Time and date

The Navigator sends time and date to the motorcycle. The transfer of these data into the instrument cluster must be activated in the **SETUP** menu of the instrument cluster.

Security settings

The BMW Motorrad Navigator V can be secured against unauthorised use with a four-digit PIN (Garmin Lock). If this function is activated, while the Navigator is cradled on the motorcycle and the ignition is switched on you are prompted to add the motorcycle to the list of secured vehicles. If you answer "Yes" at this prompt the Navigator saves the VIN of this vehicle in its internal memory.

A maximum of five VINs can be saved in this way.

Subsequently, the PIN does not have to be entered when the

Navigator is switched on by ignition ON while cradled in any of these vehicles.

If the Navigator is removed from the vehicle while switched on, a security prompt asking for the PIN to be entered is issued.


Cases

Open cases

- with central locking system^{OE}
- If applicable, open the central locking. <




- Turn the key to the in the case lock to the position indicated by the dot.

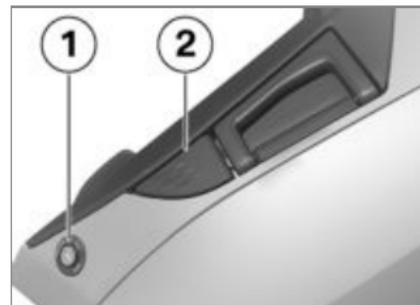

- Push lock barrel **1** down.
» Lever **2** pops up.

- Pull the release lever all the way up and open the lid of the case.

Closing cases

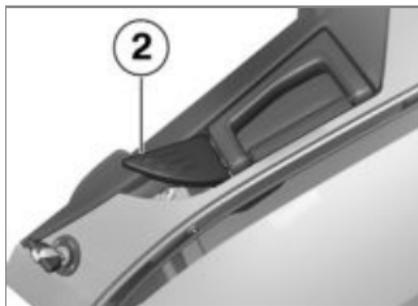

- Pull release lever **2** all the way up.
- Close the lid of the case and press it down. Check that nothing is trapped between the lid and the case.



NOTICE

The cases can also be locked by turning the lock to the LOCK position. In this case, ensure that

the vehicle key is not left in the cases. ◀

- Push release lever **2** down until it engages.
- Turn the key in the case lock to the LOCK position and remove the key from the lock.

Removing cases



- Turn the key to the RELEASE position in the case lock.
 - » The handle pops out.



- Pull carry handle **3** up as far as it will go.
 - » The case is released and can be removed.

Install cases

- Pull the handle up as far as it will go.



- Seat the case in holders **4**.



- Push handle **3** down until it engages.
- Turn the key in the case lock to the LOCK position and remove the key from the lock.

Maximum payload and maximum permissible speed

Note the maximum permissible payload and the speed limit for riding with cases fitted, as stated on the label inside the case. Contact your authorised BMW Motorrad dealer if you cannot find your combination of vehicle and cases on the label. The values for the combination described here are as follows:

	Maximum permissible speed for riding with cases fitted to the motorcycle
	max 180 km/h
	Payload per case
	max 10 kg

Topcase

Opening topcase

- with topcase^{OA}
- with central locking system^{OE}
- If applicable, open the central locking.<



- Turn the key to the in the topcase lock to the position indicated by the dot.



- Push lock barrel **1** forward.
» Lever **2** pops up.
- Pull the release lever all the way up and open the lid of the topcase.

Closing topcase

– with topcase^{OA}



- Pull release lever **2** all the way up.
- Close the lid of the topcase and hold it down. Check that nothing is trapped between the lid and the case.

NOTICE

The topcase can also be locked by turning the lock to the LOCK position. In this case, ensure that the vehicle key is not left in the topcase.◀

- Push release lever **2** down until it engages.

- Turn the key in the topcase lock to the LOCK position and remove the key from the lock.

Removing the topcase

- Removing front seat (➡ 90).
- Removing rear seat (➡ 91).
– with topcase^{OA}



- Disconnect plug **1**.
- Work the plug of the topcase through to the rear.
- Open the topcase.
- If applicable, empty the topcase and lift out the bottom mat.



- Push slide latch **2** toward the outside and hold it in this position.
- Turn rotary latch **3** in the direction indicated by the RELEASE arrow.
- » Release warning **4** is visible.
- Close the topcase.




- Lift the topcase at the rear and remove it from the luggage carrier.◁
- Install the rear seat (▣▣▣ 92).
- Installing front seat (▣▣▣ 90).

Installing topcase

- Removing front seat (▣▣▣ 90).
- Removing rear seat (▣▣▣ 91).
– with topcase^{OA}
- If applicable, empty the topcase and lift out the bottom mat.



- Set the topcase on the luggage carrier.
- Opening topcase (▣▣▣ 162).

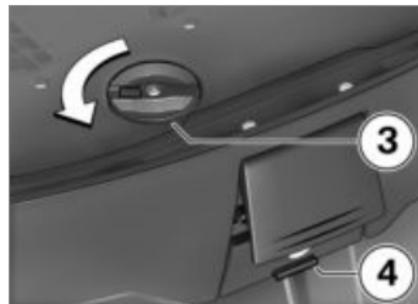


- Turn rotary latch **3** as far as it will go in the direction indicated by the LOCK arrow

while pressing down on the back edge of the topcase.


» Release warning **4** is no longer visible.

If the release warning is still visible the topcase is not correctly secured.

- Make sure that the topcase is correctly seated on the luggage carrier.

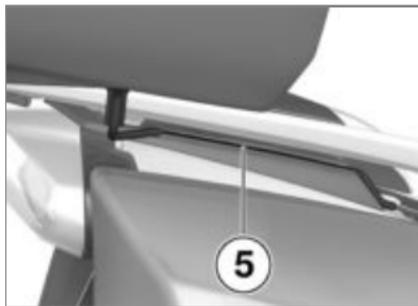

- Route the connecting cable forward in cable guide **5**.

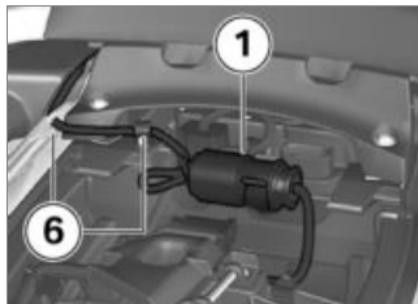

- Work the cable into position at positions **6**.
- Connect plug **1**.<
- Install the rear seat (➡ 92).
- Installing front seat (➡ 90).

Maximum payload and maximum permissible speed

Note the maximum permissible payload and the speed limit for riding with topcase fitted, as stated on the label inside the topcase.

Contact your authorised BMW Motorrad dealer if you

cannot find your combination of vehicle and topcase on the label. The values for the combination described here are as follows:

 Maximum permissible speed for riding with Vario topcase fitted to the motorcycle
max 180 km/h
 Payload of Vario topcase
max 5 kg

Care

Care products	168
Washing the vehicle	168
Cleaning easily damaged components.....	169
Paint care	170
Laying up the motorcycle	170
Protective wax coating	170
Restoring motorcycle to use	171

Care products

BMW Motorrad recommends that you use the cleaning and care products you can obtain from your authorised BMW Motorrad dealer.

The substances in BMW CareProducts have been tested in laboratories and in practice; they provide optimised care and protection for the materials used in your vehicle.

ATTENTION

Use of unsuitable cleaning and care products.

Damage to vehicle parts.

- Do not use solvents such as cellulose thinners, cold cleaners, fuel or the like, and do not use cleaning products that contain alcohol. ◀

Washing the vehicle

BMW Motorrad recommends that you use BMW insect remover to soften and wash off insects and stubborn dirt on painted parts prior to washing the vehicle.

To prevent stains, do not wash the vehicle immediately after it has been exposed to strong sunlight and do not wash it in the sun.

Make sure that the vehicle is washed frequently, especially during the winter months.

To remove road salt, clean the motorcycle with cold water immediately after every trip.

WARNING

Wet brake discs and brake pads after vehicle wash, after riding through water and in rainy conditions.

Diminished braking effect.

- Apply the brakes in good time to allow the friction and heat to dry the brake discs and brake pads. ◀

ATTENTION

Effect of road salt intensified by warm water.

Corrosion

- Use only cold water to wash off road salt. ◀

ATTENTION

Damage due to high water pressure from high pressure cleaners or steam cleaners.

Corrosion or short-circuit, damage to seals, to the hydraulic brake system, to the electrics and the seat.

- Exercise restraint when using a steam jet or high-pressure cleaning equipment. ◀



NOTICE

Aluminium cases and topcases do not have a surface coating. Care in accordance with the instructions set out below will help ensure the best possible appearance:

Remove road salt and corrosive deposits by cleaning with cold water immediately after every trip.◀

Cleaning easily damaged components

Plastics



ATTENTION

Use of unsuitable cleaning agents.

Damage to plastic surfaces.

- Do not use cleaning agents that contain alcohol, solvents or abrasives.

- Do not use insect-remover pads or cleaning pads with hard, scouring surfaces.◀

Body panels

Clean the trim panels with water and BMW plastic care emulsion.

Windscreens and lenses made of plastic

Clean off dirt and insects with a soft sponge and plenty of water.



NOTICE

Soften stubborn dirt and insects by covering the affected areas with a wet cloth.◀



Clean with water and sponge only.



Do not use any chemical cleaning agents.

Chrome

Use plenty of water and BMW shampoo to clean chrome, particularly if it has been exposed to road salt. Use chrome polish for additional treatment.

Radiator

Clean the radiator regularly to prevent overheating of the engine due to inadequate cooling. For example, use a garden hose with low water pressure.



ATTENTION

Radiator fins easily bent.

Damage to radiator fins.

- Take care not to bend the radiator fins when cleaning.◀

Rubber components

Treat rubber components with water or BMW rubber-care products.

**ATTENTION****Application of silicone sprays to rubber seals.**

Damage to the rubber seals.

- Do not use silicone sprays or care products that contain silicon. ◀

Paint care

Washing the vehicle regularly will help counteract the long-term effects of substances that damage the paint, especially if your vehicle is ridden in areas with high air pollution or natural sources of dirt, for example tree resin or pollen.

However, particularly aggressive substances (e.g. spilt fuel, oil, grease, brake fluid and bird droppings) must be removed immediately, as the paint could otherwise be affected or become discoloured. BMW Motorrad re-

commends using BMW vehicle polish or BMW paint cleaner for this purpose.

Marks on the paintwork are particularly easy to see after the vehicle has been washed. Remove stains of this kind immediately, using cleaning-grade benzene or petroleum spirit on a clean cloth or ball of cotton wool. BMW Motorrad recommends using BMW tar remover for removing specks of tar. Remember to wax the parts treated in this way.

Laying up the motorcycle

- Clean the motorcycle.
- Fill the motorcycle's fuel tank with fuel.
- Removing battery (▶▶▶ 150).

- Spray the brake and clutch lever pivots and the main and side stand pivots with a suitable lubricant.
- Coat bright metal and chrome-plated parts with an acid-free grease (e.g. Vaseline).
- Stand the motorcycle in a dry room in such a way that there is no load on either wheel (preferably using the front-wheel and rear-wheel stands from BMW Motorrad).

Protective wax coating

If water is no longer forming beads on the paint surface, it must be waxed.

BMW Motorrad recommends applying only BMW car wax or products containing carnauba wax or synthetic wax.

Restoring motorcycle to use

- Remove the protective wax coating.
- Clean the motorcycle.
- Installing battery (▣▶ 151).
- Checklist (▣▶ 98).

Technical data

Troubleshooting chart	174
Threaded fasteners	175
Engine	177
Fuel.....	178
Engine oil	178
Clutch	179
Transmission	179
Rear-wheel drive.....	180
Running gear	180
Brakes	181
Wheels and tyres	182
Electrics	184
Frame	185
Anti-theft alarm	186
Dimensions	186

Weights.....	187
Riding specifications	187

Troubleshooting chart

Engine does not start or is difficult to start.

Possible cause	Rectification
Side stand extended and gear engaged	Retract the side stand.
Gear engaged and clutch not disengaged	Select neutral or pull the clutch lever.
No fuel in tank	Refuelling (▣▶ 105).
Battery flat	Charge battery when connected (▣▶ 149).

Threaded fasteners

Front wheel	Value	Valid
Brake caliper on telescopic fork		
M10 x 65	38 Nm	
Clamping screw for quick-release axle in telescopic fork		
M8 x 35	19 Nm	
Wheel-speed sensor to fork leg		
M6 x 16 Micro-encapsulated or medium-strength thread-locking compound	8 Nm	
Quick-release axle in telescopic forks		
M12 x 20	30 Nm	
Rear wheel	Value	Valid
Rear wheel to wheel flange		
M10 x 1.25 x 40	Tighten in diagonally opposite sequence	
	60 Nm	

Exhaust system	Value	Valid
Silencer to footrest bracket		
M8 x 35	19 Nm	
Clamp to silencer and exhaust manifold		
	22 Nm	
Mirror arm	Value	Valid
Mirror to holder		
M6 x 50	8 Nm	

Engine

Location of engine number	Crankcase, bottom right, below starter motor
Engine type	122EN
Engine design	Air-/liquid-cooled two-cylinder four-stroke opposed-twin engine with two overhead spur-gear-driven camshafts and one balancing shaft
Displacement	1170 cm ³
Cylinder bore	101 mm
Piston stroke	73 mm
Compression ratio	12.5:1
Nominal output	92 kW, at engine speed: 7750 min ⁻¹
– with power reduction ^{OE}	79 kW, at engine speed: 7750 min ⁻¹
Torque	125 Nm, at engine speed: 6500 min ⁻¹
– with power reduction ^{OE}	122 Nm, at engine speed: 5250 min ⁻¹
Maximum engine speed	max 9000 min ⁻¹
Idle speed	1150 min ⁻¹ , Engine at regular operating temperature

Fuel

Recommended fuel grade	Super unleaded (max. 10 % ethanol, E10) 95 ROZ/RON 89 AKI
Usable fuel capacity	approx. 25 l
Reserve fuel	approx. 4 l
Exhaust emissions standard	EU 3

Engine oil

Engine oil, capacity	max 4 l, with filter change
Specification	SAE 5W-40, API SL / JASO MA2, Additives (e.g. molybdenum-based) are not permissible because they can attack coated components of the engine, BMW Motorrad recommends BMW Motorrad ADVANTEC Ultimate oil
Engine oil, quantity for topping up	max 0.95 l, Difference between MIN and MAX

Clutch

Clutch type	Multiplate oil-bath clutch, anti-hopping
-------------	--

Transmission

Gearbox type	dog-shifted six-speed gearbox with bevel gearing
Gearbox transmission ratios	1.000 (60:60 teeth), Primary transmission ratio 1.650 (33:20 teeth), Transmission input ratio 2.438 (39:16 teeth), 1st gear 1.714 (36:21 teeth), 2nd gear 1.296 (35:27 teeth), 3rd gear 1.059 (36:34 teeth), 4th gear 0.943 (33:35 teeth), 5th gear 0.848 (28:33 teeth), 6th gear 1.061 (35:33 teeth), Transmission output ratio

Rear-wheel drive

Type of final drive	Shaft drive with bevel gears
Type of rear suspension	Cast aluminium single swinging arm with BMW Motorrad paralever
Gear ratio of final drive	2.75 (33/12 teeth)

Running gear

Front wheel

Type of front suspension	BMW Telelever, with anti-dive top fork bridge, leading link mounted on engine and telescopic forks, central spring strut supported by leading link and frame
Design of front wheel suspension	Central shock absorber with helical spring
– with Dynamic ESA ^{OE}	Central shock absorber complete with torsion spring and header tank, electrically adjustable decompression and compression-stage damping
Spring travel, front	120 mm, at wheel

Rear wheel

Type of rear suspension	Cast aluminium single swinging arm with BMW Motorrad paralever
Type of rear suspension	Central spring strut with coil spring, adjustable rebound stage damping and spring preload
– with Dynamic ESA ^{OE}	Central spring strut with coil spring and reservoir, electrically adjustable rebound-stage and compression-stage damping, electrically adjustable spring preload
Spring travel at rear wheel	135 mm

Brakes

Type of front brake	Hydraulically actuated twin-disc brake with 4-piston radial monobloc calipers and floating brake discs
Brake-pad material, front	Sintered metal
Brake disc thickness, front	min 4 mm, Wear limit
Play of brake controls (Front brake)	approx. 1.85 mm, at piston
Type of rear brake	Hydraulically actuated disc brake with 2-piston floating caliper and fixed disc
Brake-pad material, rear	Organic material

Brake disc thickness, rear	min 4.5 mm, Wear limit
Play of brake controls (Rear brake)	approx. 1 mm, at piston

Wheels and tyres

Recommended tyre sets	Your authorised BMW Motorrad dealer will be happy to supply an up-to-date list of the approved wheel/tyre combinations, or you can check the information posted on the bmw-motorrad.com website.
Speed category, front/rear tyres	W, required at least: 270 km/h

Front wheel

Front wheel type	Aluminium cast wheel
Front wheel rim size	3.5" x 17"
Tyre designation, front	120/70 - 17
Load index, front tyre	min. 52
Permissible front-wheel imbalance	max 5 g
Wheel load, front, at unladen weight	139 kg
Permissible wheel load, front	max 177 kg
Permissible front-wheel imbalance	max 5 g

Rear wheel

Rear-wheel type	Aluminium cast wheel
Rear wheel rim size	5.5" x 17"
Tyre designation, rear	180/55 - 17
Load index, rear tyre	min. 70
Permissible rear-wheel imbalance	max 45 g
Wheel load, rear, at unladen weight	135 kg
Permissible wheel load, rear	max 318 kg

Tyre pressures

Tyre pressure, front	2.5 bar, tyre cold
Tyre pressure, rear	2.9 bar, tyre cold

Electrics

Electrical rating of on-board sockets	max 10 A, Total for all sockets
Fuse box	15 A, Slot 1: Instrument cluster, alarm system (DWA), ignition lock, diagnostic socket, topcase light 7.5 A, Slot 2: Multifunction switch left, tyre pressure control (RDC), audio system
Fuse holder	50 A, Fuse 1: Voltage regulator
Battery	
Battery type	AGM (Absorbent Glass Mat) battery
Battery rated voltage	12 V
Battery rated capacity	16 Ah
Spark plugs	
Spark plugs, manufacturer and designation	NGK LMAR8D-J
Electrode gap of spark plug	0.8±0.1 mm, when new 1.0 mm, Wear limit

Lighting

Bulb for high-beam headlight	H1 / 12 V / 55 W
Bulbs for the low-beam headlight	H7 / 12 V / 55 W
Bulb for parking light	W5W / 12 V / 5 W
– with daytime running light ^{OE} or – with Pro Headlight ^{OE}	Lighting rings, integrated into headlight
Bulb for tail light/brake light	LED
Bulbs for flashing turn indicators, front	LED
Bulbs for flashing turn indicators, rear	LED

Frame

Frame type	Tubular steel frame with load-bearing drive unit, aluminium rear frame
Type plate location	Frame, front right (beside spring strut)
Position of the Vehicle Identification Number	Frame, front right, on steering head

Anti-theft alarm

– with alarm system (DWA)^{OE}

Activation time on arming	approx. 30 s
Alarm duration	approx. 26 s
Battery type	CR 123 A

Dimensions

Length of motorcycle	2185 mm
Height of motorcycle	1405 mm, At DIN unladen weight
Width of motorcycle	980 mm, across mirrors
Front-seat height	805...825 mm, Without rider at unladen weight
– with front seat, low ^{OE}	760...780 mm, Without rider at unladen weight
– with front seat, high ^{OE}	830...850 mm, Without rider at unladen weight
Rider's inside-leg arc, heel to heel	1810...1850 mm, Without rider at unladen weight
– with front seat, low ^{OE}	1740...1780 mm, Without rider at unladen weight
– with front seat, high ^{OE}	1875...1915 mm, Without rider at unladen weight

Weights

Unladen weight	274 kg, DIN unladen weight, ready for road 90 % load of fuel, without OE
Permissible gross weight	495 kg
Maximum payload	221 kg, without OE

Riding specifications

Starting capability on uphill gradients (at permissible gross weight)	20 %
Top speed	>200 km/h

Service

BMW Motorrad Service	190
BMW Motorrad Mobility services	190
Maintenance work	190
Maintenance schedule	193
Standard BMW service	194
Confirmation of maintenance work	195
Confirmation of service	200

BMW Motorrad Service

BMW Motorrad has an extensive network of dealerships in place to look after you and your motorcycle in more than 100 countries. Authorised BMW Motorrad dealerships have the technical information and the technical know-how to reliably carry out all maintenance and repair work on your BMW.

Visit our website

www.bmw-motorrad.com

to find out where the nearest authorised BMW Motorrad dealership is located.



WARNING

Maintenance and repair work not in compliance with correct procedure.

Risk of accident due to subsequent damage.

- BMW Motorrad recommends you to have all the associated

work on your motorcycle carried out by a specialist workshop, preferably an authorised BMW Motorrad dealer. ◀

In order to help ensure that your BMW is always in optimum condition, BMW Motorrad recommends compliance with the maintenance intervals specified for your motorcycle. Have all maintenance and repair work that is carried out confirmed in the "Service" chapter in this manual. For generous treatment of claims submitted after the warranty period has expired, evidence of regular maintenance is essential.

Your authorised BMW Motorrad dealer can provide information on BMW services and the work undertaken as part of each service.

BMW Motorrad Mobility services

As owner of a new BMW motorcycle, in circumstances in which assistance is required you can benefit from the protection afforded by the various BMW Motorrad mobility services (e.g. Mobile Service, breakdown service, vehicle recovery service). Your authorised BMW Motorrad dealer will be happy to provide information about the mobility services available to you.

Maintenance work

BMW Pre-delivery Check

Your authorised BMW Motorrad dealer conducts the BMW pre-delivery check before handing over the vehicle to you.

BMW Running-in Check

The BMW running-in check has to be performed when the vehicle has covered between 500 km and 1200 km.

BMW Service

The BMW Service is carried out once a year; the extent of servicing can vary, depending on the age of the vehicle and the distance it has covered. Your authorised BMW Motorrad dealer confirms that the service work has been carried out and enters the date when the next service will be due.

Riders who cover long distances in a year might have to bring in their vehicles for service before the next scheduled date. It is to allow for these cases that a maximum odometer reading is entered as well in the confirmation of service. Servicing has to be brought forward if this odo-

meter reading is reached before the next scheduled date for the service.

The service-due indicator in the multifunction display reminds you about one month or 1000 km in advance when the time for a service is approaching, on the basis of the programmed values.

To find out more about service go to:

bmw-motorrad.com/service

The maintenance tasks necessary for your vehicle are set out in the maintenance schedule below:

Maintenance schedule

- 1** BMW Running-in check
- 2** Standard BMW service
( 194)
- 3** Engine-oil change, with filter
- 4** Oil change in bevel gears
- 5** Checking valve clearance
- 6** Replace all spark plugs
- 7** Replacing air-filter element
- 8** Change brake fluid, entire system
 - a annually or every 10,000 km (whichever comes first)
 - b every 2 years or every 20,000 km (whichever comes first)
 - c for the first time after one year, then every two years

Standard BMW service

A standard BMW service consists of the following maintenance work:

- Perform vehicle test with the BMW Motorrad diagnosis system.
 - Visually inspect the hydraulic clutch system.
 - Visually inspect the brake pipes, brake hoses and connections.
 - Check the front and rear brake pads and brake discs for wear.
 - Check the front and rear brake-fluid levels.
 - Check the coolant level.
 - Check the ease of movement of the side stand.
 - Check the ease of movement of the centre stand.
 - Check the tyre pressures and tread depth.
 - Check the lights and signalling equipment.
- Check that the engine start suppression system is in working order.
 - Perform final inspection and check of roadworthiness.
 - Set the service-due date and service countdown distance.
 - Check the battery charge state.
 - Confirm BMW service in the on-board documentation.

Confirmation of maintenance work

BMW Pre-delivery Check

Completed

on _____

Stamp, signature

BMW Running-in Check

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature

BMW Service

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature**BMW Service**

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature**BMW Service**

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature

BMW Service

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature**BMW Service**

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature**BMW Service**

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature

BMW Service

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature**BMW Service**

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature**BMW Service**

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature

BMW Service

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature**BMW Service**

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature**BMW Service**

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature

Confirmation of service

The table is intended as a record of maintenance and repair work, the installation of optional accessories and, if appropriate, special campaign (recall) work.

Item	Odometer reading	Date

Item	Odometer reading	Date

Appendix

Certificate for electronic immobiliser	204
Certificate for remote control	206
Certificate for Keyless Ride	210
Certificate for tyre pressure monitoring (Reifendruck-Control, RDC)	212

FCC Approval

Ring aerial in the ignition switch



To verify the authorization of the ignition key, the electronic immobilizer exchanges information with the ignition key via the ring aerial.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. ◀

Approbation de la FCC

Antenne annulaire présente dans le commutateur d'allumage



Pour vérifier l'autorisation de la clé de contact, le système d'immobilisation électronique échange des

informations avec la clé de contact via l'antenne annulaire.

Le présent dispositif est conforme à la partie 15 des règles de la FCC. Son utilisation est soumise aux deux conditions suivantes :

- (1) Le dispositif ne doit pas produire d'interférences nuisibles, et
- (2) le dispositif doit pouvoir accepter toutes les interférences extérieures, y compris celles qui pourraient provoquer une activation inopportune.



Toute modification qui n'aurait pas été approuvée expressément par l'organisme responsable de l'homologation peut annuler l'autorisation accordée à l'utilisateur pour utiliser le dispositif. ◀

Certifications

Remote Control for central locking system



Česky

Meta System S.p.A. tímto prohlašuje, že tento PF240009 je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.

Dansk

Undertegnede Meta System S.p.A. erklærer herved, at følgende udstyr PF240009 overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.

Deutsch

Hiermit erklärt Meta System S.p.A., dass sich das Gerät PF240009 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.

Eesti

Käesolevaga kinnitab Meta System S.p.A. seadme PF240009 vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

English

Hereby, Meta System S.p.A., declares that this PF240009 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Español

Por medio de la presente Meta System S.p.A. declara que el PF240009 cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.

Certifications

Ελληνική

ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Meta System S.p.A. ΔΗΛΩΝΕΙ ΟΤΙ PF240009 ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.

Français

Par la présente Meta System S.p.A. déclare que l'appareil PF240009 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

Italiano

Con la presente Meta System S.p.A. dichiara che questo PF240009 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

Latviski

Ar šo Meta System S.p.A. deklarē, ka PF240009 atbilst Direktīvas 1999/5/ΕΚ būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.

Lietuvių

Šiuo Meta System S.p.A. deklaruoja, kad šis PF240009 atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.

Nederlands

Hierbij verklaart Meta System S.p.A. dat het toestel PF240009 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.

Malti

Hawnhekk, Meta System S.p.A., jiddikjara li dan PF240009 jikkonforma mal-ħtiġijiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Dirrettiva 1999/5/EC.

Magyar

Alulírott, Meta System S.p.A. nyilatkozom, hogy a PF240009 megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.

Polski

Niniejszym Meta System S.p.A. oświadcza, że PF240009 jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.

Português

Meta System S.p.A. declara que este PF240009 está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

Certifications

Slovensko

Meta System S.p.A. izjavlja, da je ta PF240009 v skladi z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.

Slovensky

Meta System S.p.A. týmto vyhlasuje, že PF240009 spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.

Suomi

Meta System S.p.A. vakuuttaa täten että PF240009 tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

Svenska

Härmed intygar Meta System S.p.A. att denna PF240009 står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

Íslenska

Hér með lýsir Meta System S.p.A. yfir því að PF240009 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.

Norsk

Meta System S.p.A. erklærer herved at utstyret PF240009 er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.

USA, Canada

Product name: TX BMW MR FCC ID: P3098400 IC:4429A - TXBMWMR

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Declaration Of Conformity

R&TTE Declaration Of Conformity (DoC)

CE0470

We:

Meta System S.p.A.

with the address:

Via Majakovskij 10 b/c/d/e
42124 Reggio Emilia -Italy

Declare

Under own responsibility that the product:

TX BMW MR

To which this declaration relates is in conformity with the essential requirements and other relevant requirements of the R&TTE Directive (1999/5/EC).

This product is in conformity with the following standards:

Health & Safety (art.3.1)

EN 60950-1

EMC (art.3.2)

ETSI EN 301 489-1/-3

Spectrum

ETSI EN 300 220 - 2

Human exposure

EN 62311

According to Directive 1999/5/CE

Reggio Emilia , 14/07/2010

Technical Director
Lasagni Cesare



Certifications

BMW Keyless Ride ID Device



USA, Canada

Product name: BMW Keyless Ride ID Device
FCC ID: YGOHUF5750
IC: 4008C-HUF5750

Canada:

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

USA:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Declaration Of Conformity

We declare under our responsibility that the product


BMW Keyless Ride ID Device (Model: HUF5750)

complies with the appropriate essential requirements of the article 3 of the R&TIE and the other relevant provisions, when used for its intended purpose. Applied Standards:

1. Health and safety requirements contained in article 3 (1) a)
 - EN 60950-1:2006+A11:2009+A1:2010+A12:2011; Information technology equipment- Safety
2. Protection requirements with respect to electromagnetic compatibility article 3 (1) b)
 - EN 301 489-1 (V1 .9.2, 09/2011), Electromagnetic compatibility and radio spectrum matters (ERM); Electromagnetic compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements
 - EN 301 489-3 (V1.4.1, 08/2002) Electromagnetic compatibility and radio spectrum matters (ERM); Electromagnetic compatibility (EMC) standard for radio equipment and services; Part 3: Specific conditions for short range devices (SRD) operating on frequencies between 9 kHz and 40 GHz
3. Means of the efficient use of the radio frequency spectrum article 3 (2)
 - EN 300 220-1 & -2 (V2.4.1, 05/2012), electromagnetic compatibility and radio spectrum matters (ERM); Short range devices (SRD); Radio equipment to be used in the 25 MHz to 1000 MHz frequency range with power levels ranging up to 500 mW;
Part 1: Technical characteristics and test methods.
Part 2: Harmonized EN covering essential requirements under article 3.2 of the R&TIE directive

The product is labeled with the CE marking: **CE**

Velbert, October 15th, 2013

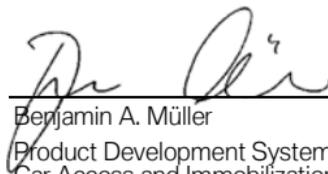

Benjamin A. Müller
Product Development Systems
Car Access and Immobilization – Electronics
Huf Hülbeck & Fürst GmbH & Co. KG
Steeger Straße 17, D-42551 Velbert

Certification Tire Pressure Control (TPC)

FCC ID: MRXBC54MA4
IC: 2546A-BC54MA4

FCC ID: MRXBC5A4
IC: 2546A-BC5A4

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

- A**
- Abbreviations and symbols, 6
 - ABS
 - Engineering details, 114
 - Self-diagnosis, 100
 - Warnings, 37
 - Accessories
 - General instructions, 156
 - Actuality, 7
 - Ambient temperature
 - Outside temperature warning, 32
 - Reading, 41
 - Anti-theft alarm
 - Operation, 86
 - Warning, 35
 - ASC
 - Control, 15
 - Engineering details, 117
 - Operation, 67
 - Self-diagnosis, 101
 - Warning, 37
 - Auxiliary headlights
 - Operation, 64
- Average values
- Resetting, 60
- B**
- Battery
- Charging battery when connected, 149
 - Charging battery when disconnected, 150
 - Indicator light for battery charge voltage, 36
 - Installation, 151
 - Maintenance instructions, 149
 - Removal, 150
 - Technical data, 184
 - Warning for battery voltage low, 36
- Brake fluid
- Checking fluid level, front, 126
 - Checking fluid level, rear, 127
 - Reservoir, front, 13
 - Reservoir, rear, 13

- Brake pads
- Checking front, 124
 - Checking rear, 125
 - Running in, 102
- Brakes
- Adjusting handlebar lever, 75
 - Checking function, 124
 - Safety instructions, 103
 - Technical data, 181
- C**
- Cases
- Operation, 160
- Central locking
- Operation, 82
 - Warning for lock status, 41
- Checklist, 98
- Clock
- adjusting, 59
- Clutch
- Adjusting handlebar lever, 75
 - Checking function, 130
 - Fluid reservoir, 11
 - Technical data, 179
- Confirmation of maintenance work, 195

- Coolant
 - Checking fill level, 128
 - Fill-level indicator, 13
 - Topping up, 129
 - Warning for overtemperature, 33
- Cruise-control system
 - Control, 15
 - Operation, 69
- D**
- Damping
 - adjusting, 72
- Date
 - adjusting, 59
- Daytime riding lights
 - automatic daytime running light, 65
 - Manual daytime running light, 64
- Dimensions
 - Technical data, 186
- DWA
 - Telltale light, 18
- E**
- Electrics
 - Technical data, 184
- Emergency off switch (kill switch), 17
 - Operation, 62
- Engine
 - starting, 98
 - Technical data, 177
 - Warning for engine electronics, 34
- Engine oil
 - Checking fill level, 123
 - Filler neck, 13
 - Oil dipstick, 13
 - Oil level, 42
 - Technical data, 178
 - Topping up, 123
 - Warning for engine oil level, 33
- Equipment, 7
- ESA
 - Control, 15
 - Engineering details, 120
 - Operation, 73
- F**
- Frame
 - Technical data, 185
- Front seat
 - Adjusting seat height, 91
 - Height adjuster, 14
 - Installation, 90
 - Lock, 11
 - Removal, 90
- Front-wheel stand
 - Installing, 139
- Fuel
 - Filler neck, 11
 - Fuel grade, 105
 - Refuelling, 105
 - refuelling with Keyless Ride, 107
 - Technical data, 178
- Fuel reserve
 - Range, 42
 - Warning, 41
- Fuses
 - Position on the vehicle, 14
 - Replacing, 153
 - Technical data, 184

G

- General views
 - Instrument panel, 18
 - Left multifunction switch, 15
 - Left side of vehicle, 11
 - Multifunction display, 24
 - Right multifunction switch, 17
 - Right side of vehicle, 13
 - Underneath the seat, 14
 - Warning and telltale lights, 22

H

- Hazard warning flashers
 - Control, 15
 - Operation, 67
- Headlight
 - Beam throw, 62
- Heated handlebar grips
 - Operation, 77
- Hill Start Control, 114
 - Engineering details, 111
 - Hill Start Control, 76
 - Operation, 76
- Horn, 15

I

- Ignition
 - Switching off, 48
 - Switching on, 48
- Immobiliser
 - Emergency key, 51
 - Spare key, 48
 - Warning, 32
- Instrument panel
 - adjusting, 80
 - Ambient-light brightness sensor, 18
 - Overview, 18

J

- Jump-start, 147

K

- Keyless Ride
 - Battery of the radio-operated key is empty, 52
 - Electronic immobiliser EWS, 51
 - Fuel filler cap, unlocking, 107
 - Lock the handlebars, 50
 - Loss of the radio-operated key, 52

- Switching off ignition, 51
 - Switching on ignition, 50
 - Warning, 32, 33
- Keys, 47, 49

L

- Lighting
 - LED auxiliary headlights, replacing, 147
 - LED rear light, replacing, 147
 - Replacing bulb for high-beam headlight, 142
 - Replacing bulb for low-beam headlight, 140
 - Replacing bulb for parking light, 144
 - Technical data, 185
 - Warning for bulb failure, 35
 - Waveguide rings, replacing, 147
- Lights
 - automatic daytime running light, 65
 - Control, 15
 - Headlight flasher, 63

- High-beam headlight, 63
- Low-beam headlight, 63
- Manual daytime running light, 64
- Parking lights, 63
- Side light, 63
- Luggage
 - Instructions for loading, 96
- M**
- Maintenance
 - General instructions, 122
 - Maintenance schedule, 193
- Maintenance intervals, 190
- Mirrors
 - adjusting, 80
- Mobility services, 190
- Motorcycle
 - Care, 167
 - Cleaning, 167
 - Lashing, 108
 - Laying up, 170
 - Parking, 104
- Multifunction display, 18
 - Control, 15
 - Meaning of symbols, 25
 - Operation, 55
 - Overview, 24
 - Settings, 59
- Multifunction switch
 - General view, left side, 15
 - General view, right side, 17
- N**
- Navigation devices
 - Installation, 157
 - Operation, 159
 - Removal, 158
- O**
- Odometer and tripmeters
 - Operation, 61
- On-board computer
 - Operation, 59
- P**
- Parking, 104
- Power socket
 - Notes on use, 156
 - Position on the vehicle, 13
- Pre-Ride-Check, 99
- R**
- RDC
 - Adhesive label for rim, 132
 - Engineering details, 119
 - Reading, 43
 - Warnings, 38
- Rear seat
 - Installation, 91, 92
 - Removal, 91
- Rear-wheel drive
 - Technical data, 180
- Refuelling, 105
 - with Keyless Ride, 107
- Remote control
 - registration, 83
 - Replacing battery, 54, 85
 - synchronising, 84
- Rev. counter, 18
- Riding mode
 - Adjusting, 68
 - Engineering details, 111

Running gear
 Technical data, 180
Running in, 101

S

Safety instructions
 for brakes, 103
 For riding, 96
Seat heating
 Control, 11
 Operation, 77
Service, 190
 Warning, 41
Shift assistant, 102, 113
Shifting gear
 Engineering details, 111
Silencer
 Securing silencer, 138
 Silencer, swinging out, 137
Spark plugs
 Technical data, 184
Speedometer, 18
Spring preload
 adjusting, 71

Starting, 98
 Control, 17
Steering lock
 Locking, 47
Stowage compartment
 Operation, 81
 Position on the vehicle, 11, 13
Symbols
 Meaning, 25

T

Technical data
 Battery, 184
 Brakes, 181
 Bulbs, 185
 Clutch, 179
 Dimensions, 186
 Electrics, 184
 Engine, 177
 Engine oil, 178
 Frame, 185
 Fuel, 178
 Rear-wheel drive, 180
 Running gear, 180
 Spark plugs, 184
Standards, 7
Transmission, 179
Weights, 187
Wheels and tyres, 182
Telltale lights, 18
 Overview, 22
Toolkit
 Contents, 122
 Position on the vehicle, 14
Topcase
 Operation, 162
Torques, 175
Transmission
 Technical data, 179
Troubleshooting chart, 174
Turn indicators
 Control, 15
 Operation, 66
Type plate
 Position on the vehicle, 13
Tyres
 Checking inflation pressure, 77
 Checking tread depth, 130
 Pressures, 183
 Recommendation, 131

- Running in, 102
 - Technical data, 182
 - Top speed, 97
- V**
- Vehicle
 - Restoring to use, 171
 - Vehicle Identification Number
 - Position on the vehicle, 13
- W**
- Warning lights, 18
 - Overview, 22
 - Warnings
 - ABS, 37
 - Anti-theft alarm, 35
 - ASC, 37
 - Battery charge voltage, 36
 - Bulb defect, 35
 - Central locking, 41
 - Coolant temperature, 33
 - Engine electronics, 34
 - Engine oil level, 33
 - Fuel reserve, 41
 - Immobiliser, 32
 - Mode of presentation, 26
 - Outside temperature warning, 32
 - RDC, 38
 - Service, 41
 - Undervoltage, 36
 - Warnings, overview, 28
 - Weights
 - Technical data, 187
 - Wheels
 - Change of size, 131
 - Checking rims, 130
 - Installing front wheel, 134
 - Installing the rear wheel, 136
 - Removing front wheel, 132
 - Removing rear wheel, 136
 - Technical data, 182
 - Windscreen
 - adjusting, 80
 - Control, 15

Details described or illustrated in this booklet may differ from the vehicle's actual specification as purchased, the accessories fitted or the national-market specification. No claims will be entertained as a result of such discrepancies.

Dimensions, weights, fuel consumption and performance data are quoted to the customary tolerances.

The right to modify designs, equipment and accessories is reserved.

Errors and omissions excepted.

© 2015 Bayerische Motoren Werke Aktiengesellschaft
80788 Munich, Germany
Not to be reproduced by any means whatsoever, wholly or in part, without the written permission of BMW Motorrad, After Sales.

Original rider's manual, printed in Germany.

Important data for refuelling:

Fuel

Recommended fuel grade	Super unleaded (max. 10 % ethanol, E10) 95 ROZ/RON 89 AKI
------------------------	---

Usable fuel capacity	approx. 25 l
----------------------	--------------

Reserve fuel	approx. 4 l
--------------	-------------

Tyre pressures

Tyre pressure, front	2.5 bar, tyre cold
----------------------	--------------------

Tyre pressure, rear	2.9 bar, tyre cold
---------------------	--------------------

For further information on all aspects of your motorcycle, visit
bmw-motorrad.com

